
REAR DOOR BELT MOULDING

COMPONENTS

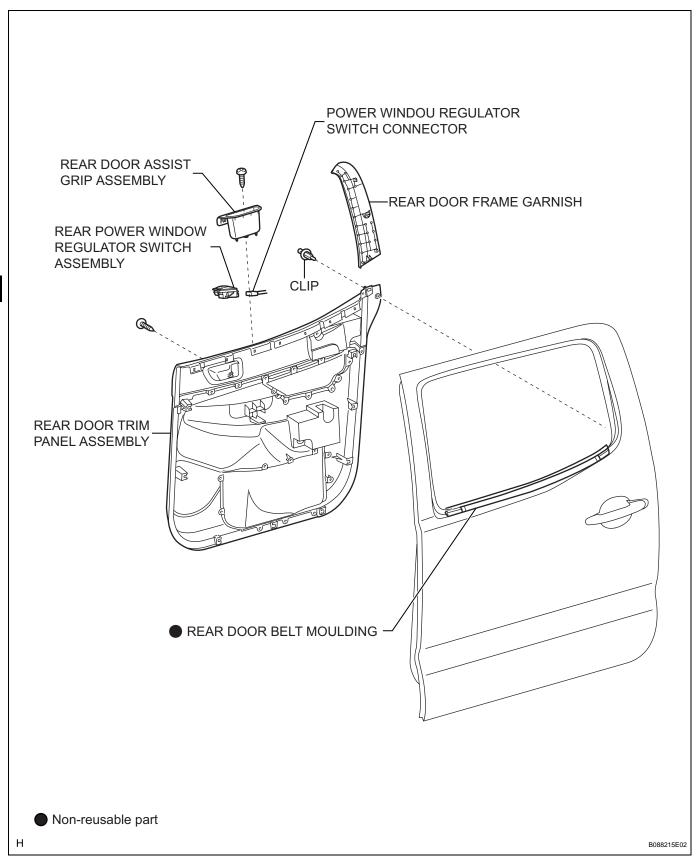

ΕT


REMOVAL

- 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
- 2. REMOVE REAR DOOR FRAME GARNISH (See page ED-68)
- 3. REMOVE REAR POWER WINDOW REGULATOR SWITCH ASSEMBLY (See page ED-68)
- 4. REMOVE REAR DOOR TRIM PANEL ASSEMBLY (See page ED-68)



- (a) Apply protective tape to the outer circumference of the rear door belt moulding.
- (b) Using a moulding remover, disengage the 6 claws and remove the rear door belt moulding.



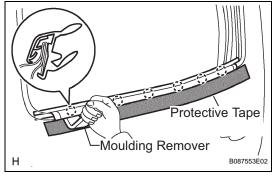

INSTALLATION

- 1. INSTALL REAR DOOR BELT MOULDING
 - (a) Engage the 6 claws and install a new front door belt molding.
- 2. INSTALL REAR DOOR TRIM PANEL ASSEMBLY (See page ED-81)
- 3. INSTALL REAR POWER WINDOW REGULATOR SWITCH ASSEMBLY (See page ED-81)
- 4. INSTALL REAR DOOR FRAME GARNISH (See page ED-81)
- 5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

