


## REAR BODY SIDE PANEL PROTECTOR

### REMOVAL

1. **REMOVE REAR BODY SIDE PANEL PROTECTOR**
  - (a) Apply protective tape to the outer circumference of the rear body side panel protector.
  - (b) Remove the 2 clips.
  - (c) for Long Body:
    - (1) Using a moulding remover, disengage the 22 claws and remove the rear body side panel protector.
  - (d) for Short Body:
    - (1) Using a moulding remover, disengage the 18 claws and remove the rear body side panel protector.

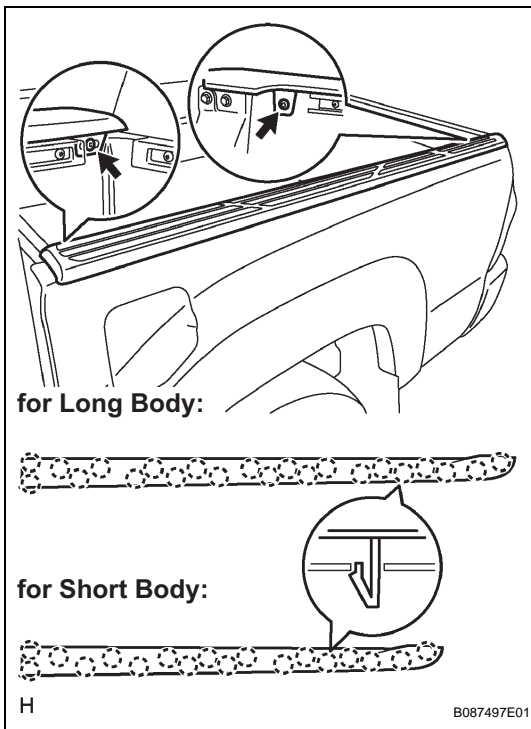

### INSTALLATION

1. **INSTALL REAR BODY SIDE PANEL PROTECTOR**
  - (a) for Long Body:
    - (1) Engage the 22 claws and install the rear body side panel protector.
  - (b) for Short Body:
    - (1) Engage the 18 claws and install the rear body side panel protector.
  - (c) Install the 2 clips.