


FRONT FLOOR FOOTREST

REMOVAL

1. **REMOVE FRONT FLOOR FOOTREST**
 - (a) Disengage the 2 clips and remove the front floor footrest.

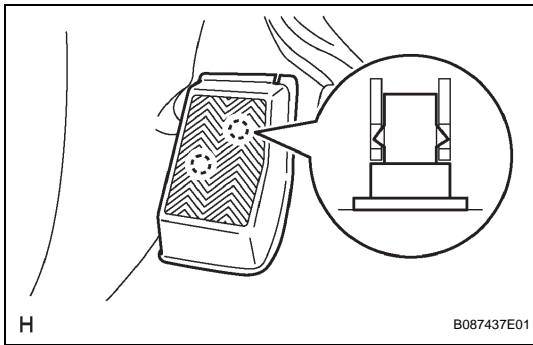

INSTALLATION

1. **INSTALL FRONT FLOOR FOOTREST**
 - (a) Engage the 2 clips and install the front floor footrest.

