


REMOVAL

CAUTION:

Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (See page [RS-1](#)).

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.
2. **REMOVE INNER REAR VIEW MIRROR ASSEMBLY (w/ EC Mirror) (See page [IR-11](#))**
3. **REMOVE FRONT FLOOR FOOTREST (See page [IR-1](#))**

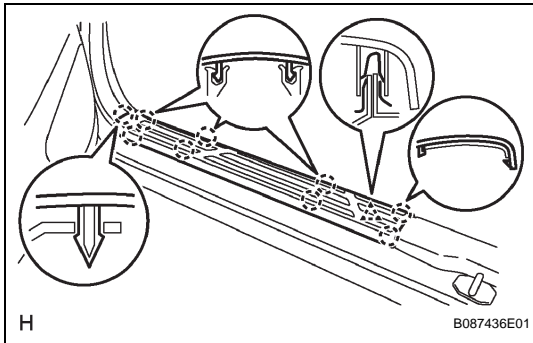


4. **REMOVE FRONT DOOR SCUFF PLATE LH**
(a) Disengage the 9 claws and clip, and remove the front door scuff plate.

5. **REMOVE FRONT DOOR SCUFF PLATE RH**

HINT:

Follow the same procedures as for the front door scuff plate LH.

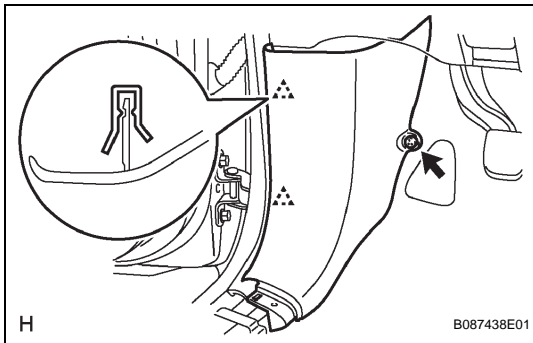

6. **REMOVE COWL SIDE TRIM BOARD LH**


(a) Remove the clip.

(b) Disengage the 2 clips and remove the cowl side trim board.

7. **REMOVE COWL SIDE TRIM BOARD RH**

HINT:

Follow the same procedures as for the cowl side trim board LH.

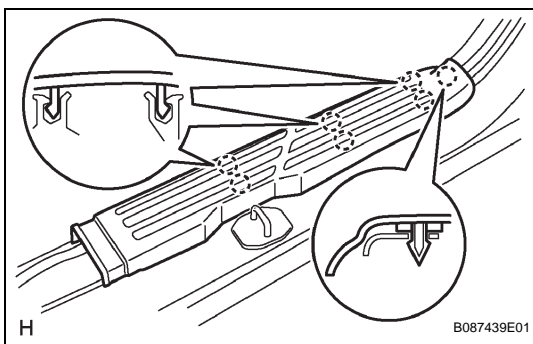


8. **REMOVE REAR DOOR SCUFF PLATE LH**

(a) Disengage the 7 claws and remove the rear door scuff plate.

9. **REMOVE REAR DOOR SCUFF PLATE RH**

HINT:

Follow the same procedures as for the rear door scuff plate LH.

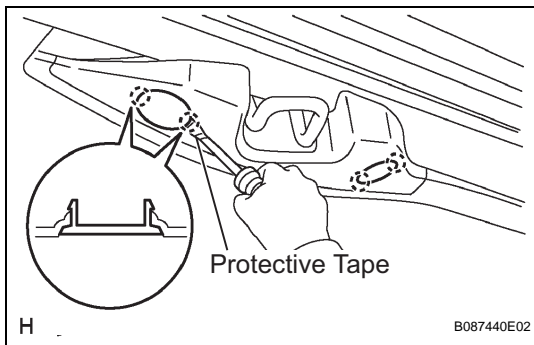**10. REMOVE ROOF SIDE INNER GARNISH COVER LH**

HINT:


Follow the same procedures as for the opposite side.

- (a) Using a screwdriver with its tip taped in protective tape, disengage the 2 claws and remove the roof side inner garnish cover.

11. REMOVE ROOF SIDE INNER GARNISH COVER RH

HINT:

Follow the same procedures as for the roof side inner garnish cover LH.

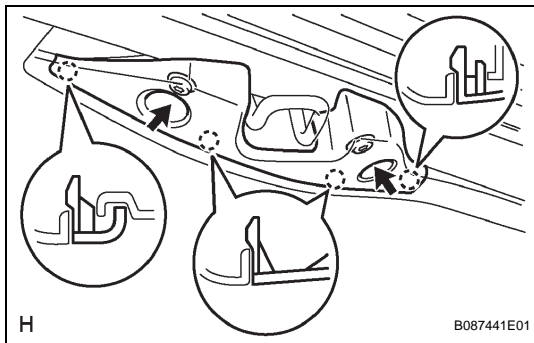**12. REMOVE ROOF SIDE INNER GARNISH CAP LH**


- (a) Using a "Torx" socket wrench T30, remove the 2 screws.

- (b) Disengage the 4 claws and remove the roof side inner garnish cap.

13. REMOVE ROOF SIDE INNER GARNISH CAP RH

HINT:

Follow the same procedures as for the roof side inner garnish cap LH.

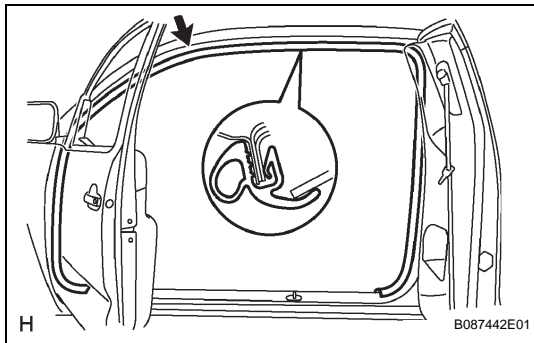
**14. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH**

- (a) Remove the front door opening trim weatherstrip.

15. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:


Follow the same procedures as for the front door opening trim weatherstrip LH.

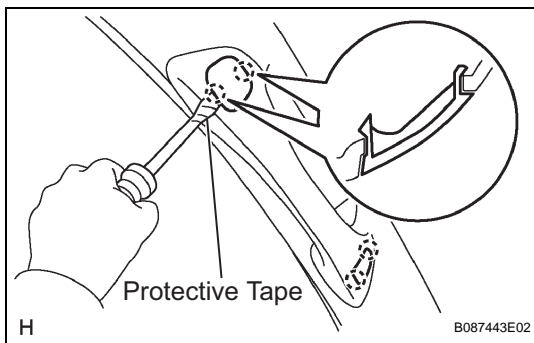**16. REMOVE FRONT PILLAR GARNISH LH**

- (a) Using a screwdriver with its tip taped in protective tape, disengage the 2 claws and remove the assist grip plug.


HINT:

Follow the same procedures as for the opposite side.

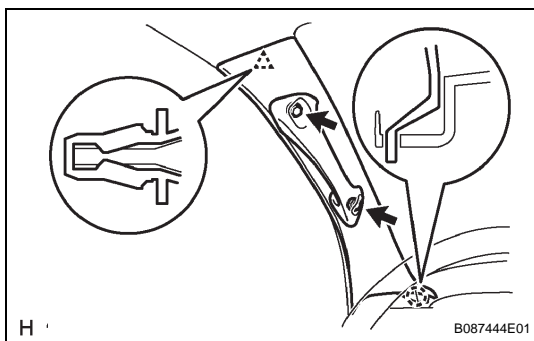

- (b) Remove the 2 screws.

- (c) Disengage the claw and clip, and remove the front pillar garnish.

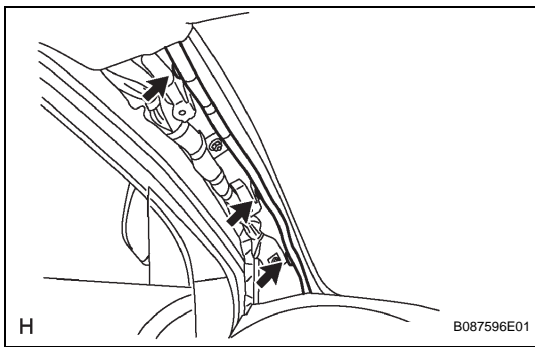

- (d) for LH Side:
 - (1) Using a clip remover, remove the 3 wire harness clamps.

17. REMOVE FRONT PILLAR GARNISH RH

HINT:

Follow the same procedures as for the front pillar garnish LH.

18. REMOVE INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake) (See page IP-9)

19. REMOVE INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake) (See page IP-9)

20. REMOVE REAR CONSOLE UPPER PANEL SUB-ASSEMBLY

(a) for Automatic Transmission:

- (1) Remove the rear console upper panel sub-assembly (See page IP-9).

(b) for Manual Transmission:

- (1) Remove the rear console upper panel sub-assembly (See page IP-9).

21. REMOVE REAR CONSOLE BOX ASSEMBLY (See page IP-10)

22. REMOVE INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission) (See page IP-10)

23. REMOVE FRONT CONSOLE BOX

(a) for Automatic Transmission:

- (1) Remove the front console box (See page IP-10).

(b) for Manual Transmission:

- (1) Remove the front console box (See page IP-11).

24. REMOVE AIR CONDITIONING CONTROL ASSEMBLY (See page IP-12)

25. REMOVE RADIO RECEIVER ASSEMBLY (See page AV-69)

26. SEPARATE HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page ED-3)

27. REMOVE INSTRUMENT LOWER PANEL FINISH PANEL (See page IP-12)

28. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page IP-12)


29. REMOVE COMBINATION METER ASSEMBLY (See page IP-13)

30. REMOVE INSTRUMENT CENTER CLUSTER FINISH PANEL SUB-ASSEMBLY (See page IP-13)

31. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page IP-13)

32. REMOVE INSTRUMENT LOWER PANEL FINISH PANEL SUB-ASSEMBLY (See page [IP-14](#))
33. REMOVE INSTRUMENT LOWER PANEL (See page [IP-14](#))
34. REMOVE INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-14](#))
35. REMOVE INSTRUMENT SIDE PANEL (See page [IP-14](#))
36. DISCONNECT PASSENGER AIRBAG CONNECTOR (See page [RS-576](#))
37. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY (See page [IP-14](#))
38. REMOVE BACK PANEL TRIM COVER


- (a) Disengage the 6 claws and remove the back panel trim cover.

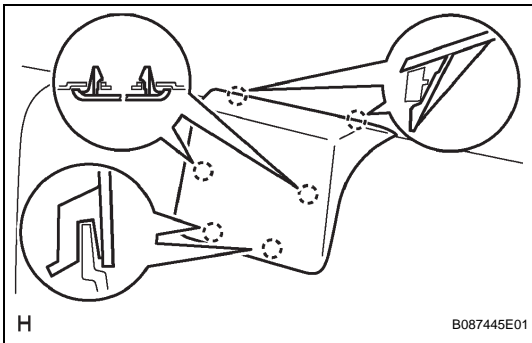

39. REMOVE REAR SEAT INNER BELT ASSEMBLY
- HINT:


Follow the same procedures as for the opposite side.


- (a) Disengage the claw and remove the buckle of the rear seat belt inner.

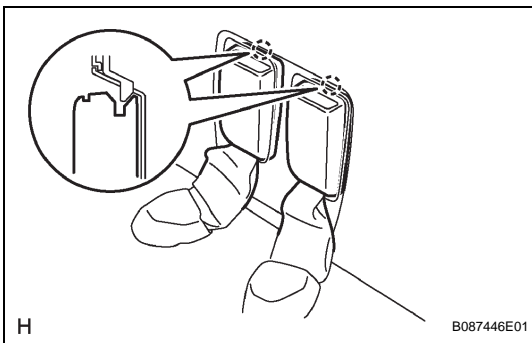

40. REMOVE BACK PANEL TRIM


- (a) Disengage the 8 claws and 14 clips, and remove the back panel trim.

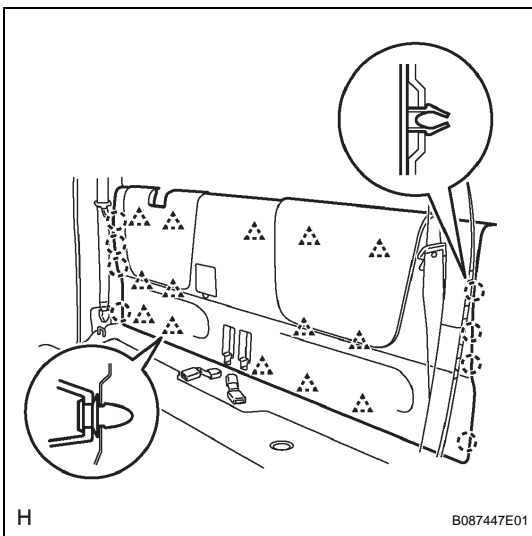

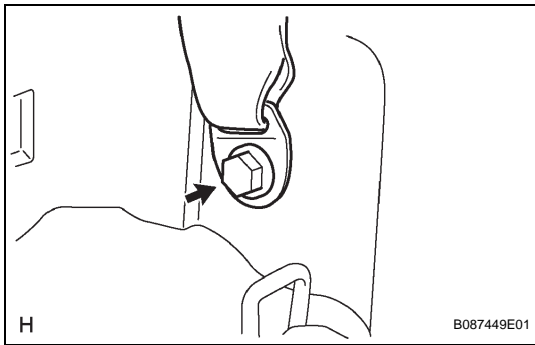

41. REMOVE QUARTER TRIM LOWER PANEL LH


- (a) Remove the bolt and floor anchor of the rear seat belt outer.

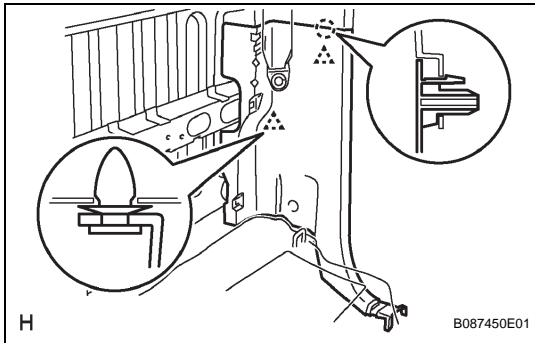

- (b) Disengage the claw and 2 clips, and remove the quarter trim lower panel.

42. REMOVE QUARTER TRIM LOWER PANEL RH

- HINT:
Follow the same procedures as for the quarter trim lower panel LH.

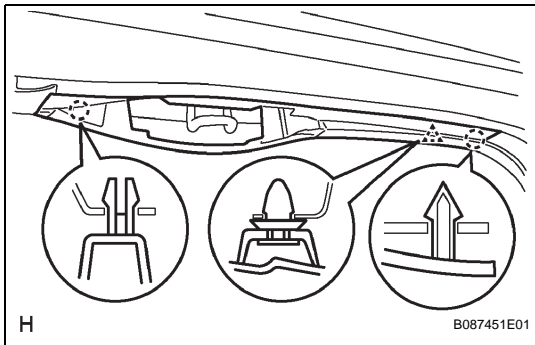


43. REMOVE ROOF SIDE INNER GARNISH LH

- (a) Disengage the 2 claws and clip, and remove the roof side inner garnish.


44. REMOVE ROOF SIDE INNER GARNISH RH

- HINT:
Follow the same procedures as for the roof side inner garnish LH.

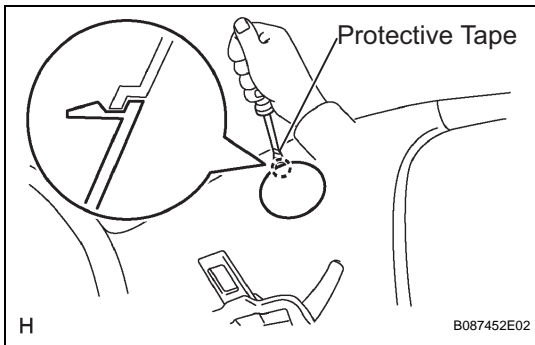

45. REMOVE QUARTER INSIDE TRIM BOARD LH


- (a) Using a screwdriver with its tip taped in protective tape, disengage the claw and open the cover.

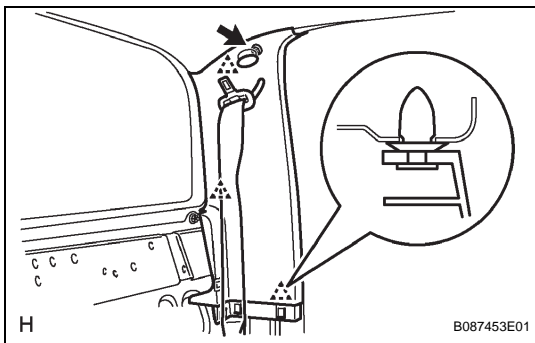

- (b) Remove the screw.
- (c) Disengage the 3 clips and remove the quarter inside trim board.


46. REMOVE QUARTER INSIDE TRIM BOARD RH

- HINT:
Follow the same procedures as for the quarter inside trim board LH.

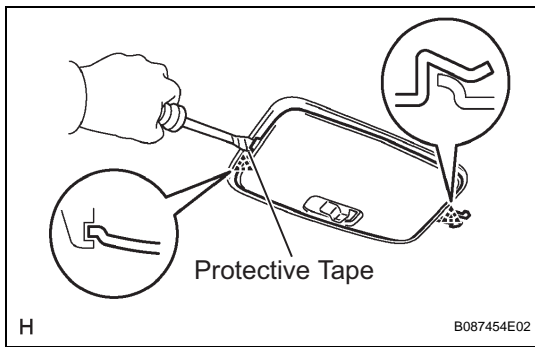


47. REMOVE ROOM LIGHT ASSEMBLY

- (a) Using a screwdriver with its tip taped in protective tape, disengage the 2 claws and remove the room light lens.

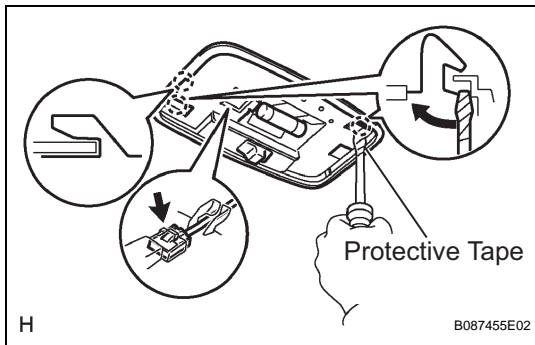


- (b) Using a screwdriver with its tip taped in protective tape, disengage the 2 claws.
- (c) Disconnect the room light connector and remove the room light.

IR

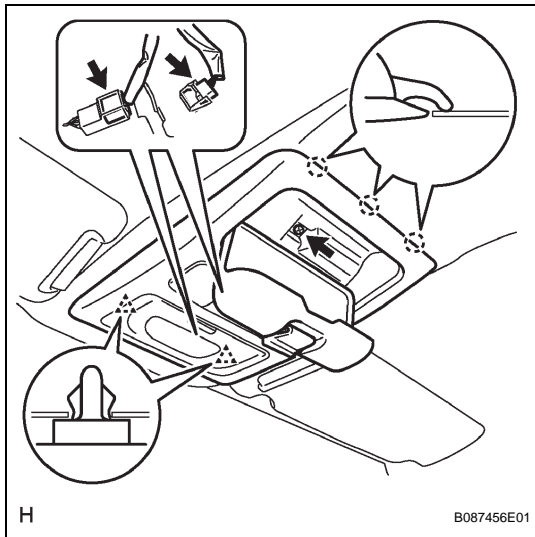


48. REMOVE ROOF CONSOLE BOX ASSEMBLY

- (a) Remove the screw.
- (b) Disengage the 2 clips and 3 claws.
- (c) Disconnect the accessory meter connector and map lamp connector, and remove the roof console box.

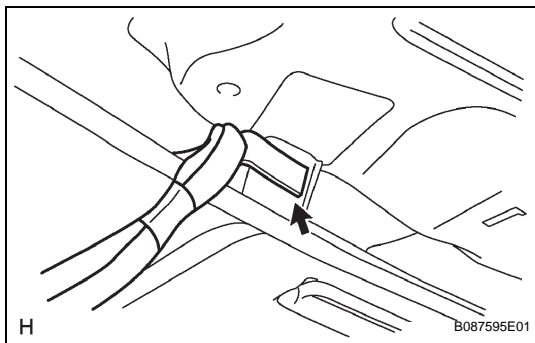

- (d) Using a clip remover, remove the wire harness clamp.

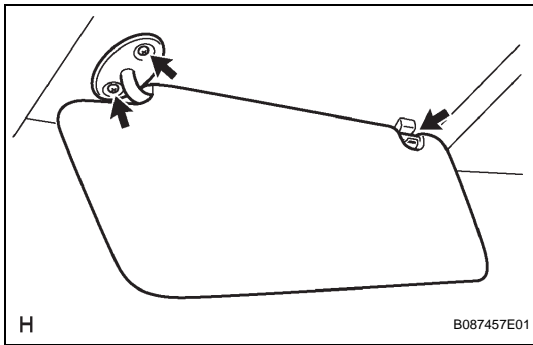


49. REMOVE VISOR ASSEMBLY LH

- (a) Remove the 2 screws.
- (b) Remove the visor from the visor holder.

50. REMOVE VISOR ASSEMBLY RH

HINT:

Follow the same procedures as for the visor assembly LH.

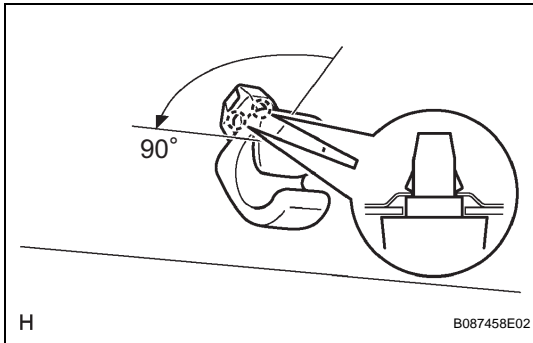


51. REMOVE VISOR HOLDER

HINT:

Follow the same procedures as for the opposite side.

- (a) Turn the visor holder 90° counterclockwise and remove it.

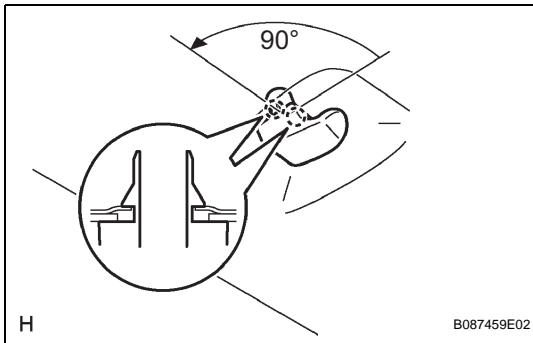


52. REMOVE COAT HOOK

HINT:


Follow the same procedures as for the opposite side.

- (a) Turn the coat hook 90° counterclockwise and remove it.

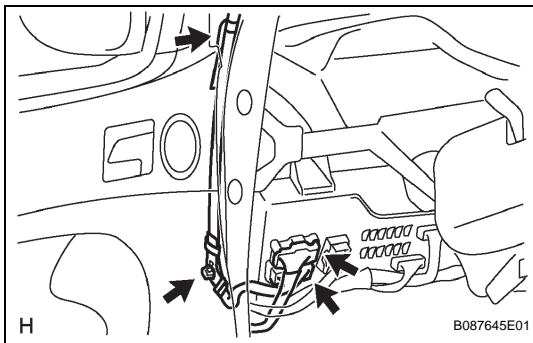


53. REMOVE ROOF HEADLINING ASSEMBLY


- (a) Disconnect the frame wire connector.
- (b) Disconnect the roof wire connector.
- (c) Using a clip remover, remove the 2 wire harness clamps.

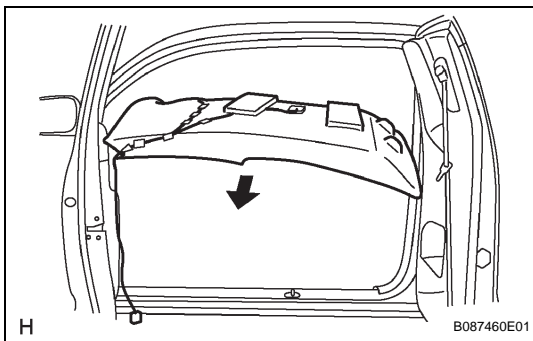

- (d) Remove the roof headlining from the vehicle.

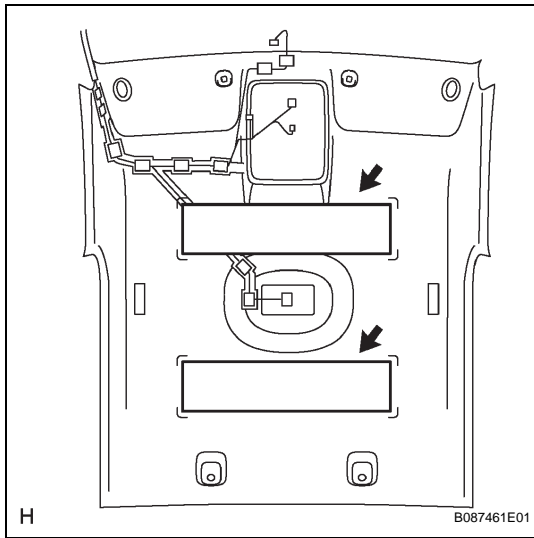**54. REMOVE ROOF HEADLINING PAD**

- (a) Remove the 2 roof headlining pads from the roof headlining.

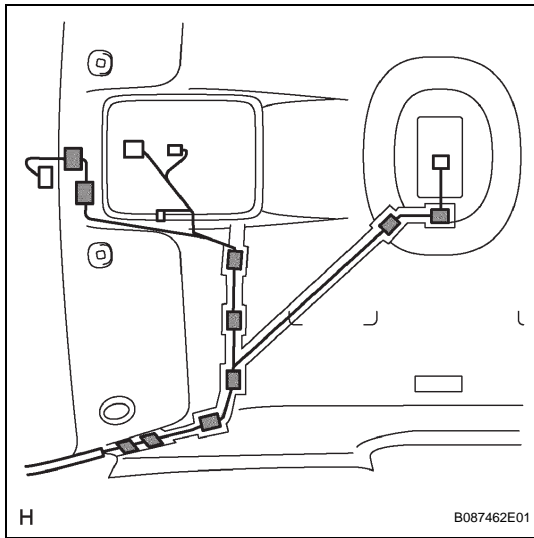**55. REMOVE ROOF WIRE**

- (a) w/ EC mirror:
(1) Remove the 10 adhesive tapes and roof wire.
- (b) w/o EC mirror:
(1) Remove the 8 tapes and roof wire.