



STATION MAP

SOUTHERN RAILWAY COMPANY

Operated by the

SOUTHERN RAILWAY COMPANY

KNOXVILLE DIVISION

STATION 5655+358 TO STATION 5602+558

SCALE 1 IN = 100 FT. DECEMBER 31, 1927

Office of Chief Engineer
Washington, D.C.

STATIONING REFERS TO I.C.E. INVENTORY CHAINAGE 1916

**THE RAILWAY DOES NOT
GUARANTEE THE ACCURACY
OF THE INFORMATION
SHOWN ON THIS MAP**

033-126

V.64
3.27