



**Cameras** 



**Phones** 



1.Panorama Shot: Rotate the Pan Locking Knob counter-clockwise and moove the handle for smooth 360°panorama Shot.



2.The platform plate usage: Lossen the Vertical Tilt Lock Knob to reach the 90° of the platform.



3.Extending the legs: Flip open the leg lock lever and gently pull on the leg segment to the desired length. Max height 50 inches. Press the leg lock lever to secure.



4. Rubber Foot Anti-skid, durable and environmentally friendly.



5. Foldable phone clip.



6.Phone clip can expand to5.3 inches for most cell phones.





7.Device Lock: Using the 1/4 screw interface to attach the phone clip or camera, then fasten the device locking knob to tighten the device.





8.Vertical Shooting: Rotate the handle counter-clockwise and tilt the Pan head, allow maximum 90° for vertical use. Clockwise rotate the handle to lock.

## How to attach the Phone holder



Attach the Phone Holder by the 1/4 standard screw and tighen it by turning the below knob. Phone holder can extend and be rotated.



## **How to Choose Lighting Mode**



