

Kayak Drift Anchor

Loading instructions

- 1 As the Kayak Drift Anchor lays flat, pull the black cord to expand the semi-rigged mouth opening. This opens the top (wider end), which allows water to enter freely and increases drag (Figure 1).
- 2 The bottom (narrow end) can be adjusted for optimal drag. Leave the bottom mouth open for less resistance and close it all the way for maximum resistance. (Figure 2)
- 3 When retrieving the drift anchor, first pull the yellow cord to collapse the body to the anchor. This aids in reducing the weight you will have to pull in. (Figure 3).
- 4 After your are finished using the Kayak Drift Anchor, simply tuck in the cords, roll up the anchor and store away using the Velcro® strap on the bottom.

Warning

- Be aware of other boaters: The anchor line can be entangled in a motor propeller, reel, paddles, or other devices.
- Stay away from other boaters using a similar device.
- This product is meant solely as a device to reduce the amount of drift caused by wind and waves. This device does not keep a vessel in one place and should not be used in place of an actual bottom holding anchor.
- Due to the fact that Seattle Sports does not have control over how this device is used, Seattle Sports disclaims any and all liability for damage or injury that might occur as a result of the improper use of this product.

Warranty

Seattle Sports Company warranties all new product to be free of any defects in material or workmanship, when used under normal conditions by the original purchaser, for a period one year from the date of purchase.

Seattle Sports Company
Manufacturers of Superior Outdoor Gear

Seattle Sports Company
6200 Seaview Ave. NW
Seattle, WA 98107
800-632-6163

Velcro is a registered trademark of Velcro USA

© Copyright 2006 Seattle Sports Co.



Figure 1

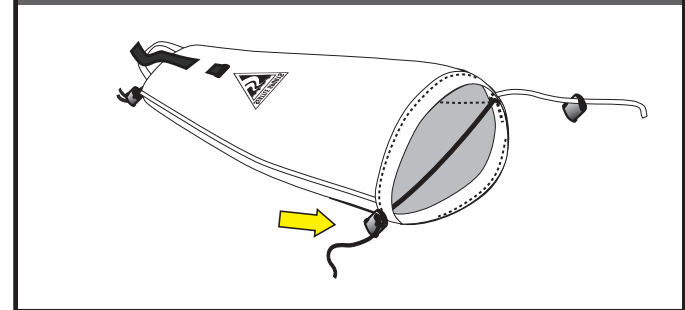


Figure 2

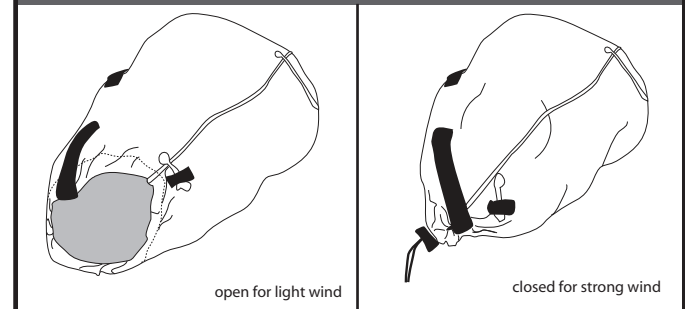


Figure 3

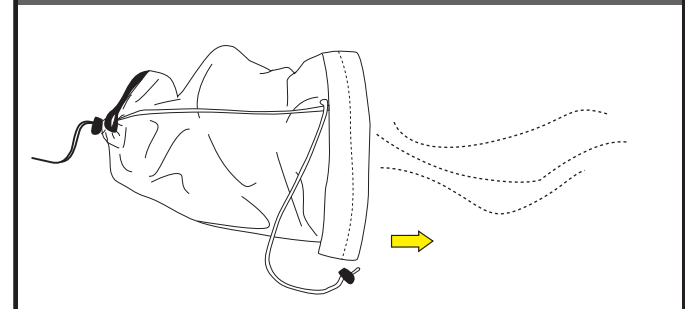


Figure 4

