


AIR CONDITIONING AMPLIFIER


COMPONENTS

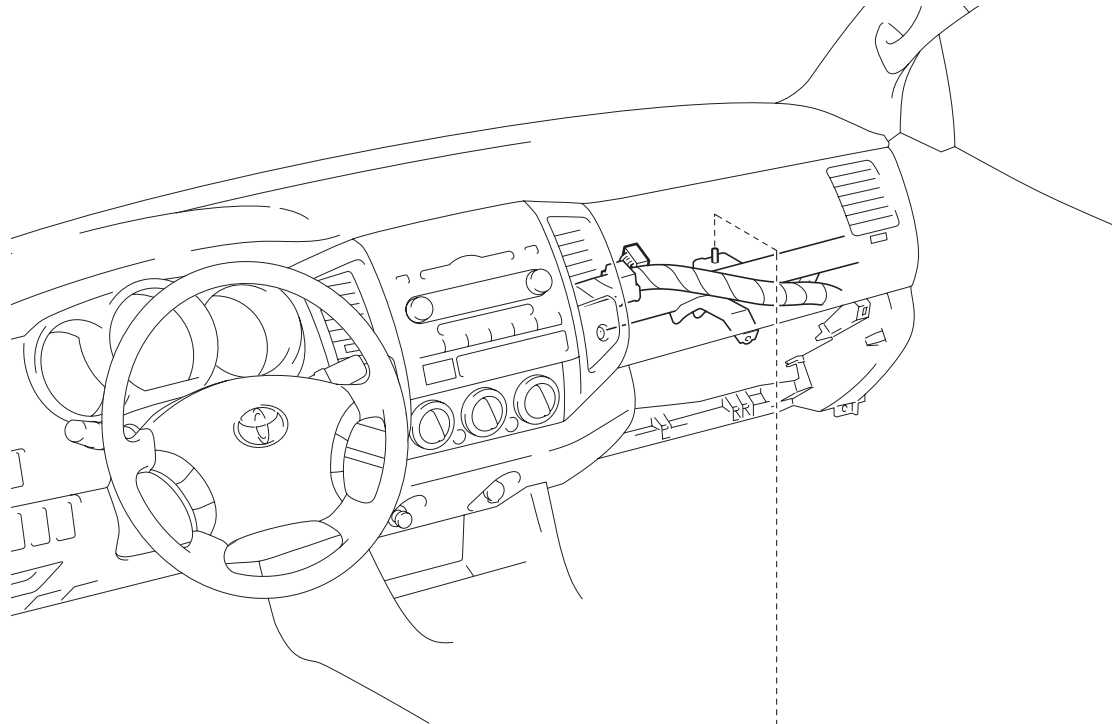


7.0 (71, 62 in.*lbf)

AIR CONDITIONER AMPLIFIER ASSEMBLY

INSTRUMENT PANEL FINISH PANEL
SUB-ASSEMBLY LOWER RH

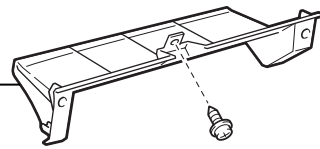

GLOVE COMPARTMENT DOOR ASSEMBLY

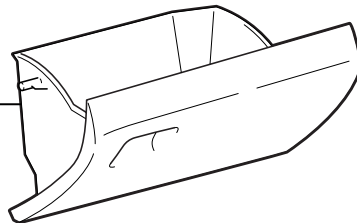

GLOVE COMPARTMENT DOOR STOPPER

N*m (kgf*cm, ft.*lbf) : Specified torque

AC

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


Wait at least for 90 seconds after disconnecting the cable to prevent the airbag from working.

2. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-13](#))

3. REMOVE INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER RH (See page [IP-14](#))

4. REMOVE AIR CONDITIONER AMPLIFIER ASSEMBLY

- Disconnect the connector.
- Remove the nut and the air conditioner amplifier assembly.

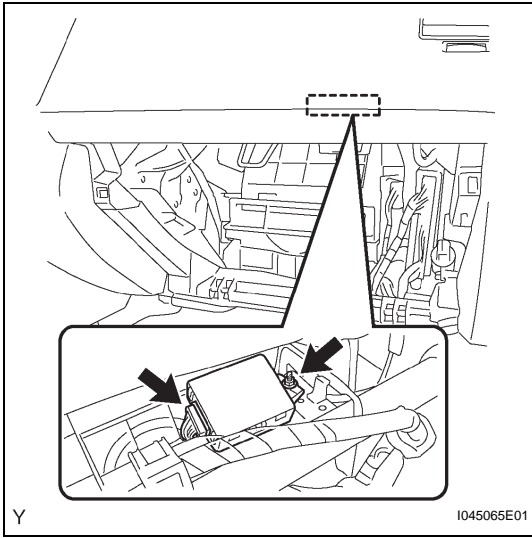

INSTALLATION

1. INSTALL AIR CONDITIONER AMPLIFIER ASSEMBLY

- Install the air conditioner amplifier assembly with the nut.

Torque: 7.0 N*m (71 kgf*cm, 62 in.*lbf)

- Connect the connector.

2. INSTALL INSTRUMENT PANEL FINISH PANEL SUB-ASSEMBLY LOWER RH (See page [IP-20](#))

3. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-20](#))

4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

NOTICE:

(See page [AC-1](#))

