



### Step 1: Chassis

Do not put in t-shaped cross member.

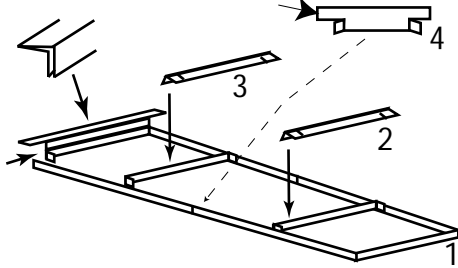

### Step 2: Truck Bed


First glue the corners, then glue the flaps down.

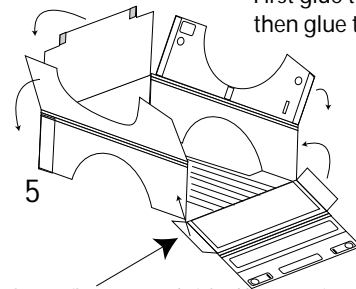

Corner flaps are sandwiched between inner and outer walls


### Step 3: Truck Bed Interior

Inside Wheel Well

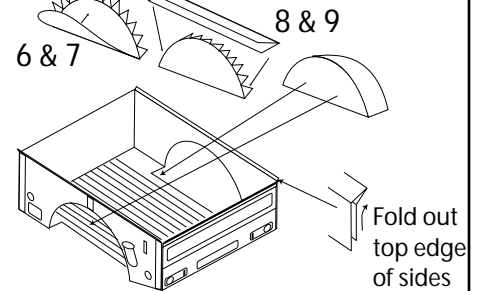

### Step 4: Truck Bed Interior


Fold and glue first, then cut out white areas.

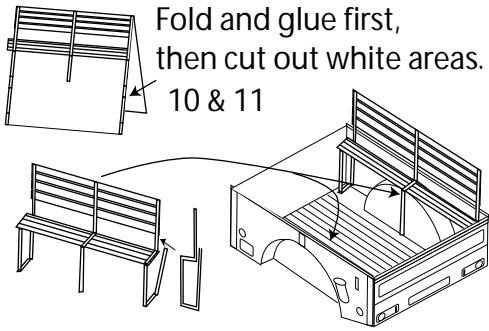

### Step 5: Outside Wheel Wells

Fold & Bend


Fenders stick out a little bit

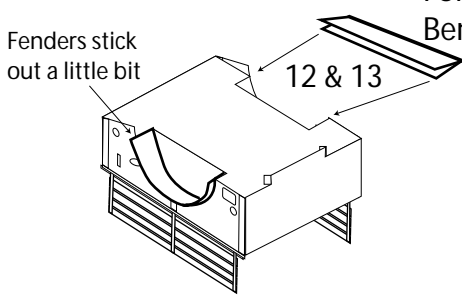


### Step 6: Attach Top Support

Fold


Glue inside

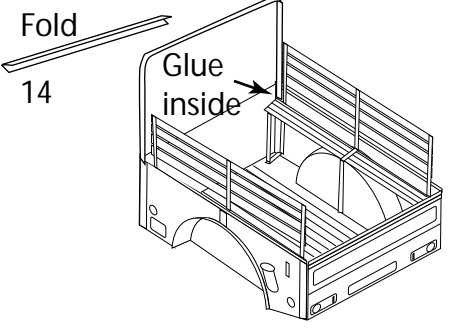


### Step 6: Attach Bed to Chassis

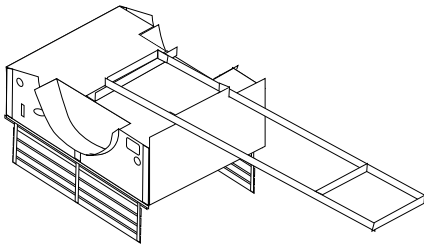

### Step 7: Attach axle mount to chassis

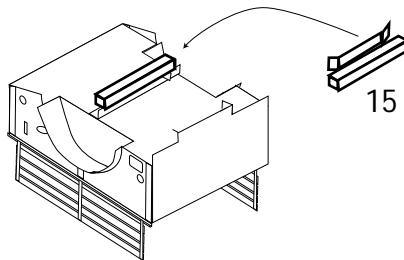


### Step 8: Attach rear bumper

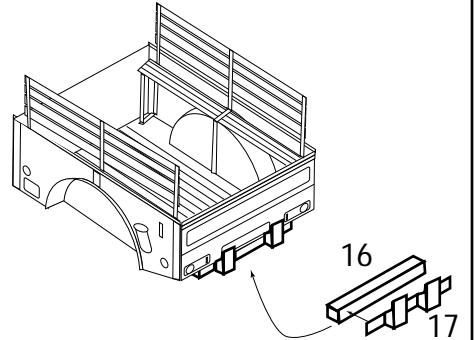

### Step 9: Attach Cab

Roll corners

Glue T-shaped cross member to bottom front of cab.

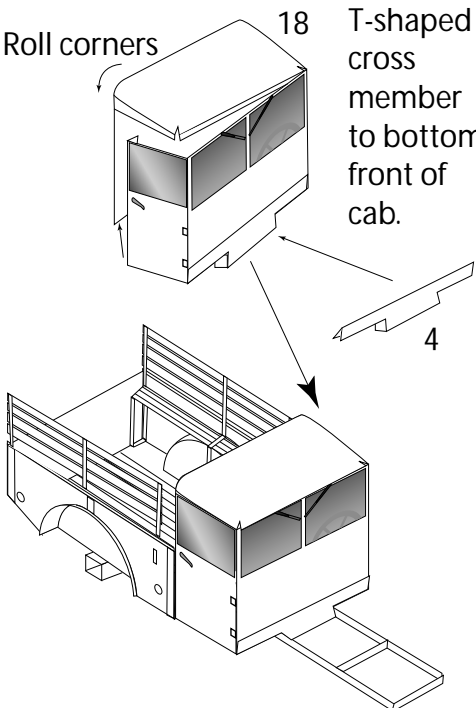


### Step 9: Attach Front End & Steps


Accordion Fold & Glue

Roll and Tuck in top flap.


One each side.

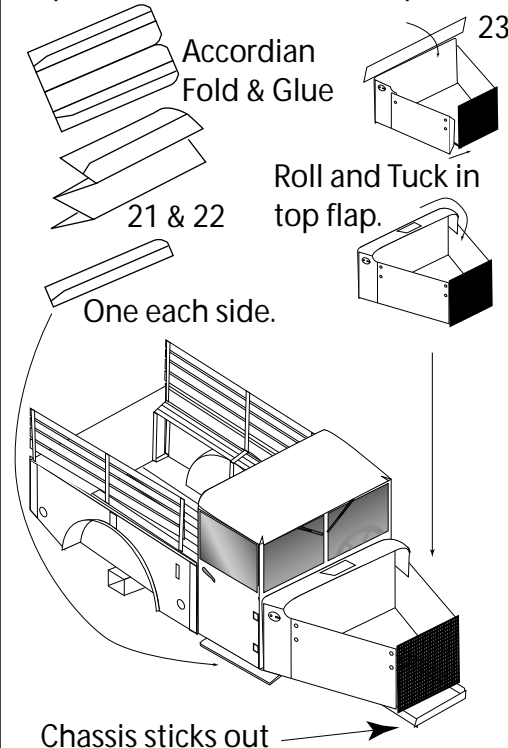


### Step 9: Attach Hood

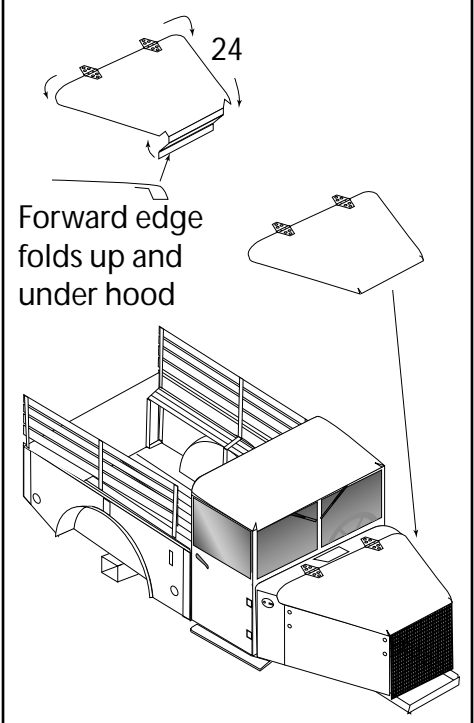


### Step 10: Attach Front Fenders

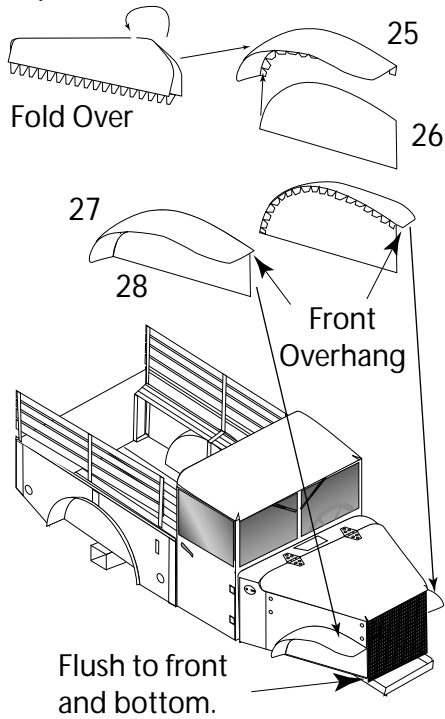


### Step 10: Attach Front Grille

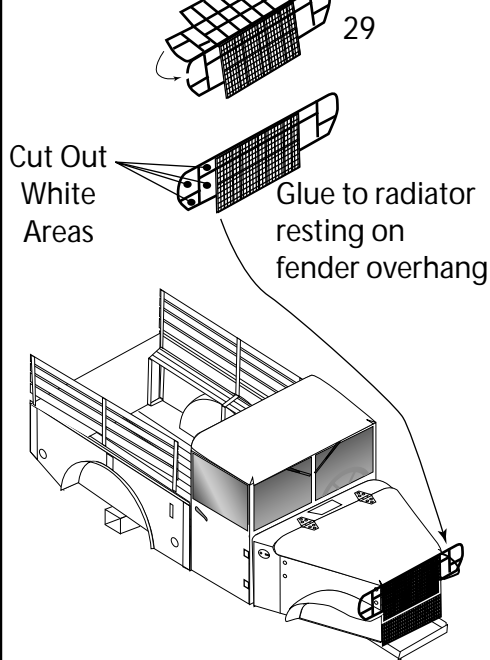


### Step 10: Attach Front Bumper

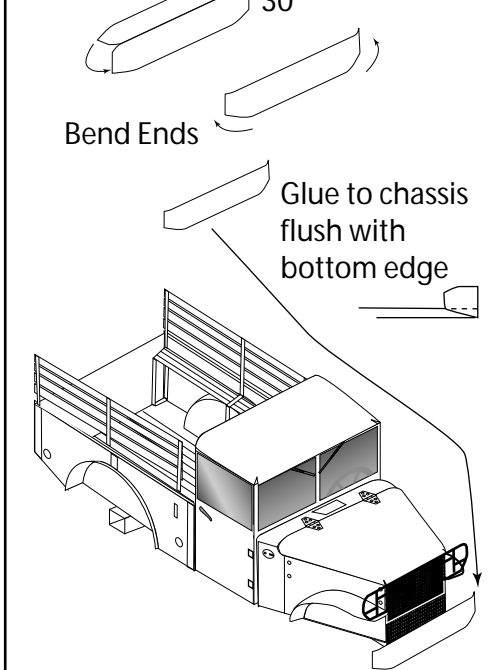


### Step 11: Attach Front Axle Mount

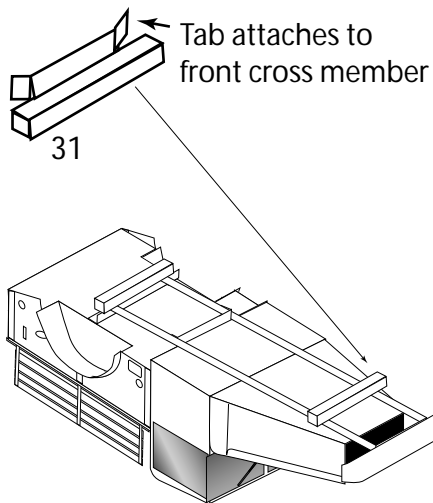


### Step 12: Attach Wheels

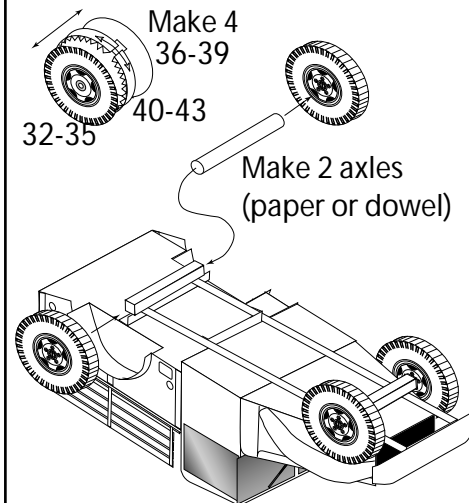


### Step 13: Attach Headlamps

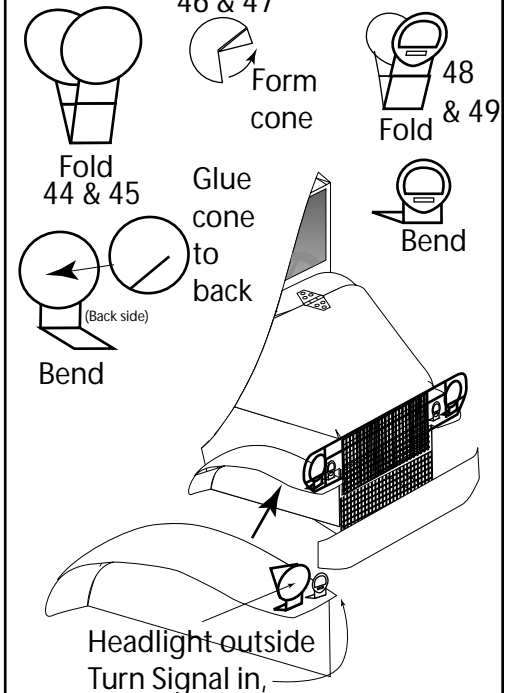

### Step 14: Attach Winshield Hinges

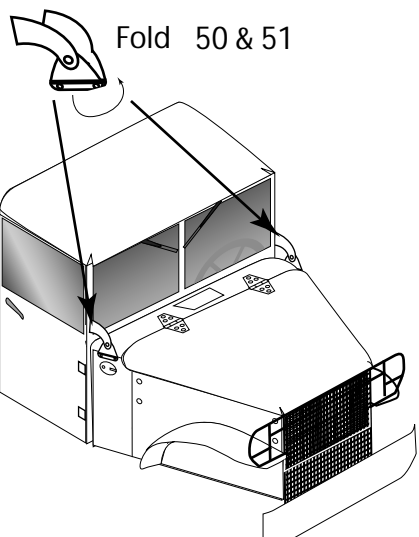

### Step 14: Attach Rear View Mirrors

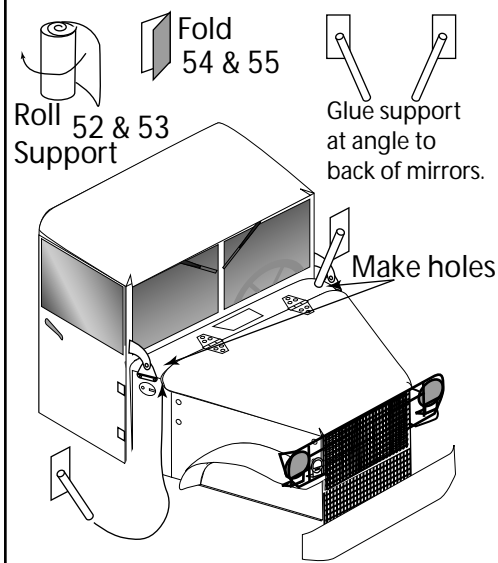

### Step 15: Attach Gas Cap

