


## INSTALLATION


### 1. INSTALL CLUTCH PEDAL NO.1 CUSHION

- (a) Install the No. 1 cushion onto the clutch pedal.

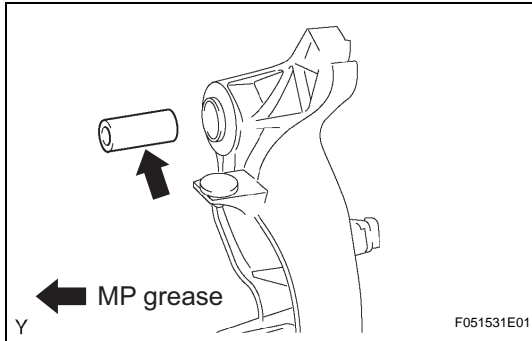

### 2. INSTALL CLUTCH PEDAL SHAFT COLLAR


- (a) Apply MP grease to the clutch pedal shaft collar.  
(b) Install the clutch pedal shaft collar onto the clutch pedal.

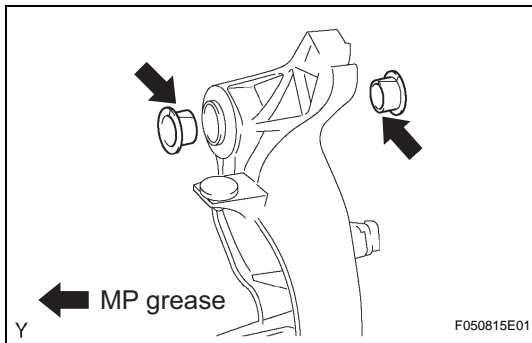

### 3. INSTALL CLUTCH PEDAL BUSH

- (a) Apply MP grease to 2 new bushes.  
(b) Install the 2 bushes onto the clutch pedal.

### 4. INSTALL CLUTCH PEDAL PAD

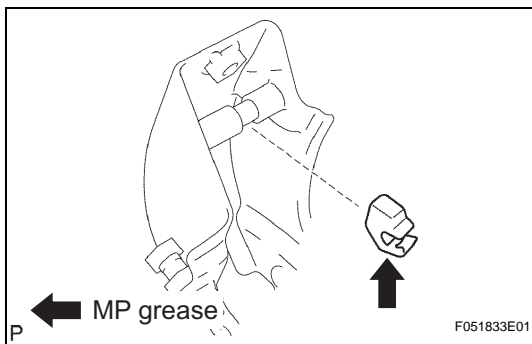

### 5. INSTALL CLUTCH PEDAL SPRING HOLDER

- (a) Apply MP grease to the contact surface of the clutch pedal spring holder.  
(b) Install the clutch pedal spring holder.


### 6. INSTALL CLUTCH PEDAL SUB-ASSEMBLY

- (a) Install the clutch pedal onto the clutch pedal support with the bolt and nut.


**Torque: 34 N\*m (347 kgf\*cm, 25 ft.\*lbf)**

**HINT:**

Install the bolt from the left side of the vehicle.

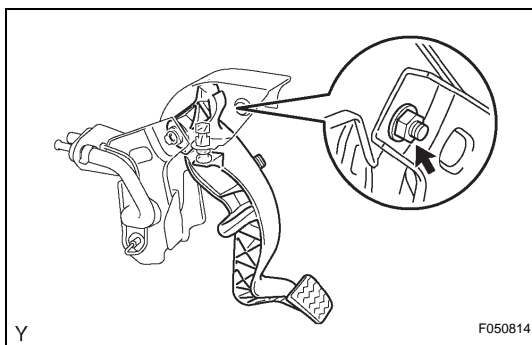

CL

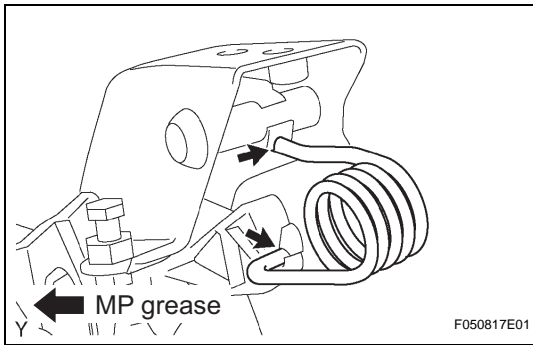

- 7. INSTALL TURN OVER SPRING SEAT COMPRESSION SPRING**
  - (a) Apply MP grease to the contact surfaces of the spring holder, clutch pedal and spring.
  - (b) Install the spring onto the clutch pedal and spring holder.
- 8. INSTALL CLUTCH MASTER CYLINDER ASSEMBLY**  
(See page [CL-12](#))
- 9. BLEED BRAKE LINE (w/o VSC)**
- 10. BLEED CLUTCH PIPE LINE**
- 11. INSPECT AND ADJUST CLUTCH PEDAL SUB-ASSEMBLY** (See page [CL-6](#))
- 12. CHECK BRAKE FLUID LEAKAGE (w/o VSC)**
- 13. CHECK FOR CLUTCH FLUID LEAKAGE**
- 14. CHECK FLUID LEVEL IN RESERVOIR**