


ROAD TEST


HINT:

'SET' and '-', 'RES' and '+', 'ON-OFF' functions share the same switch. Operate the cruise control main switch according to the directions indicated on the switch.

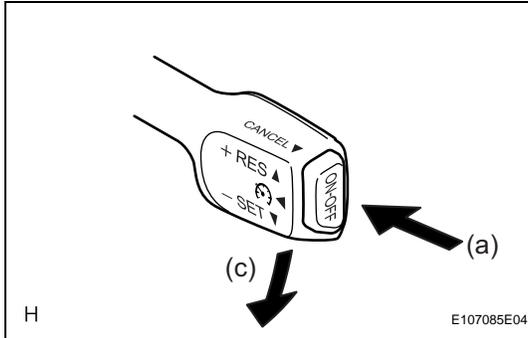


1. INSPECT 'SET' FUNCTION

- Push the ON-OFF button on.
- Drive the vehicle at a desired speed 25 mph (40 km/h) or higher.
- Push down the control switch lever to "-/SET" to set the cruising speed.
- After releasing the lever, check that the vehicle cruises at the set speed.

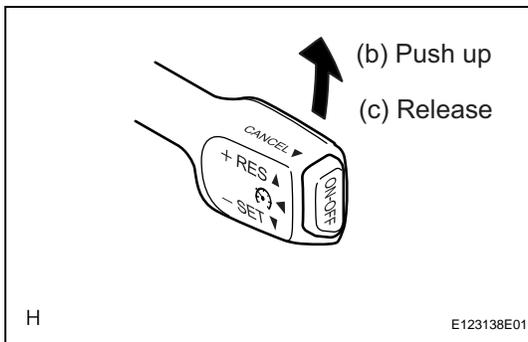

2. INSPECT '+' FUNCTION

- Set a desired speed as in step 1.
- Check that the vehicle speed increases while the control switch lever is pushed up to "+/RES".
- Check that the vehicle cruises at the newly set speed when the switch is released.
- Momentarily (approximately 0.6 seconds) push up the control switch lever to the "+/RES", and then release it. Check that the vehicle speed increases by approximately 1 mph (1.6 km/h) with each lever operation (Tap-up function).

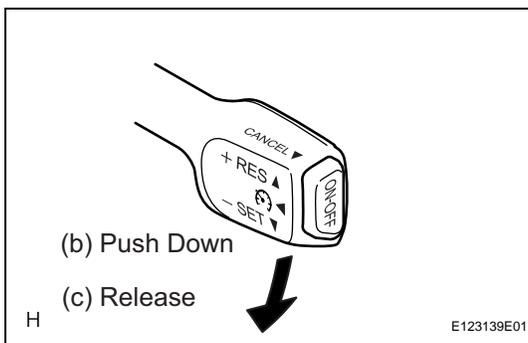

3. INSPECT '-' FUNCTION


- Set a desired speed as in step 1.
- Check that the vehicle speed decreases while the control switch lever is pushed down to "-/SET".
- Check that the vehicle cruises at the newly set speed when the switch is released.
- Momentarily (approximately 0.6 seconds) push down the control switch to "-/SET", and then release it. Check that the vehicle speed decreases by approximately 1 mph (1.6 km/h) with each lever operation (Tap-down function).

HINT:


- The cruise control system automatically cancels when the vehicle speed decreases to below 25 mph (40 km/h).

4. INSPECT 'CANCEL' FUNCTION

- Set a desired speed as in step 1.
- Check that the system cancels cruise control when one of the following is conducted:
 - Depressing the brake pedal
 - Depressing the clutch pedal (M/T)
 - Shifting into any position except D and 3 while driving (A/T: 2TR-FE)
 - Shifting into any position except D and 4 while driving (A/T: 1GR-FE)

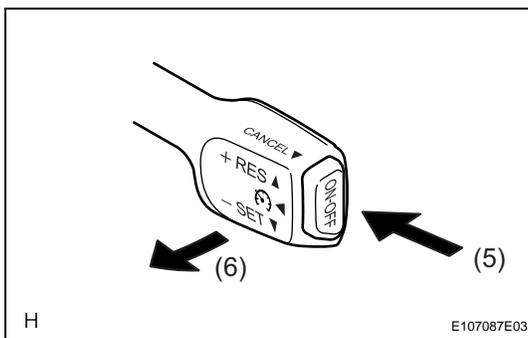

- (5) Pushing the cruise control main switch ON-OFF button off
- (6) Pulling the cruise control switch lever to "CANCEL"

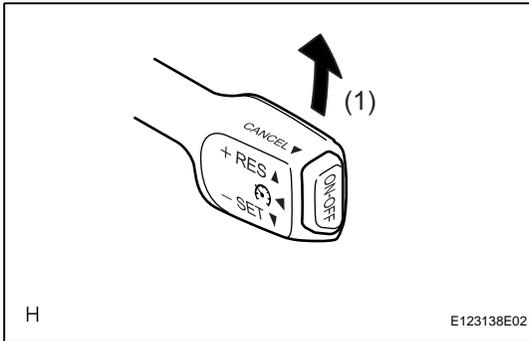

5. INSPECT ' RES (RESUME)' FUNCTION

- (a) Set a desired speed as in step 1.
 - (1) After cancelling the cruise control according to any of the above operations except (5), push up the switch lever to "+/RES" at a speed of 25 mph (40 km/h) or higher.
 - (2) Check that the vehicle resumes the previously set speed.

HINT:

The 'RES' function does not resume the set speed when the vehicle speed decreases to below 25 mph (40 km/h).