


1. Download PuTTY from [here](#)
2. Turn On the controller and connect to the Solo WiFi




3. Enter "sololink" password

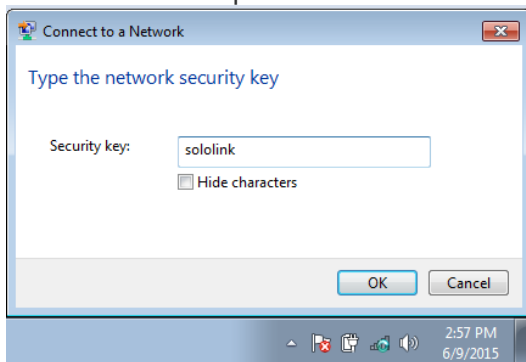


4. Open PuTTY and enter the login information:

- Host name: 10.1.1.1
- Connection type: SSH
- Port number: 22


And hit open

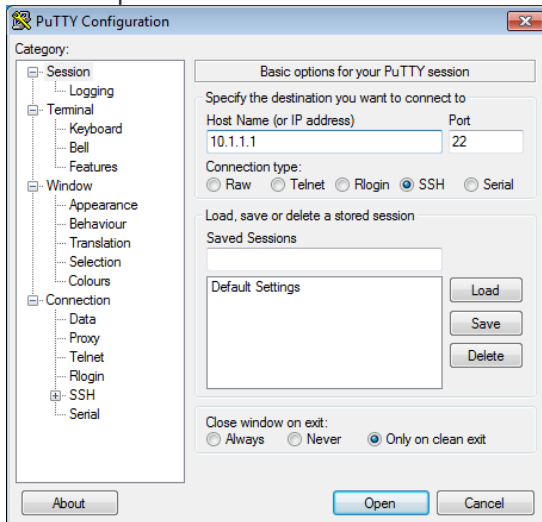


5. Click “Yes” on the security alert.

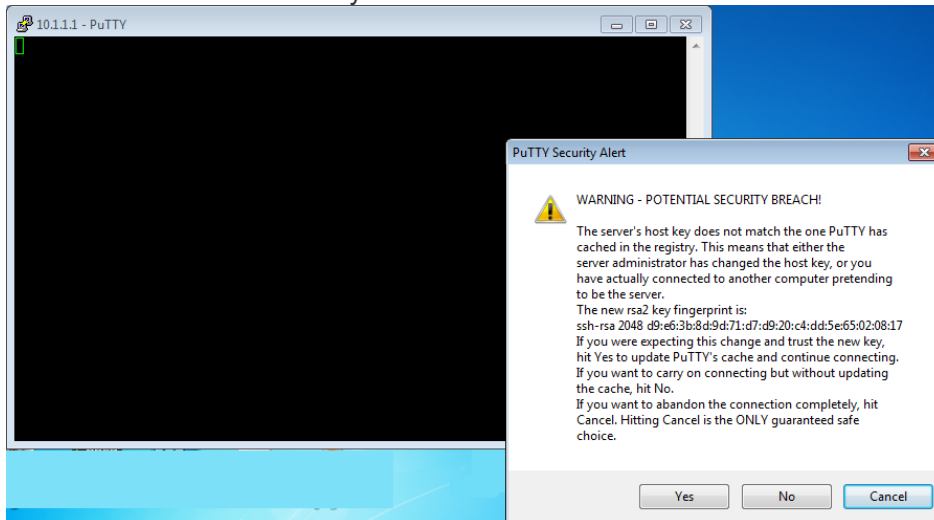


6. login as “root”.

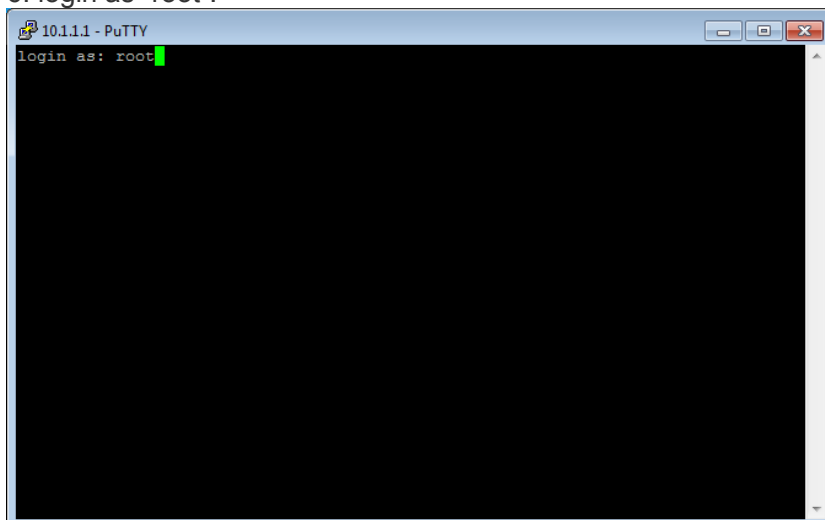

7. Enter "TjSDBkAu" password.

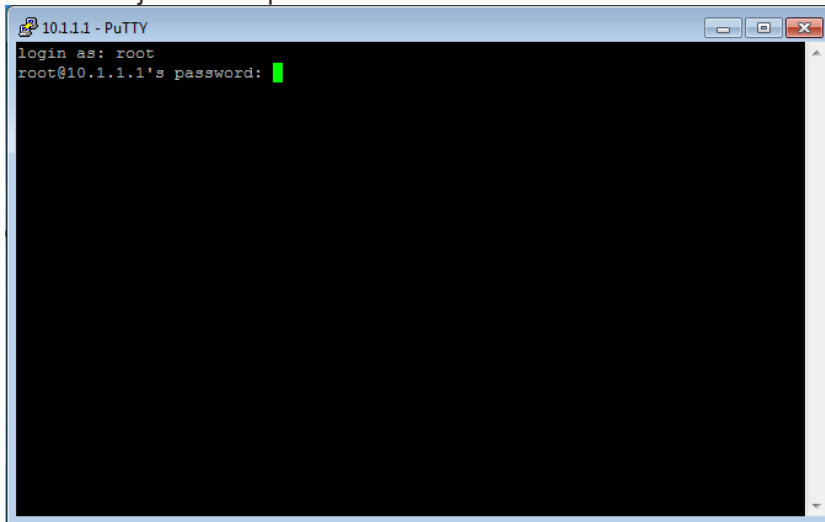

8. Type "runStickCal.sh" and hit enter. (Note: type "runS" and hit "Tab" to complete the command).

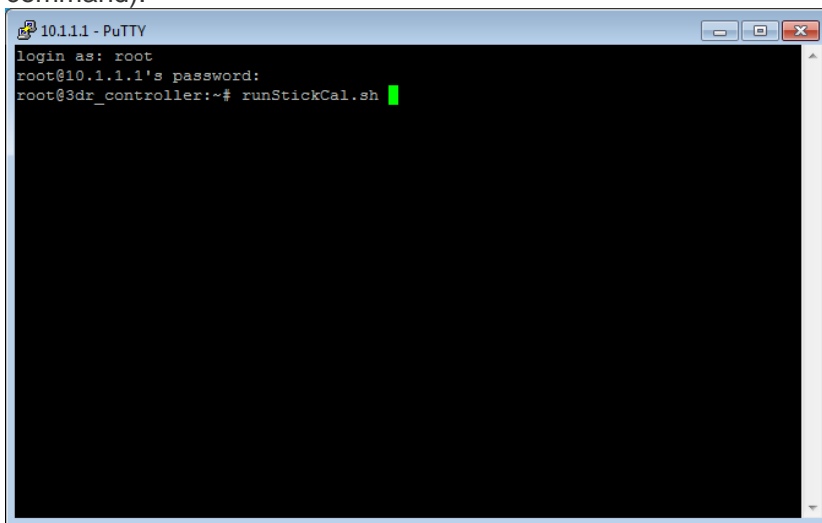

9. Move the "sticks" on the controller to their maximum ranges several times until the numbers stop changing on the screen.

- Both sticks to all 4 corners.

- Paddle on the top left (hold it up and down several times until you get the vibration).

- Dial on the top right (move to both extremes several times).

