


SHIFT LOCK SYSTEM

ON-VEHICLE INSPECTION


1. **CHECK SHIFT LOCK OPERATION**
 - (a) Shift the shift lever to the P position.
 - (b) Turn the ignition switch to LOCK.
 - (c) Check that the shift lever cannot be shifted to any positions other than P.
 - (d) Turn the ignition switch to ON, depress the brake pedal, and check that the shift lever can be shifted to other positions.
2. **CHECK SHIFT LOCK RELEASE LINK OPERATION**
 - (a) Using a small screwdriver, remove the shift lever cap.
 - (b) When operating the shift lever with the shift lock release link pressed, check that the lever can be shifted to any positions other than P.
3. **CHECK KEY INTERLOCK OPERATION**
 - (a) Turn the ignition switch to ON.
 - (b) Depress the brake pedal and shift the shift lever to any positions other than P.
 - (c) Check that the ignition key cannot be turned to LOCK.
 - (d) Shift the shift lever to the P position, turn the ignition key to LOCK, and check that the ignition key can be removed.
4. **INSPECT SHIFT LOCK CONTROL ECU SUB-ASSEMBLY**
 - (a) Using a voltmeter, measure the voltage at each terminal.

HINT:
Do not disconnect the shift lock control ECU connector.

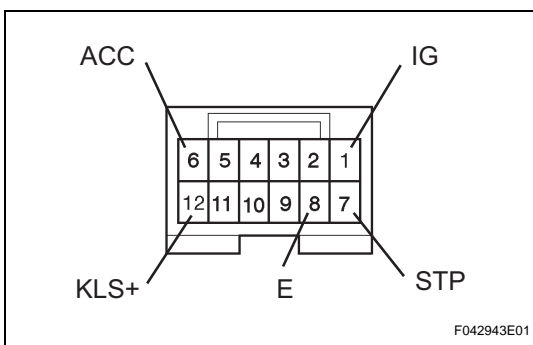


Terminal	Measuring Condition	Voltage (V)
1 (KLS+) - 8 (E)	(1) Ignition switch ACC and P position	0
	(2) Ignition switch ACC and except P position	7.5 to 11
	(3) Ignition switch ACC and except P position (After approx. 1 second)	6 to 9
4 (ACC) - 8 (E)	Ignition switch ON	10 to 14
	Ignition switch ACC	10 to 14
	Ignition switch OFF	0
9 (STP) - 8 (E)	Depress brake pedal	10 to 14
	Release brake pedal	0
5 (IG) - 8 (E)	Ignition switch ON	10 to 14
	Ignition switch OFF	0

AT

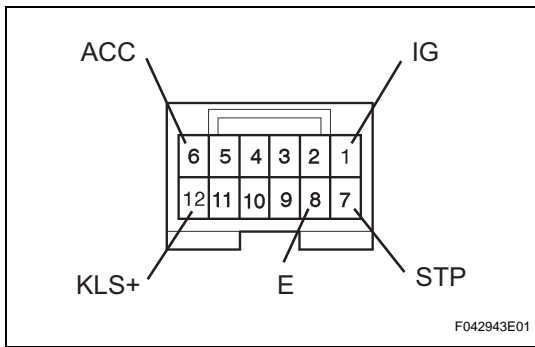

- (b) Using an ohmmeter, measure the resistance at terminal E (8) and body ground.
HINT:
Do not disconnect the shift lock control ECU connector.

Terminal	Measuring Condition	Specified Value
8 (E) - Body ground	Always	Below 1 Ω

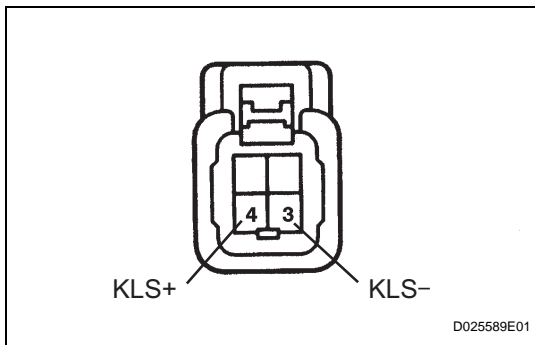

5. INSPECT KEY INTER LOCK SOLENOID

- (a) Disconnect the solenoid connector.
- (b) Connect KLS+ (4) terminal to the battery positive (+) terminal, and KLS- (3) terminal to the battery negative (-) terminal, and apply about 12V between KLS+ and KLS- terminals.
Check that operation noise can be heard from the solenoid.
If the solenoid does not operate, replace the solenoid.