

INSPECTION


1. INSPECT FRONT SEAT INNER BELT ASSEMBLY LH

- (a) Check the resistance.
 (1) Using an ohmmeter, measure the resistance between the terminals.

Standard resistance

Tester Connection	Condition	Specified condition
1 - 2	Fasten seat belt	10 k Ω or higher
1 - 2	Release seat belt	Below 1 Ω

If the result is not as specified, replace the front seat inner belt.

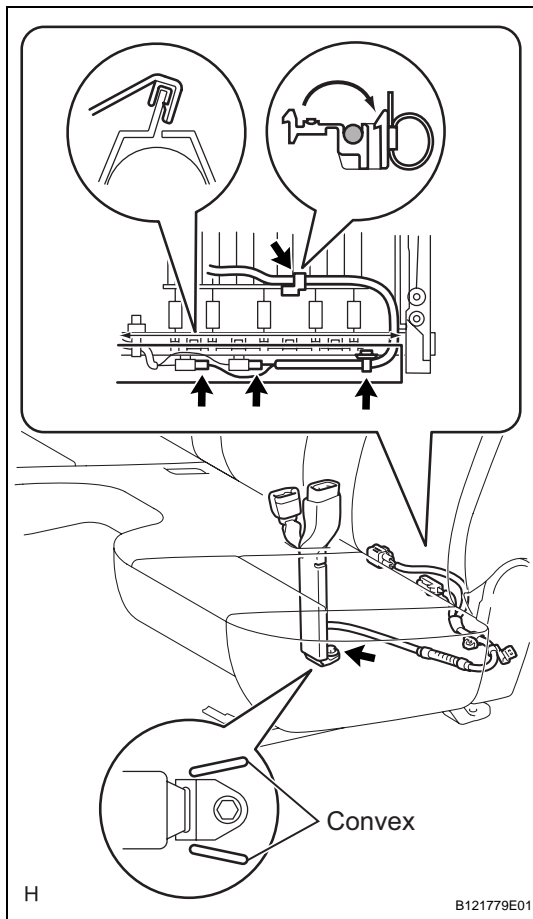

INSTALLATION

1. INSTALL FRONT SEAT INNER BELT ASSEMBLY LH


- (a) Slide the front seat to the most forward position.
 (b) Install the front seat inner belt with the bolt.

Torque: 42 N*m (430 kgf*cm, 31 ft.*lbf)

NOTICE:

Be careful not to place the front seat inner belt over the convex areas of the floor panel.

- (c) Install the 2 wiring harness clamps.
 (d) Connect the 2 connectors.
 (e) Engage the hook.

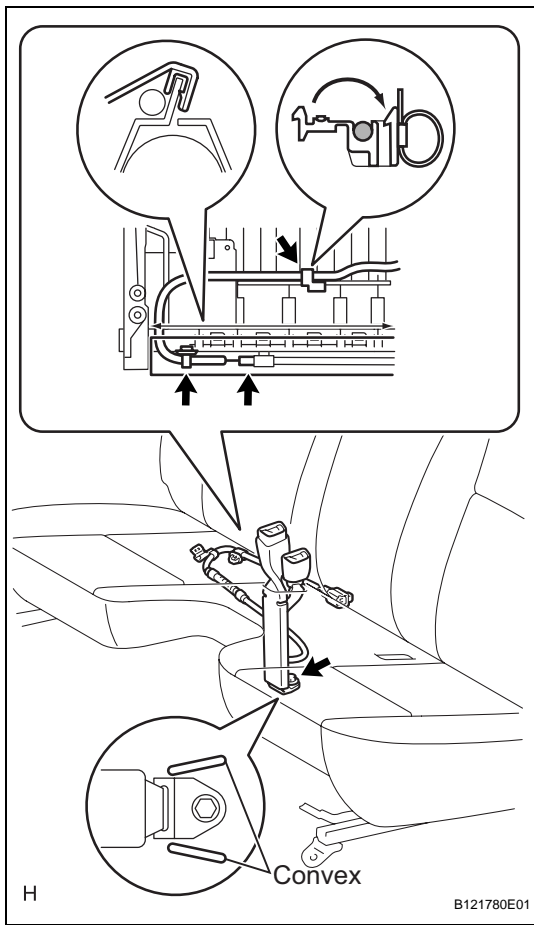

2. INSTALL FRONT SEAT INNER BELT ASSEMBLY RH

- (a) Slide the front seat to the most forward position.
- (b) Install the front seat inner belt with the bolt.

Torque: 42 N*m (430 kgf*cm, 31 ft.*lbf)

NOTICE:

Be careful not to place the front seat inner belt over the convex areas of the floor panel.

- (c) Install the 2 wiring harness clamps.
- (d) Connect the connector.
- (e) Engage the hook.

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)