



Beginners Guide to Wattbike Expert Software



Index

Introduction.....	3
Connecting the software to the Wattbike Performance Computer – the default Polar screen and editing the display bar.....	4
The analysis modules graph (AMGraph) and defining the graph and editing the analysis modules.....	10
Viewing a Saved workout – Pedal revolution and Time modes.....	15
Transferring a workout from the Wattbike Performance Computer.....	20
How to Update the Wattbike Performance Computer Firmware.....	22
How to race against the computer.....	25
Other useful functions.....	29-32
A - Scientific mode	
B - Personal file management	
C - Exporting data	
D - Open file Toolbar	
E - Start analyse from first sample	



Introduction

Wattbike Expert Software monitors up to 39 different parameters each pedal revolution which are all recorded even when the number of parameters viewed is restricted.

There software opens up in default mode showing 3 parameters when the Wattbike is connected live to the software (**Cadence [1/min]**, **Heart rate [1/min]** and **Power per revolution [W]**) and 12 parameters when viewing a saved file:

Elapsed time

Cadence [1/min]

Velocity [km/h]

Distance total [m]

Heart rate [1/min]

Pace per 1000m [1/km]

Power per revolution [W]

Power/Kg [W/Kg]

Left and Right leg percent [%]

Left and right leg angle [%]

The number of parameters displayed can be changed as needed.


Before using **Wattbike Expert Software** make sure the **Wattbike Performance Computer** sample rate is set to 100 samples per second (see the Wattbike User Manual).




Connecting the software to the Wattbike Performance Computer – the default Polar screen and editing the display bar

Download and install the latest version of **Wattbike Expert Software** here:
<http://wattbike.com/uk/wattbike/downloads/>

1. Connect the **Wattbike Performance Computer** to your PC using a USB cable.
2. Open the software and switch on the **Wattbike Performance Computer**.
3. From the welcome screen select **Monitor**.

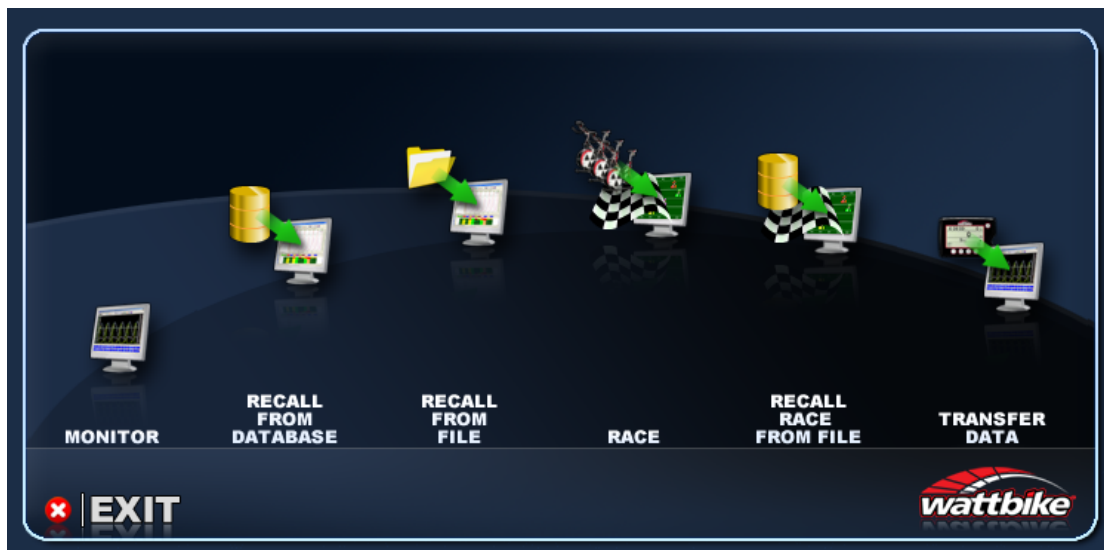

4. Or if the program is open - in the Menu at the top of the screen go to **File** then **Monitor...** or the click on the **Monitor** icon on the **Toolbar** (**Start monitoring mode**).

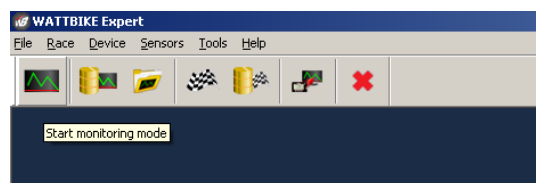

5. The software will automatically detect the **Wattbike Performance Computer**.
6. The **Personal Data** window will appear, fill in detail of the new user or add the workout to an existing user or Personal file double click on user name).



Personal data

SMITH JOHN

Last name: SMITH Device: Wattbike

First name: JOHN Sport since: 1980

Address:

Date: 8/18/2008 Sex: Male

Time: 2:02:33 PM Birthyear: 1968

Height: 183 Weight: 80

Email:

Comment:

Template: Reset Browse...

Nr.	Last name	First name	Birthyear	Nr.	Date	Time	Device
1	SMITH	JOHN	1968	1	8/18/2008	12:45:45 PM	Wattbike
				2	8/18/2008	11:50:03 AM	Wattbike
				3	8/15/2008	3:00:15 PM	Wattbike

OK Cancel

Complete the personal data by:


a) Typing in the data manually.

Or


b) If the user data is still in the database, double-click on the users name in the table and the data will be automatically transferred from the database.

c) Click the **OK** button to accept the data.

7. The screen is the system default screen showing the **Polar** (force curve) and three parameters – **Cadence [1/min]**, **Heart rate [1/min]** and **Power per revolution [W]** in the **Display bar** at the bottom of the screen.

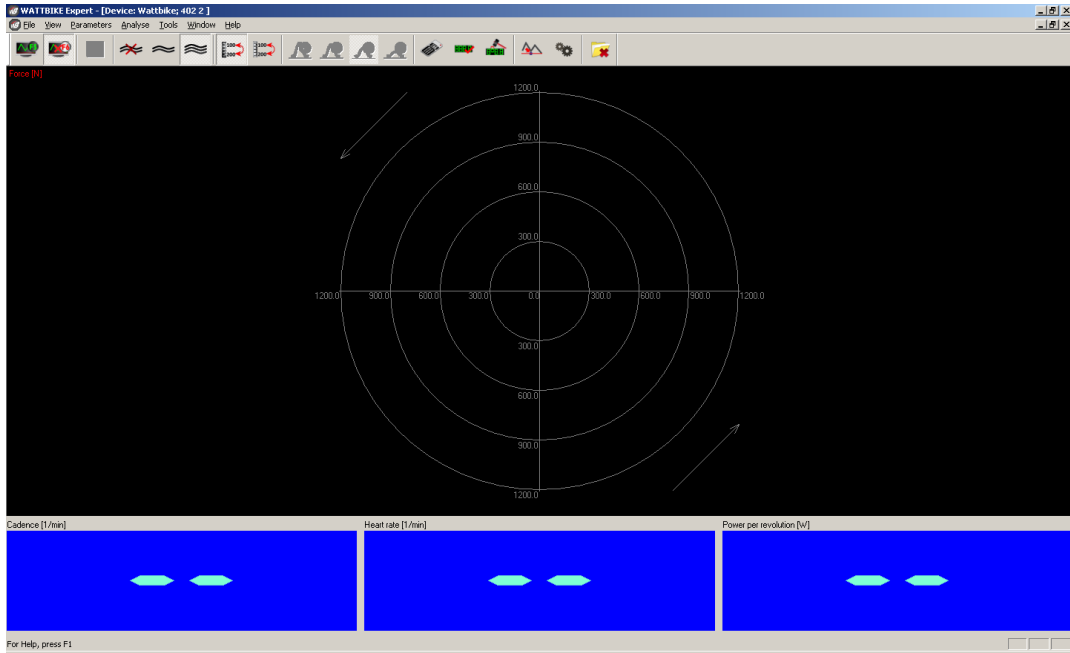

8. To show other parameters go to the Menu at the top of the screen **Analyse** then **Edit Display...** and the **Edit display** window will open

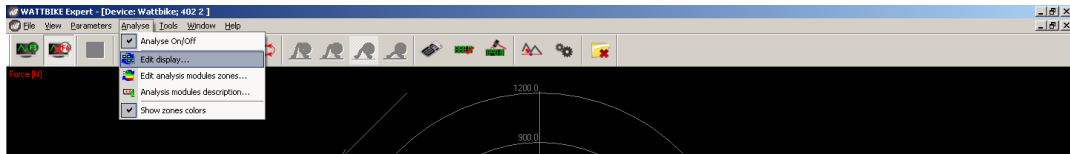

Edit display [Device: Wattbike]

Autoplace:

Number of rows:

Free modules:			Used modules:						
Nr.	Name	Short name	Nr.	Name	Short name	Row	Col	Decimal	Color
1	Turns number [Nr]	Turns.Nr. [Nr]	✓ 1	Elapsed time [s]	Elap. Time [s]	1	1	0	Red
2	Cadence peak/rev [1/min]	Cad. peak/rev [1/min]	✓ 2	Cadence [1/min]	Cadence [1/min]	1	2	0	Blue
3	Circ. pedal velocity [m/s]	Vpedal [m/s]	✓ 3	Velocity [km/h]	Velocity [km/h]	1	3	3	Green
4	Force per revolution [N]	F rev [N]	✓ 4	Distance total [m]	Dist.tot. [m]	1	4	3	Orange
5	Force peak/rev [N]	F peak/rev [N]	✓ 5	Heart rate [1/min]	HR [1/min]	2	1	0	Black
6	Force average [N]	F avr [N]	✓ 6	Power per revolution [W]	P rev [W]	2	2	0	Red
7	Efficiency per revolution [%]	Efficie. Rev [%]	✓ 7	Power average [W]	P avr [W]	2	3	2	Blue
8	Efficiency average [%]	Efficie. Avr [%]							
9	Power peak/rev [W]	P peak/rev [W]							
10	Work per revolution [J]	A rev [J]							
11	Work total [kJ]	A total [kJ]							
12	Left leg percent [%]	LL% [%]							
13	Total left leg percent [%]	Total LL% [%]							
14	Right leg percent [%]	RL% [%]							
15	Total right leg percent [%]	Total RL% [%]							
16	Left time to force peak [mm:ss:00]	L time to Fpeak [mm:ss:00]							
17	Total left time to force peak [mm:ss:00]	Total L time to Fpeak [mm:ss:00]							
18	Right time to force peak [mm:ss:00]	R time to Fpeak [mm:ss:00]							

Filter:



The **Analysis modules** (parameters) displayed in this example are:

Elapsed time

Cadence [1/min]

Velocity [km/h]

Distance total [m]


Heart rate [1/min]

Power per revolution [W] and Power average [W]

To define the **Analysis modules** (parameters) that should be displayed:

- Chose the required modules by adding or removing modules from **Free modules** to the **Used modules** table.
- In the top-right corner of the dialog box define the number of display rows.
- Click the **Autoplace** button (in this way **Used modules** will be ordered in the number of rows defined).
- Click the **OK** button to accept the changes.



9. The **Polar** screen will be displayed with the selected **Analysis modules** (parameters) shown in the **Display bar** below the **Polar** view.

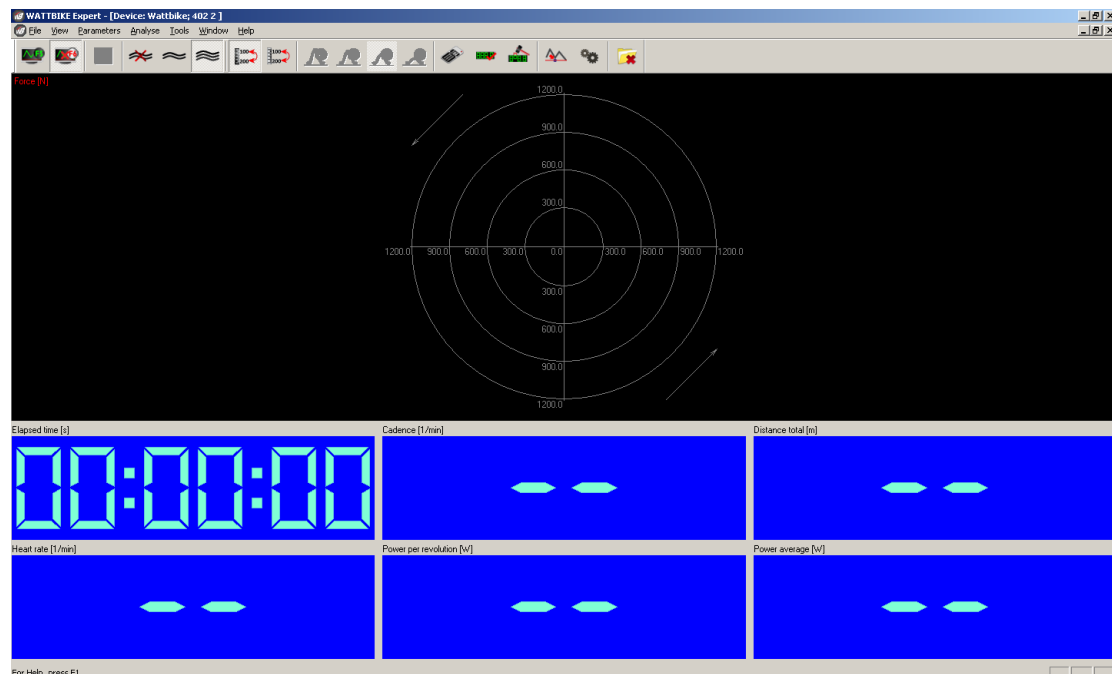


10. If concentrating on pedaling technique the **Analysis modules** (parameters) could be changed to:



Cadence [1 /min]
Left and Right leg percent [%]
Left and Right angle to force peak [°]

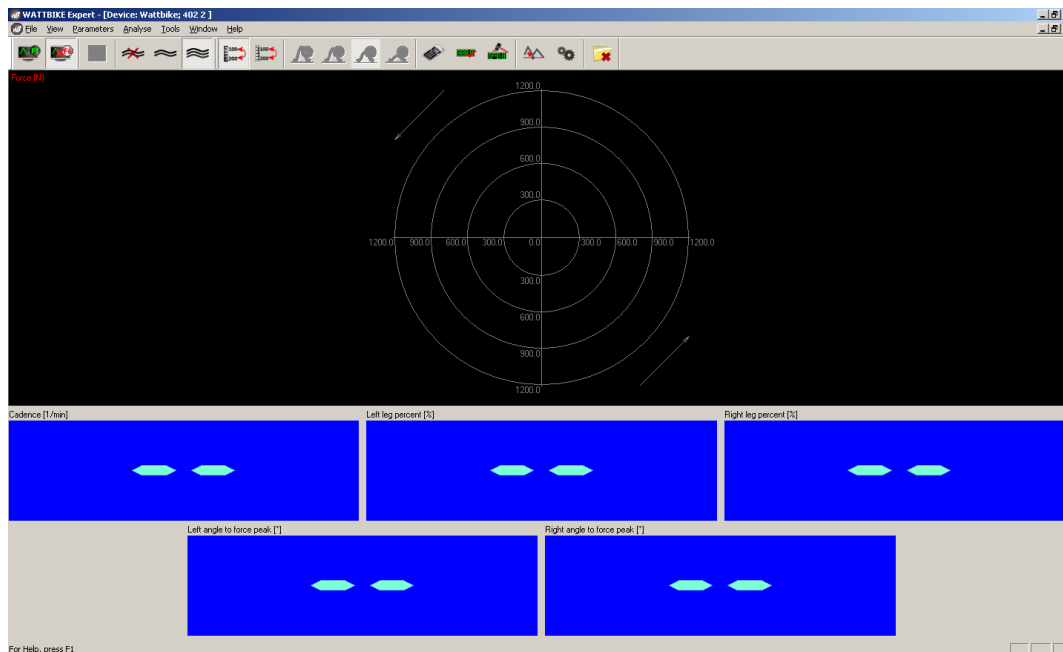
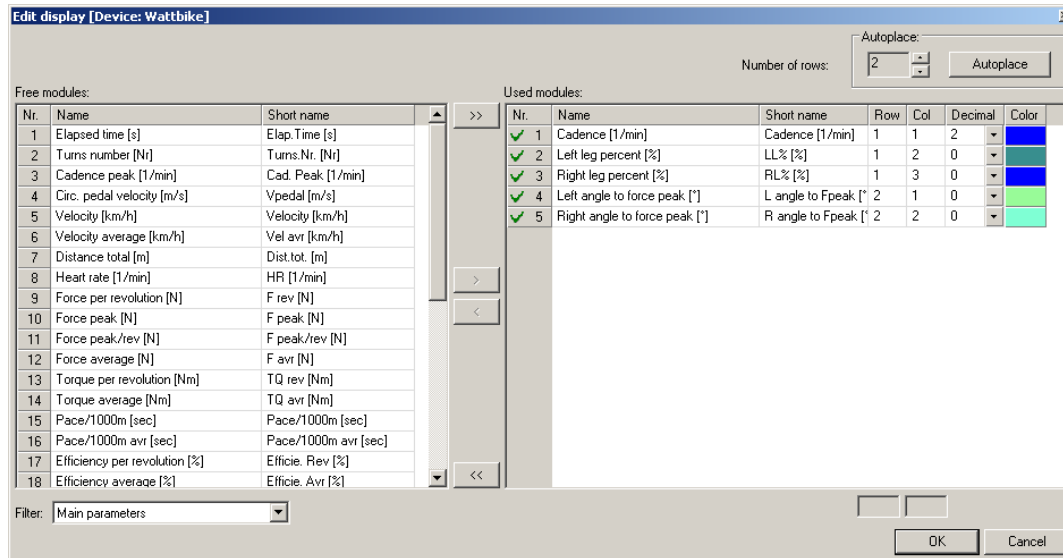


11. To start monitoring Click on the **Start** button in the **Toolbar (Connect monitoring)**.

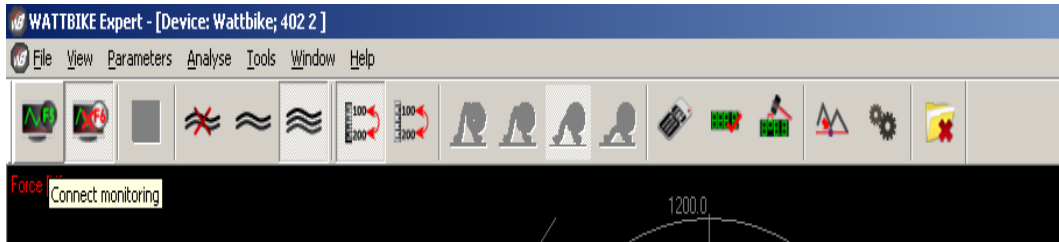


12. Start pedaling and the **Polar** view will display the **Analysis modules** (parameters) selected

13. When the workout is finished click the **Stop** button (**Disconnect monitoring**) and if you want to save the workout, click the **SAVE** button (**Save Personal file**).

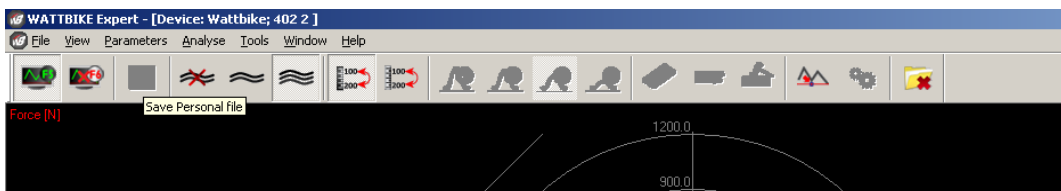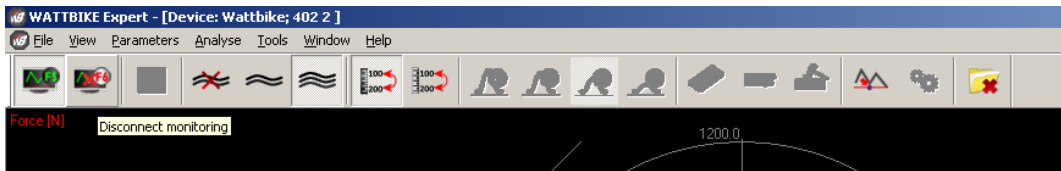

14. To close monitoring mode click the **Close (X)** button.

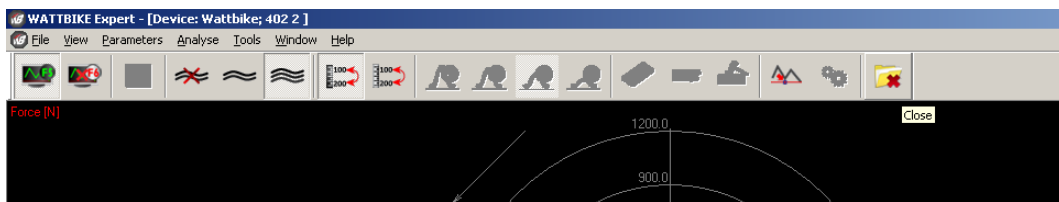





The analysis modules graph (AMGraph) and defining the graph and editing the analysis modules

The other useful **View** is the **Analysis modules graph** - keeping the same **Analysis modules** selected in the **Polar** view at the bottom of the screen a bar of line graph of one of more selected **Analysis modules** can be displayed.


1. In the Menu at the top of the screen go to **View** and change to **Analysis modules graph**

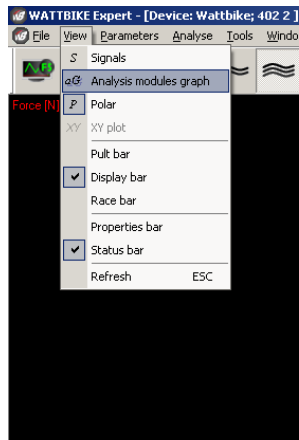

2. The **Analysis module graph** will appear – in the Menu at the top of the screen go to **AMGraph** then **Edit...**

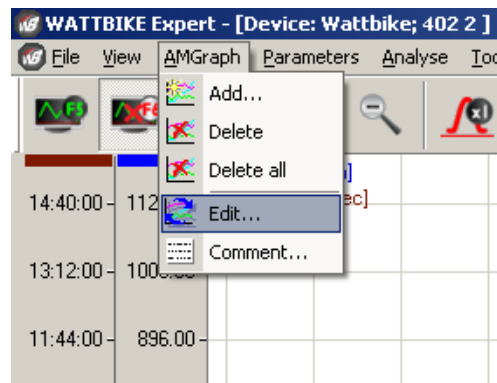

3. The **Edit analysis modules graph** window will open.

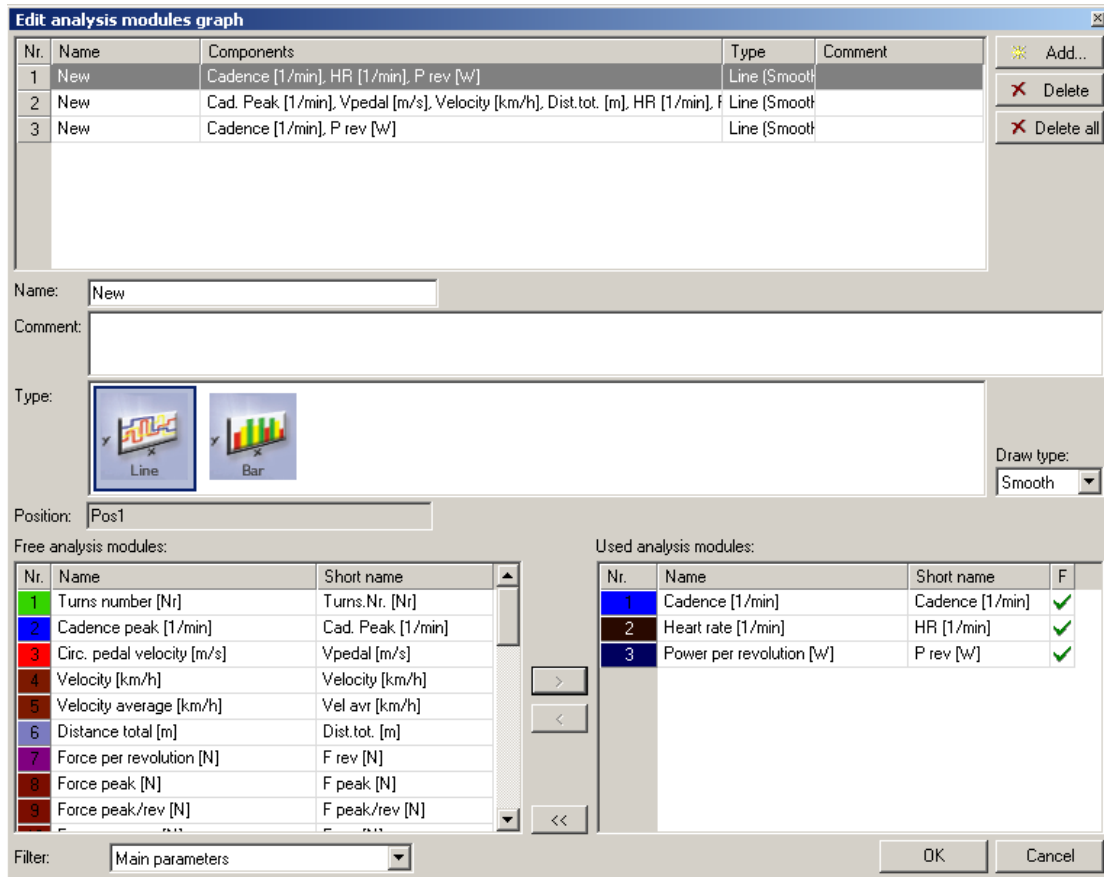

Select the **Type** of graph required – **Line** or **Bar**.

The **Analysis modules** (parameters) displayed in this example are:

Cadence [1/min], Heart rate [1/min] and Power per revolution [W].


To define the **Analysis modules** (parameters) that should be displayed:

- Chose the required modules by adding or removing modules from **Free analysis modules** to the **Used analysis modules** table.
- Click the **OK** button to accept the changes.

4. The **Analysis modules graph** will be displayed showing the **Analysis modules** (parameters) selected for the graph. The original **Analysis modules** selected will remain on view in the **Display bar** at the bottom of the screen.



Cadence [1/min], Heart rate [1/min] and Power per revolution [W]

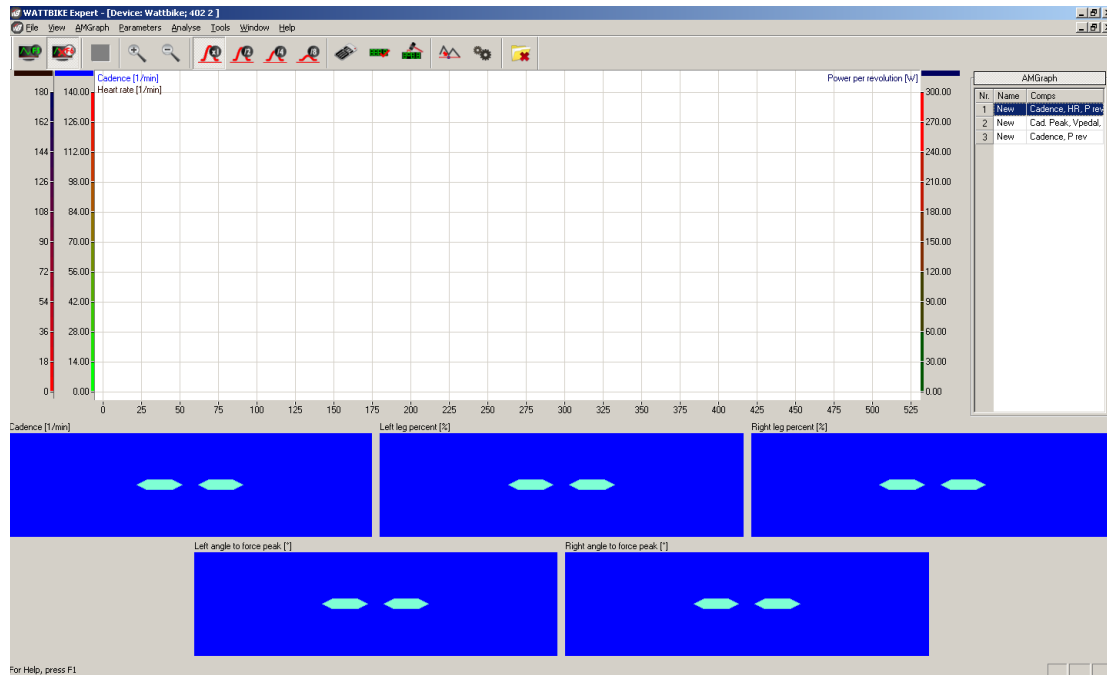


Note the different colours for the **Analysis modules** on the y-axis (vertical) of the graph. These colours represent 'workout zones' and can be set in the **Analyse** function – see next section (these colours also appear in the **Display bar**).




Creating analysis modules zones

Each Analysis module (parameter) can be predefined with zones (and a colour for every zone) representing the quality of that parameter. Resulting bars and background colour of that parameter in the **Display bar** are drawn in the corresponding colour.

1. In the Menu at the top of the screen go to **Analyse** then **Edit Analysis Modules Zones...**

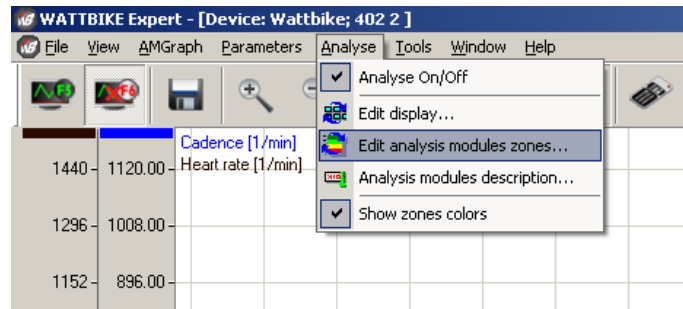

2. The **Edit analysis modules zones** window will open

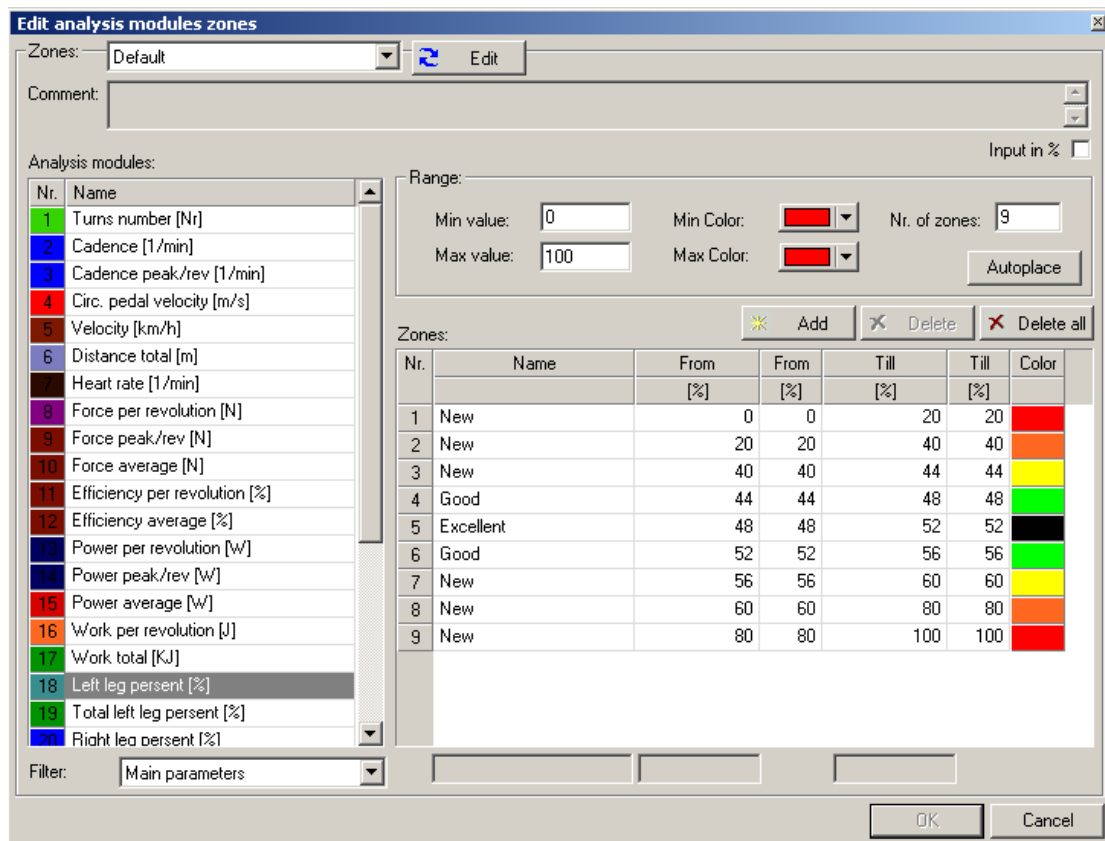

In this example 9 zones for Left and Right leg [%] with the 44-48% and 52-56% named as Good and 48-52% Excellent.




To define **Analysis module zones**:

- Choose the required module from the **Analysis modules** list.
- Define the value range (Min & Max value) and colours (Min & Max colour).
- Define the number of zones.
- Zones can be added, edited, named or deleted manually by choosing the row in the Zones table and changing the values and colours.
- Click the OK button to accept the changes.

3. By placing the curser over the vertical bars on the graph when analyzing a saved workout the appropriate zone will be highlighted. In the example below the highlighted section is left and right leg % in the zone 48% to 52%.

Left and Right leg percent [%]

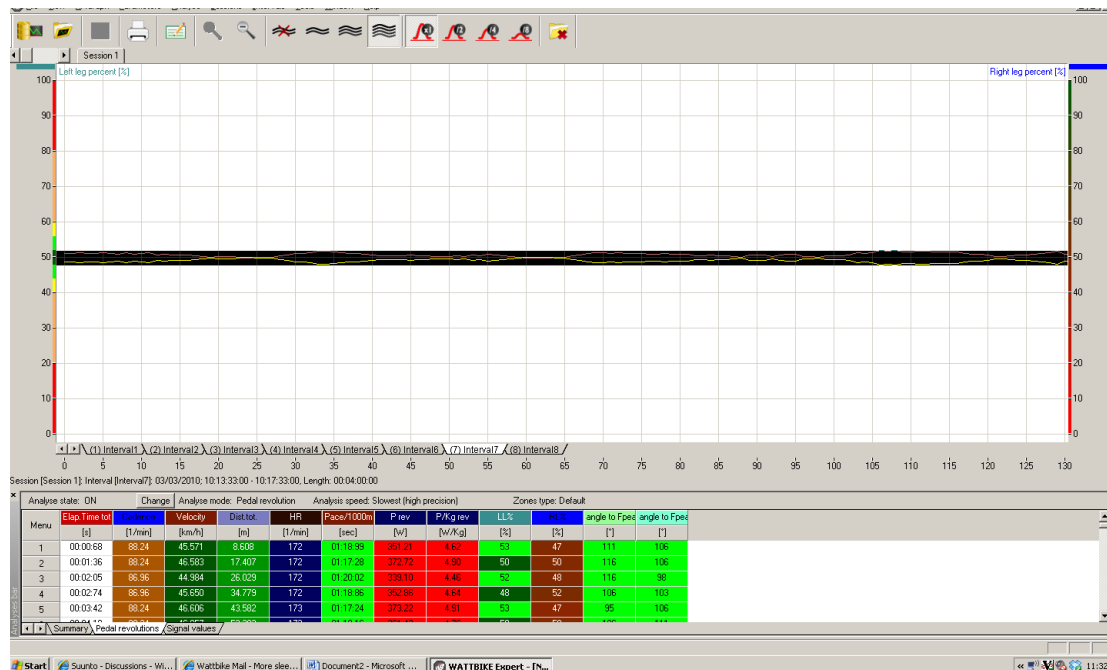





Viewing a Saved workout – Pedal revolution and Time modes

RECALL FROM DATABASE is a function used to open recorded workout data from the database. All workouts saved from the **MONITOR** function or transferred from the Wattbike Performance Computer (using the **TRANSFER** function – see next section) are saved in a **Personal file** (.pdb extension) and listed in the database.


Using the **RECALL FROM DATABASE** function the required record in the database can be recalled.

To recall a Personal file from the database:

1. In the Menu at the top of the screen go to **File** then **Open personal file from database...** or click on the database icon in the **Toolbar**.

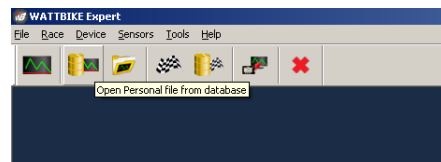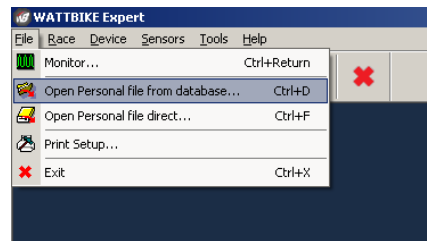


2. The **FIND PERSON RECORD (S)** window will open. Select the record required.

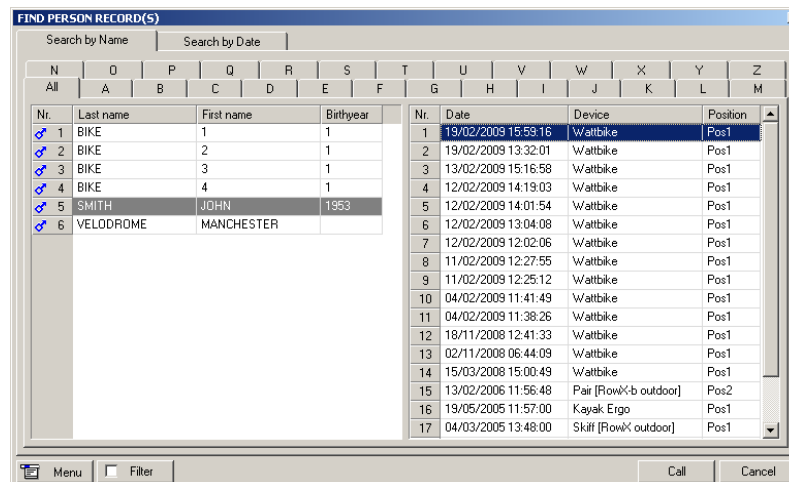


3. Click the **Call** button and the file is opened in **Recall** mode.




4. Once a **Personal file** has been opened from the database the workout can be analyzed in the **Analysis modules graph** mode. To view a **Polar** or **Analysis module graph** click on **View** in the program menu and click on the graph required:

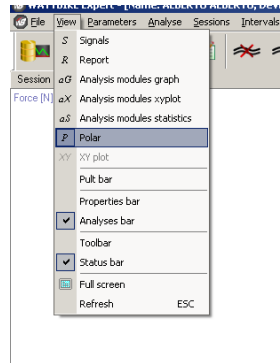

Polar view

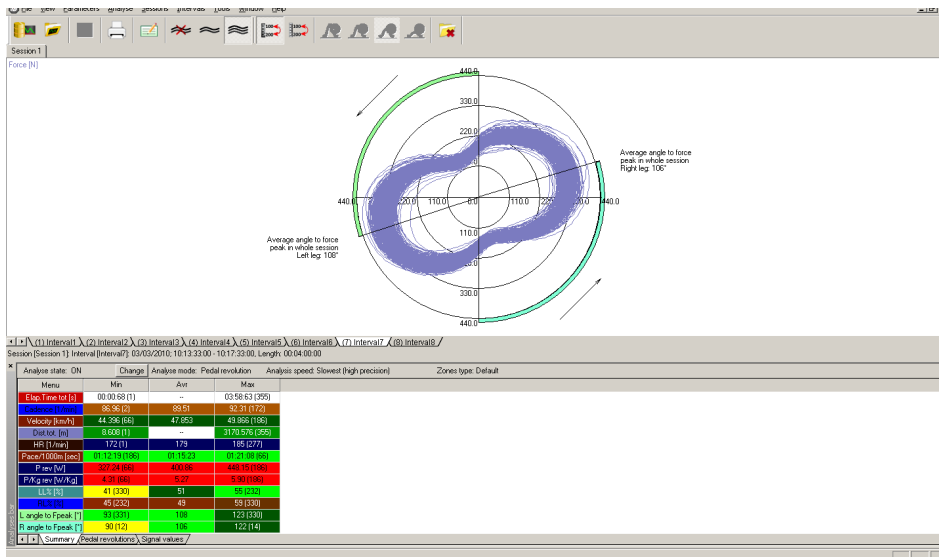

Analysis modules graph view

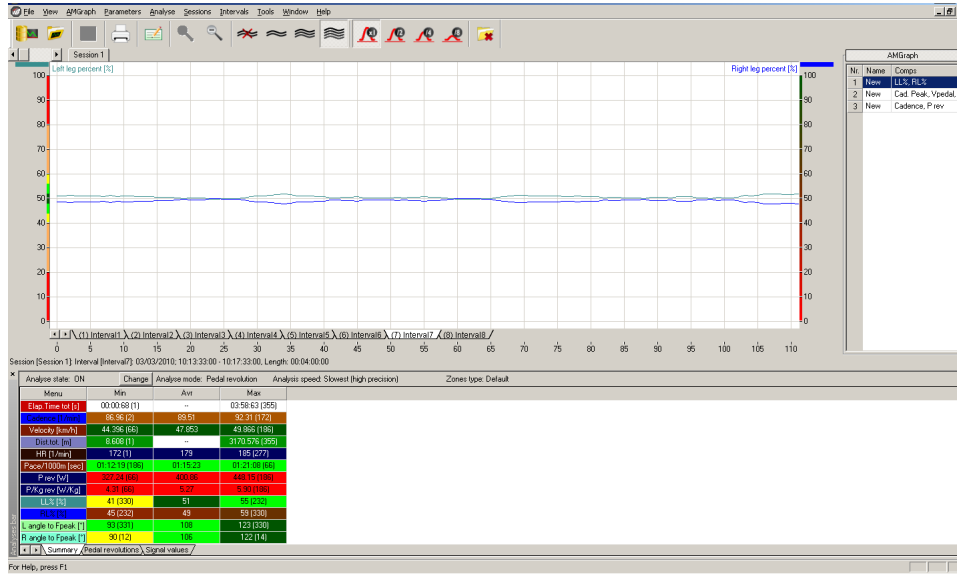

- The data for all 12 default parameters is shown in the Summary tab at in the lower part of the screen.

Session [Session 1]: Interval [Interval7]: 03/03/2010; 10:13:33:00 - 10:17:33:00; Length: 00:04:00:00

Menu	Min	Avr	Max
Elap. Time tot [s]	00:00:68 (1)	--	03:58:63 (355)
Cadence [1/min]	86.96 (2)	89.51	92.31 (172)
Velocity [km/h]	44.396 (66)	47.853	49.866 (186)
Dist tot. [m]	8.608 (1)	--	3170.576 (355)
HR [1/min]	172 (1)	179	185 (277)
Pace/1000m [sec]	01:12.19 (166)	01:15.23	01:21.08 (66)
P rev [w]	327.24 (66)	400.85	448.15 (186)
P/Kg rev [w/Kg]	4.31 (66)	5.27	5.90 (186)
LL% [%]	41 (330)	51	55 (232)
RL% [%]	45 (232)	49	59 (330)
L angle to Fpeak [°]	93 (331)	108	123 (330)
R angle to Fpeak [°]	90 (12)	106	122 (14)


Summary / Pedal revolutions / Signal values

- Click on the **Pedal revolutions** tab to show the **Analyse bar** spreadsheet in the lower part of the screen. Each row of the table represents one pedal revolution with data for the 12 default parameters.

Menu	Elap. Time tot [s]	Cadence [1/min]	Velocity [km/h]	Dist tot. [m]	HR [1/min]	Pace/1000m [sec]	P rev [w]	P/Kg rev [w/Kg]	LL% [%]	RL% [%]	angle to Fpeak [°]	angle to Fpeak [°]
1	00:00:68	88.24	45.571	8.608	172	01:18.98	391.81	4.48	45	47	116	186
2	00:01:36	88.24	45.582	17.407	172	01:17.25	372.75	4.35	50	50	116	186
3	00:02:05	88.96	44.384	26.029	172	01:20.02	338.19	4.45	52	48	116	98
4	00:02:74	88.96	45.650	34.779	172	01:18.06	352.98	4.64	48	52	106	103
5	00:03:42	88.24	45.806	43.582	173	01:17.24	373.22	4.31	53	47	95	186
6	00:04:10	88.24	45.057	52.282	173	01:18.15	361.43	4.75	50	50	106	111
7	00:04:78	88.24	45.207	61.010	172	01:17.31	364.63	4.60	51	48	106	95
8	00:05:45	89.95	45.791	69.718	173	01:16.93	377.25	4.56	53	47	106	104
9	00:06:13	88.24	45.189	78.442	173	01:17.34	364.24	4.75	50	50	116	116
10	00:06:81	88.24	45.270	87.182	173	01:17.80	365.98	4.62	50	50	116	106

Summary / Pedal revolutions / Signal values

Use the **Analyse** then **Edit Display...** function to select the **Analysis modules** (parameters) for analysis or to display all parameters.

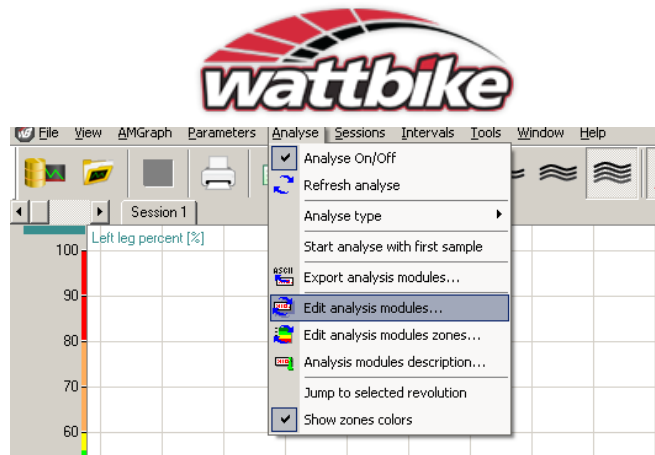


- The main default views are in **Pedal revolution mode**. Workouts can also be viewed in **Time mode**.


Click on the **Change** button in the **Analyse bar**.

Menu	Elap. Time tot [s]	Cadence [1/min]	Velocity [km/h]
1	00:00:68	88.24	45.57
2	00:01:36	88.24	46.58
3	00:02:05	86.96	44.98
4	00:02:74	86.96	45.65
5	00:03:42	88.24	46.60
6	00:04:10	88.24	46.05
7	00:04:78	88.24	46.20
8	00:05:45	89.55	46.79
9	00:06:13	88.24	46.18
10	00:06:81	88.24	46.27


The CHANGE ANALYSE MODE dialogue box will appear – Change to Time mode.

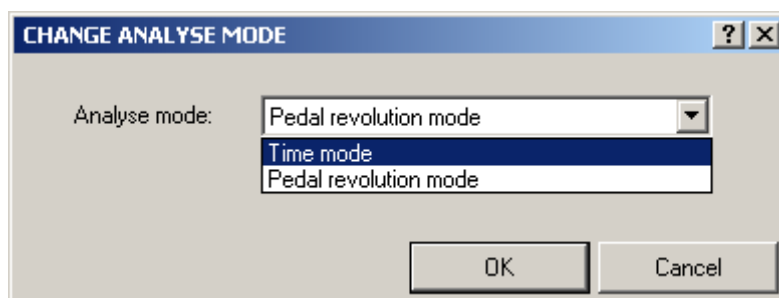

Change the time in mm:ss to the time interval required.

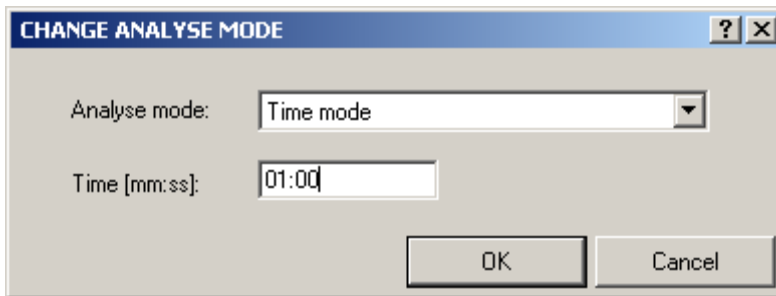

NOTE: In **Time mode** the Polar (force curve is not shown as it is based on pedal revolution data not time.

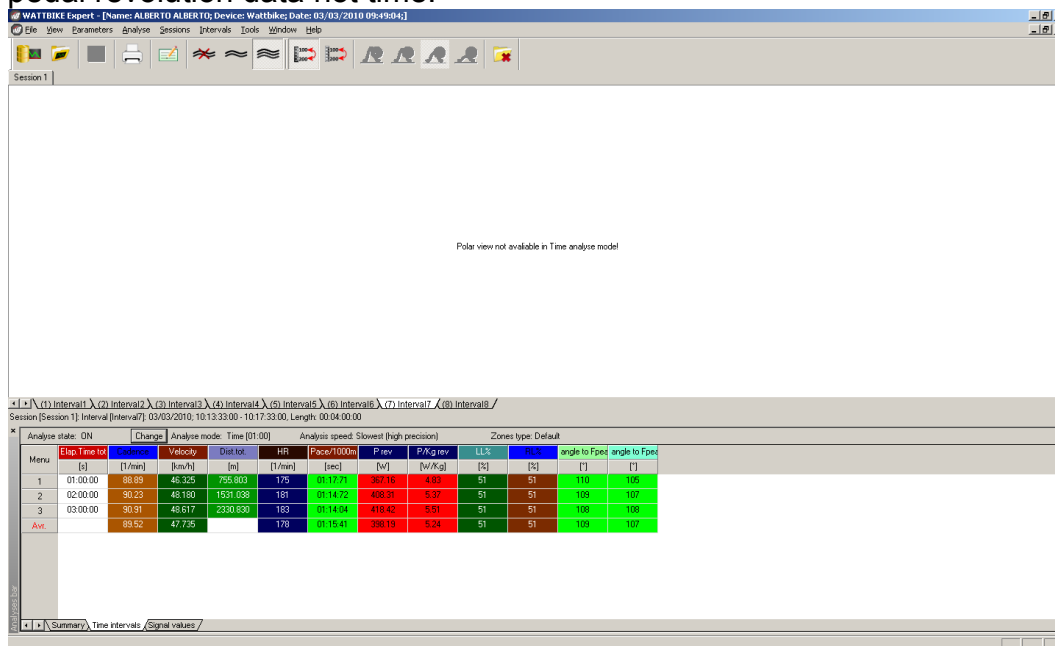




Transferring a workout from the Wattbike Performance Computer


After a workout the data from the **Wattbike Performance Computer** can be transferred to a computer to perform a detailed analysis of the workout.

To transfer data:

1. Click the **Transfer** icon in the **Toolbar**, the software will autodetect the connected Wattbike.

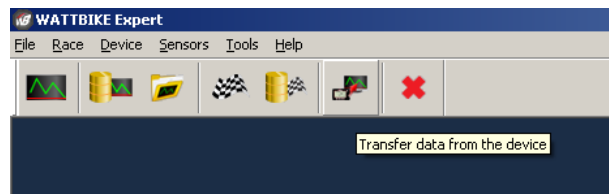

2. The **TRANSFER** window will open showing all the workouts stored in the **Wattbike Performance Computer**. Select one or multiple workouts for transfer.

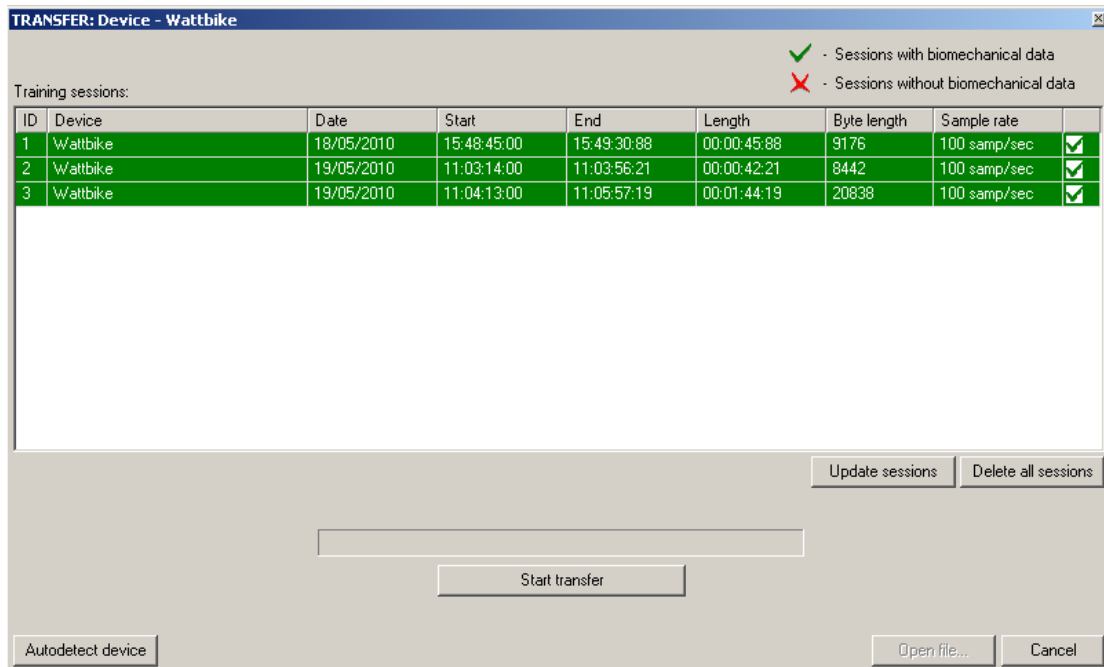

3. Click **Start transfer**.

4. The **Personal data** window will open, chose a destination for the transfer.



Personal data

SMITH JOHN

Last name: SMITH Device: Wattbike
First name: JOHN Sport since: 1980

Address:

Date: 8/18/2008 Sex: Male
Time: 2:02:33 PM Birthyear: 1983

Height: 183 Weight: 90

Email:

Comment:

Template: Recal Browse

Nr.	Last name	First name	Birthyear	Nr.	Date	Time	Device
1	SMITH	JOHN	1983	1	8/18/2008	12:45:45 PM	Wattbike
				2	8/18/2008	11:50:03 AM	Wattbike
				3	8/18/2008	3:00:15 PM	Wattbike

OK Cancel

5. Click **OK** and transfer the workout (s).

6. When the transfer is finished, in the **TRANSFER FINISHED** window click **Open file...** to open transferred workouts in **Recall** Mode or click **Close** to return in main program window.

For users of Training Peaks/WKO + click **Send...** to transfer the log to your Training Peaks account.

TRANSFER FINISHED

TRANSFER OF DATA FINISHED !

Open Personal file with transfered data...

Send data to TrainingPeaks website...

Back to transfer dialog...

Close transfer dialog...




How to Update the Wattbike Performance Computer Firmware


1. Save the Firmware update file to file on your PC (obtained from the Wattbike Download Centre) to your PC.

<http://wattbike.com/uk/wattbike/downloads/>

2. Save any sessions that are stored in the **Memory** to Wattbike Expert if you need to keep them as the update process will clear the **Performance Computer Memory**.
3. During the update process the **Performance Computer** will switch on – this is normal – do not use the **Performance Computer** buttons until the update process has been completed.
4. Open **Wattbike Expert Software**.
5. Click on the '**X**' next to '**Exit**' to clear the Welcome screen.

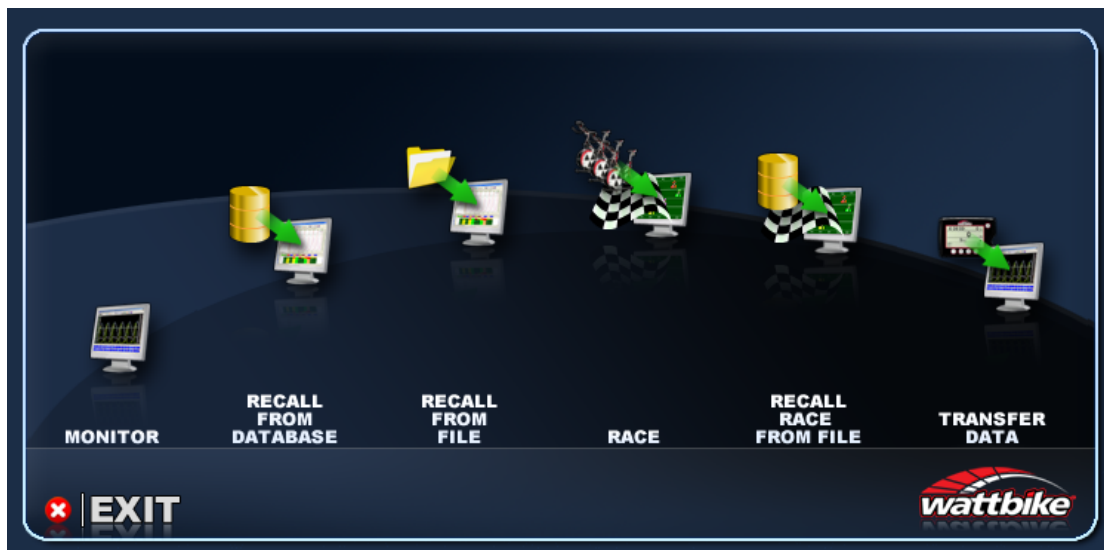


6. Attach a USB cable to the PC and the USB connection on the back of the **Wattbike Performance Computer**.
7. Press **ENTER** and the **ON** button together on the **Wattbike Performance Computer** – a grey margin should appear on the **Wattbike Performance Computer** display.
8. In **Wattbike Expert Software** at the top of the screen - from the '**Menu bar**' choose '**Device**' and '**Update device program ...**'

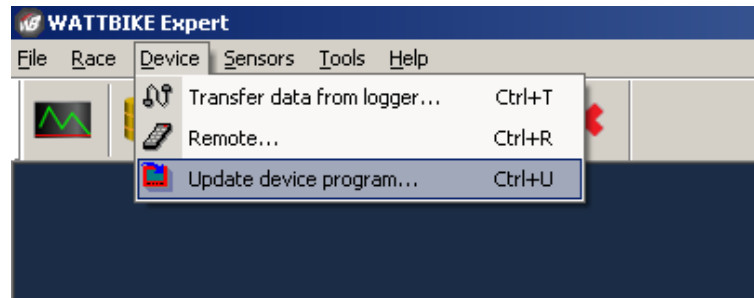

9. If the software does not recognize the **Wattbike Performance Computer** disconnect and reconnect the USB cable.


10. 'Open device update program' window will open.

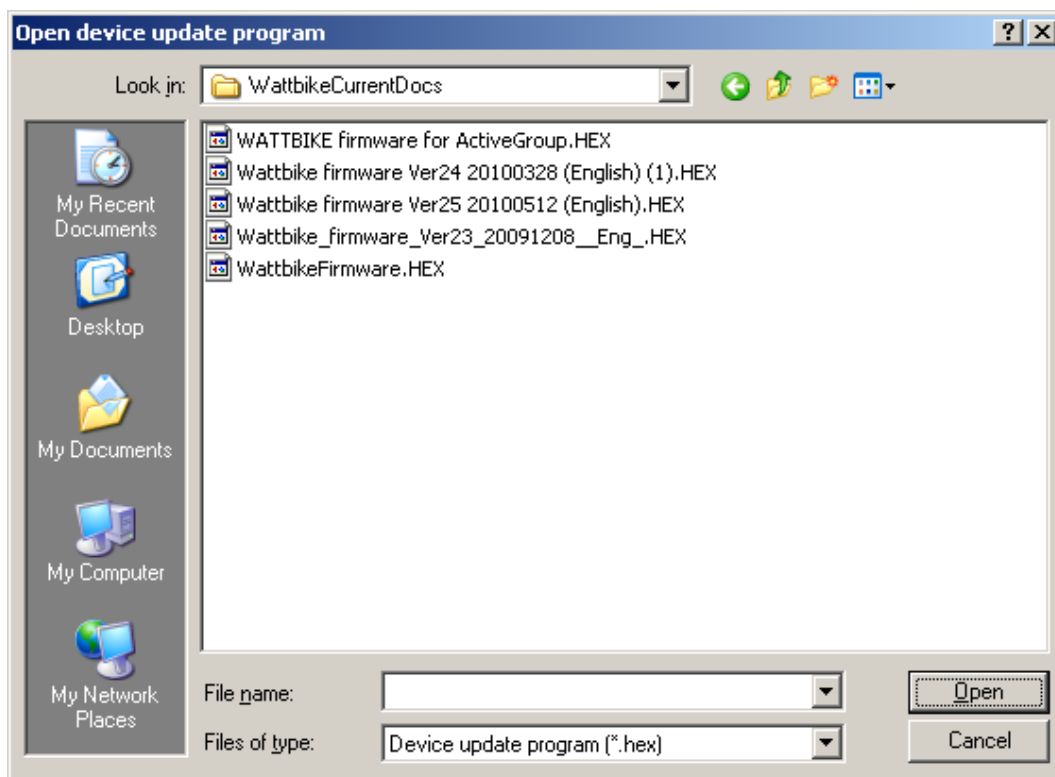

11. Find the saved Firmware update file from file ('**Device update program [*.hex]**').

12. Select the file and click '**Open**' – the update will start automatically.

13. When the update is completed the '**Device**' window will show:

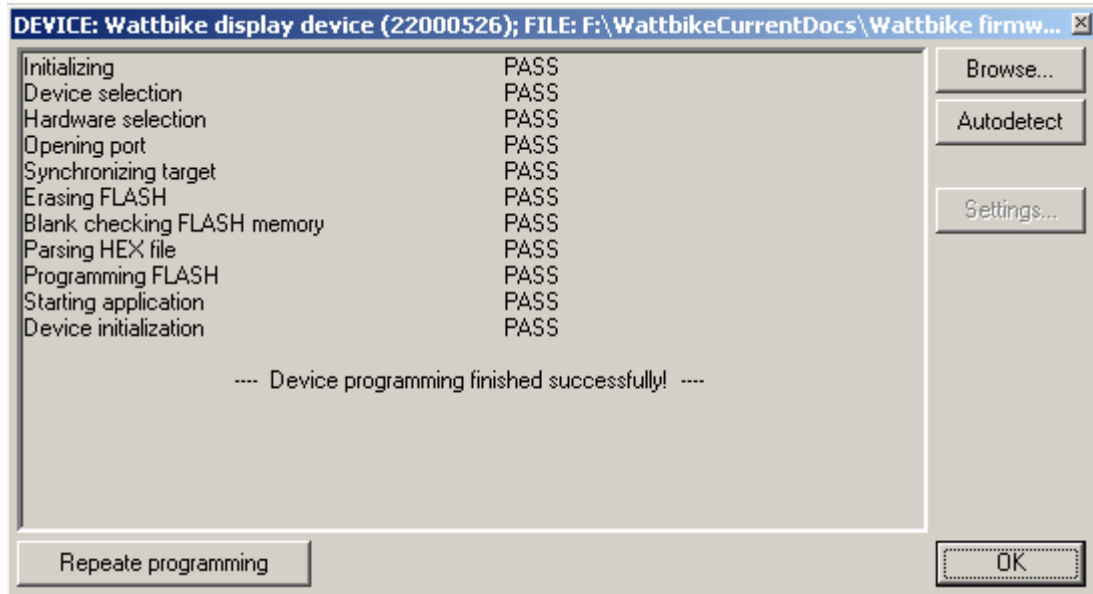

...Device programming finished successfully!


14. Disconnect the USB cable.

15. Your updated **Wattbike Performance Computer** is ready to use.




How to race against the computer

1. Connect the **Wattbike Performance Computer** to the software in the usual way.
2. In **View** click on **Race bar**.

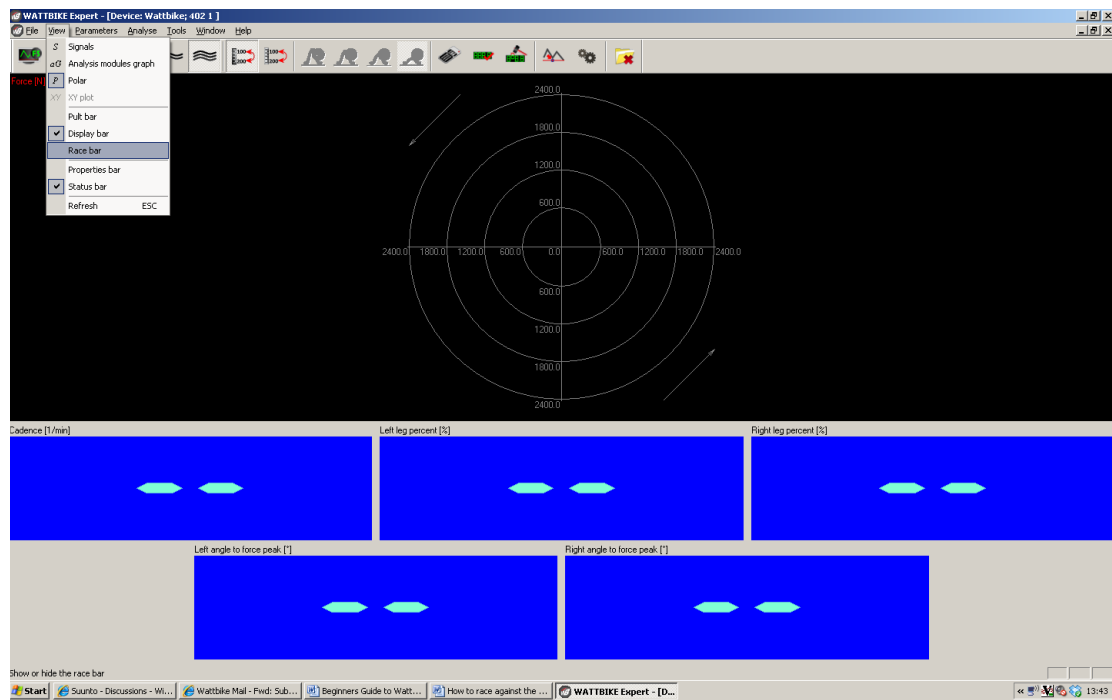


3. The **Computer Vs Named rider** appears at the top of the screen – the default 'race' setting is 1000 m.

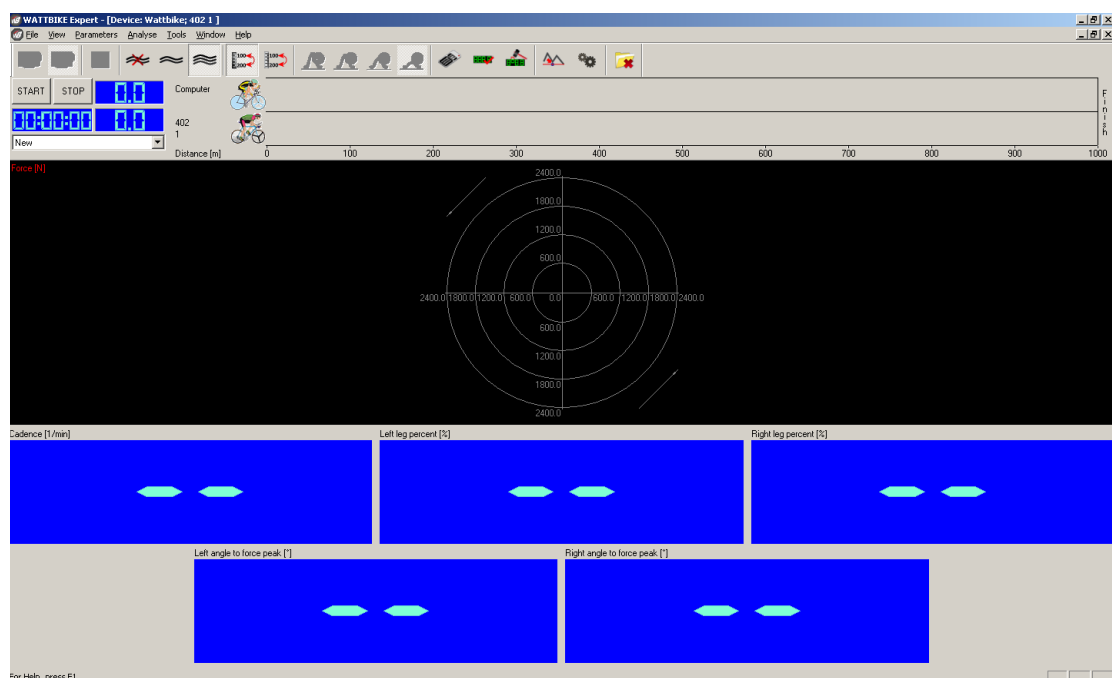






4. Right click on the bike icon then **Edit computer races ...**

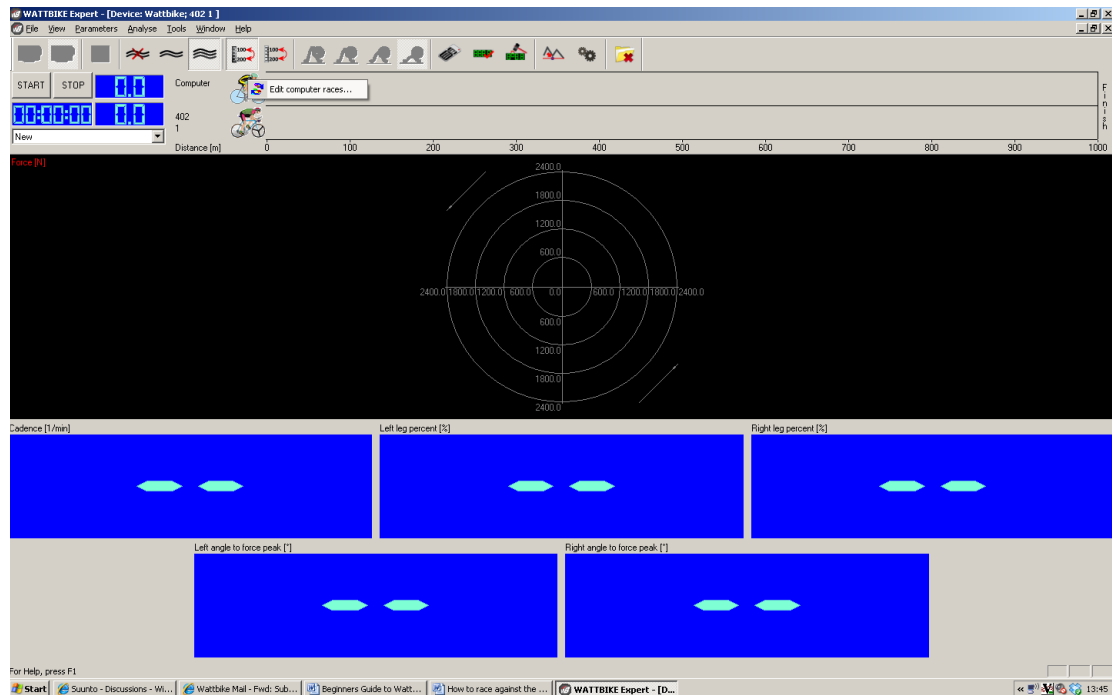


5. The **Edit computer races** dialog box appears – **Add** races as needed, time = pace for the computer bike.

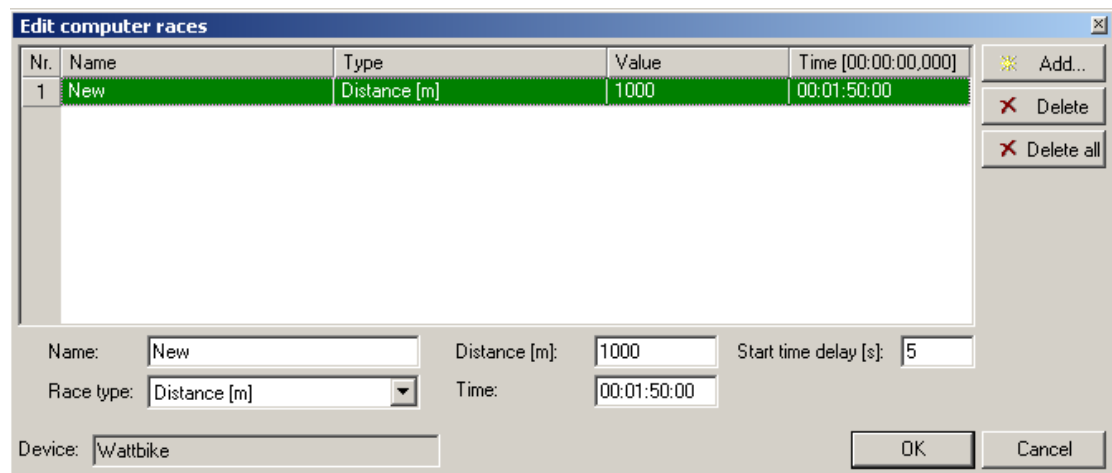

6. Before starting revert to the screen required – Analysis modules graph or Polar – **View** – then **Analysis modules graph** or **Polar** and set up parameters to be displayed on the graph or in the display bar as required.

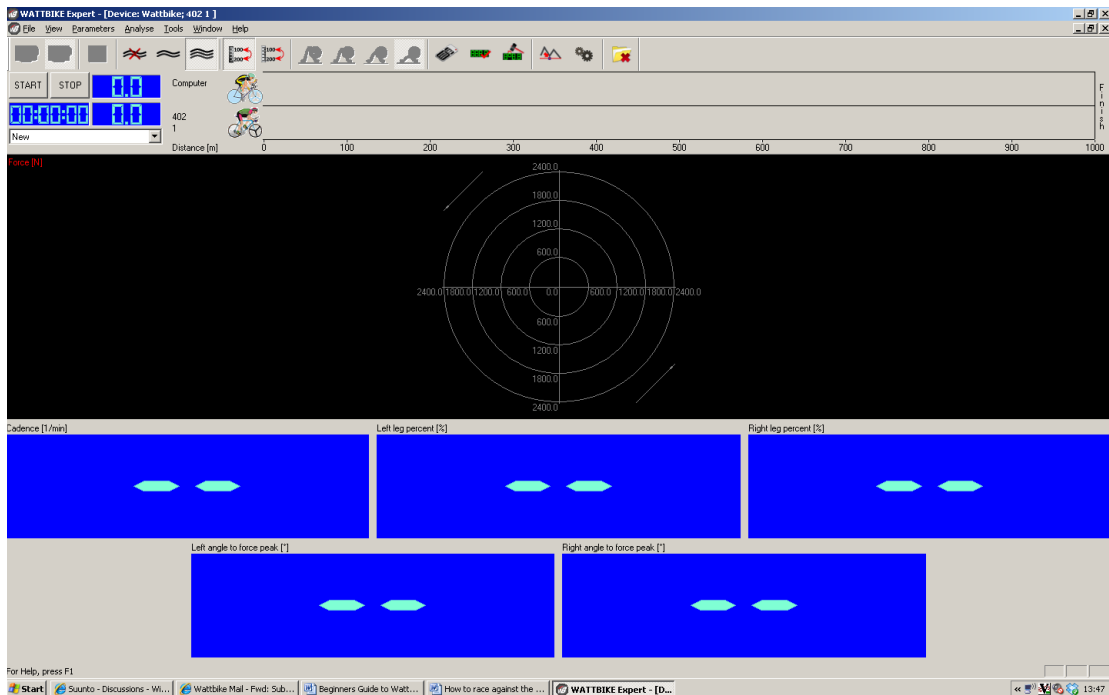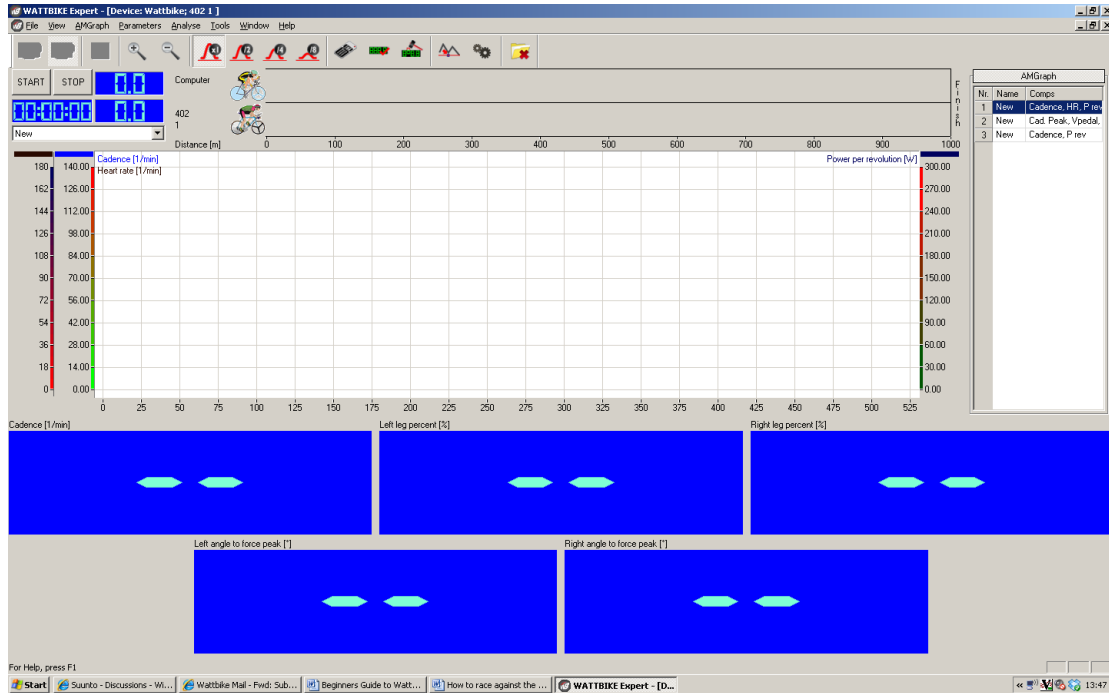

7. The race bar has **START** and **STOP** – box below START and STOP is **Start time delay (s)** and then the two boxes to the right of STOP are distance covered as race progresses.

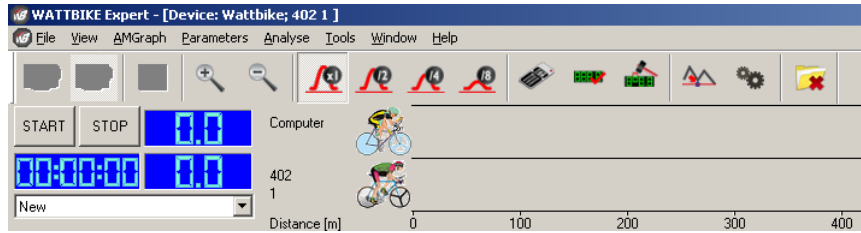

8. Put the **Wattbike Performance Computer** in **Just ride** then press **ENTER**.

9. The **Wattbike Performance Computer** does not revert to the race screen or **ReRide** type display so watch the countdown and go! Time is shown in Expert not in the **Wattbike Performance Computer**.

10. Note that the computer screen is real time i.e. distance covered will lag behind the distance on the **Wattbike Performance Computer**. Also note that the **Wattbike Performance Computer** will keep running after the computer race is finished – this is not like being in the Race system itself – so watch the computer screen for the finish of the ‘race’ and click **STOP**.


11. Once the ‘race’ is finished – **STOP** and **Save** and the data file is in the database.




Other useful functions

A - Scientific mode

Check that the software is in **Scientific mode** to ensure all functions are activated. Go to **Tools** then **Working mode** and change to **Scientific mode**

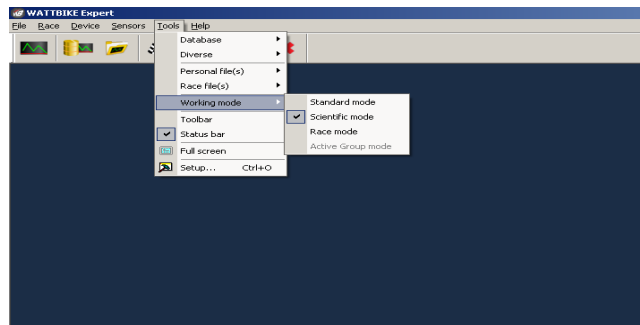

B - Personal file management

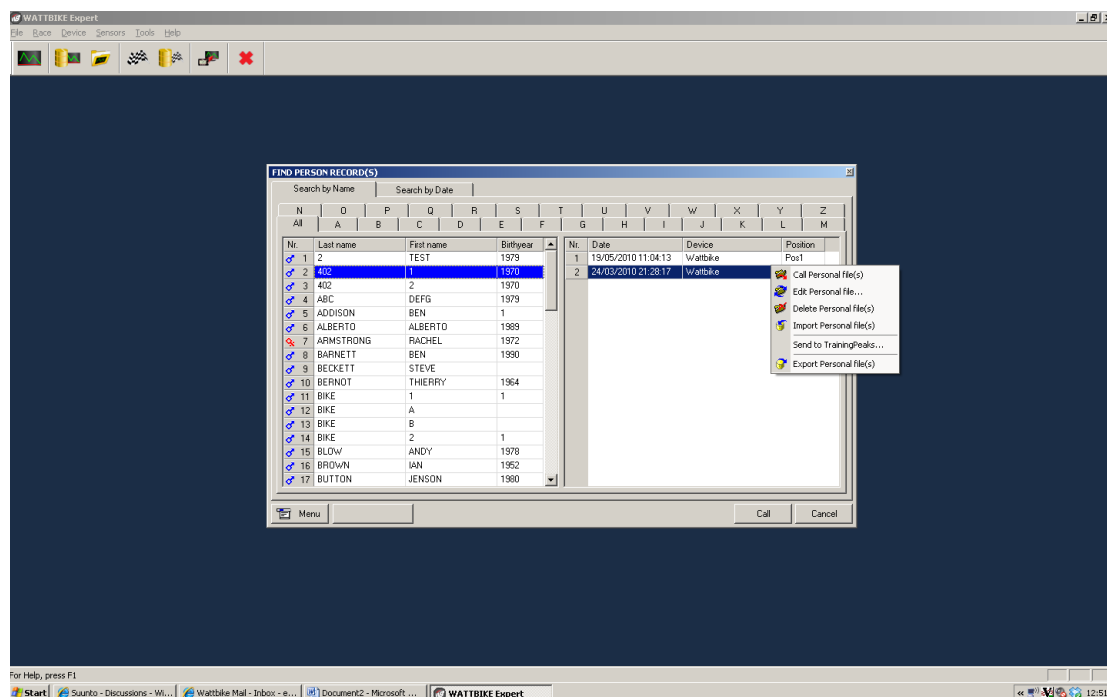


Right click on a file in the database – options:

- Call Personal file (s)**
- Edit Personal file...**
- Delete Personal file (s)**
- Import Personal file (s)**
- Send to TrainingPeaks...**
- Export Personal files (s)**




C - Exporting data

To export the analysis modules data (to Excel for instance) go to **Analyse** then **Export analysis modules...**

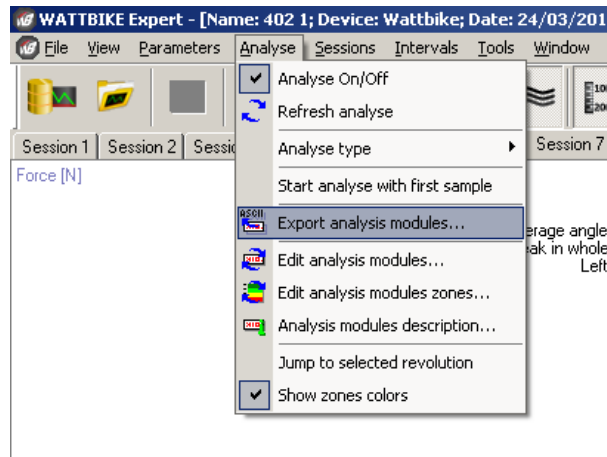


The **Export analysis modules values to ASCII** dialogue box will open, select the **Analysis modules to export:** required and click **Export** and save to a folder

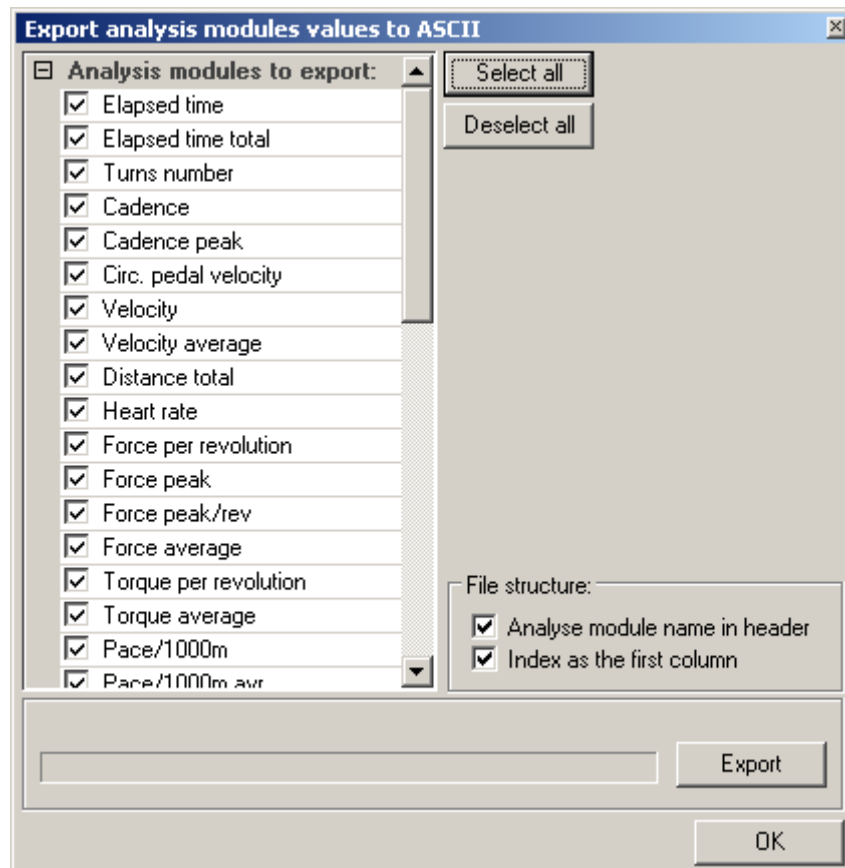




To export the signal data (to Excel for instance) go to **File** then **Export to ASCII**

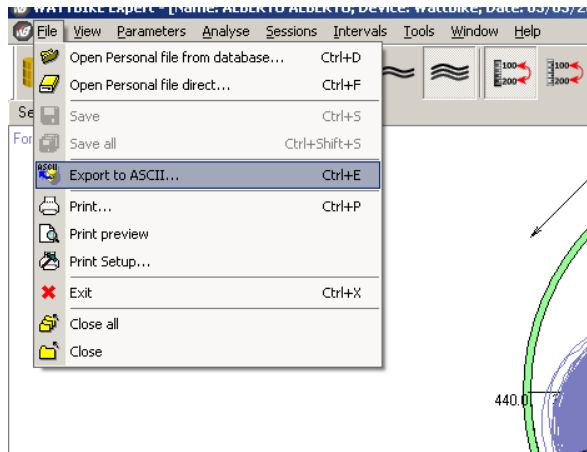


The **Export to ASCII** dialogue box will open, select the **Signals to export**: click **Export** and save the file to a folder

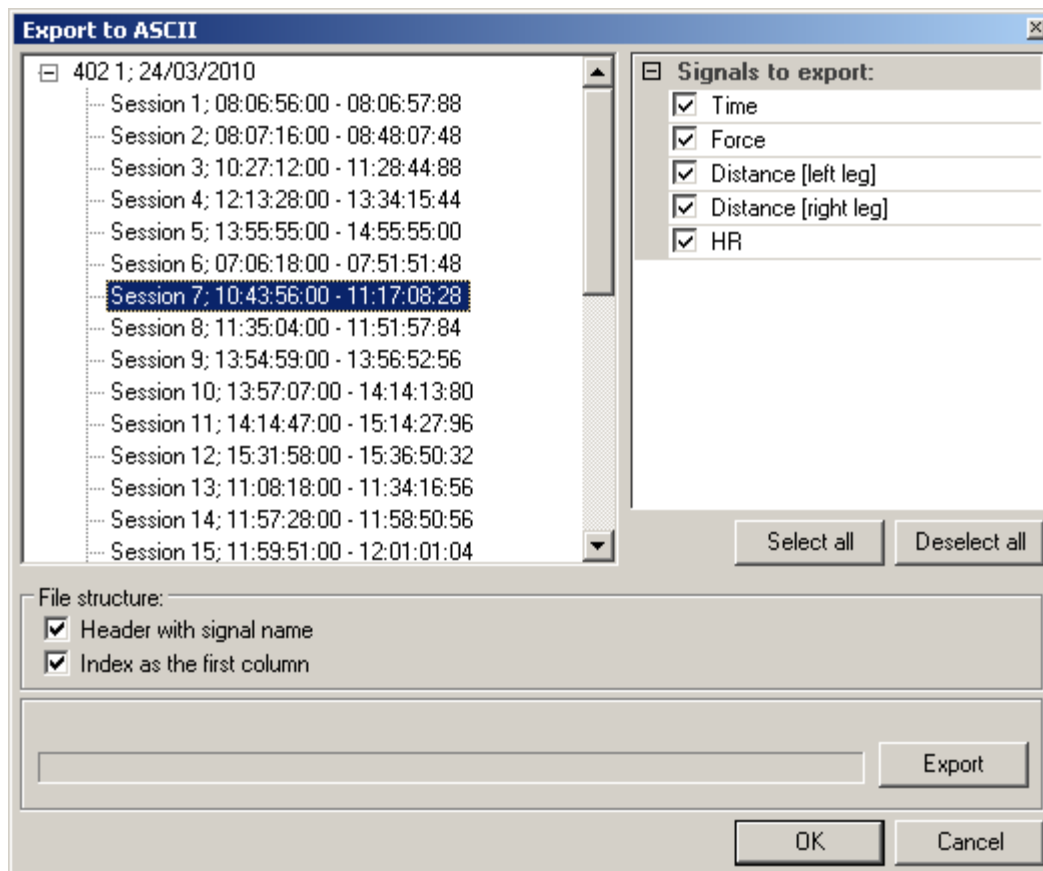



D – Open file Toolbar

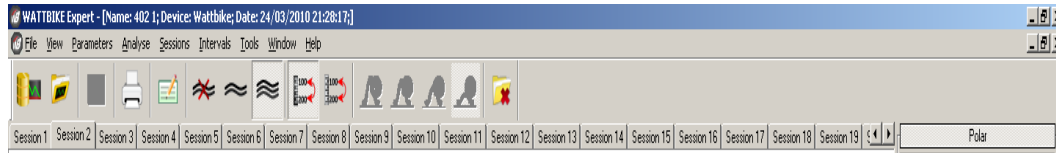

Moving from left to right the icons are:

Open Personal file from database

Open Personal file from media

Save Personal file

Print the active document

Personal file comment

Filter off

Filter 1

Filter 2

Autoscale

Manual scale

Amplitude X1 and /2 and /4 and /8 – for use with Manual scale

Close

E – Start analyse with first sample

Used to smooth the data and remove a first partial pedal revolution. Go to **Analyse** make sure **Analyse On/off** is on and switch off **Start analyse with first sample**

