

08-01002-01

Elastic Networks
Elite Modem
Installation Guide

Document Version: Standard
Document Revision: 2.01
Publication Date: November 1999



EtherLoop™ Technology

©1999 Elastic Networks

The Elite Modem Installation Guide is copyrighted and all rights are reserved. This document may not, in whole or in part, be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine readable form without prior consent in writing from Elastic Networks. EtherLoop is a trademark of Elastic Networks. IBM is the trademark of International Business Machines, Incorporated; Windows 95, Windows NT and Windows 3.1 are trademarks of Microsoft, Incorporated; Quadra 610, OS 7.5, Mac, and Macintosh are trademarks of Apple Computer.

Elastic Networks

Elite Modem

Installation Guide

Publication Number: 08-01002-01
Document Version: Standard
Document Revision: 2.01
Publication Date: November 1999

© 1999 Elastic Networks
All rights reserved

All information contained in this document is subject to change without notice. Elastic Networks reserves the right to make changes to equipment design or program components, as progress in engineering, manufacturing methods, or other circumstances may warrant.

EtherLoop is a trademark of Elastic Networks.

Publication history

November 1999

Standard document (Revision 2.01) released for general publication.

October 1998

Standard document initial release for general publication.

Contents

About this document	vii
Safety Considerations	vii
Elite Modem Requirements	viii
Installing the Elite Modem	1-1
The Elite Modem	1-2
The Elite Modem and the EtherLoop System	1-2
Always-on Internet connection	1-2
Factory-tested components	1-2
Materials Included with the Elite Modem	1-3
Task: Installing the Modem	1-5
Modem Indicators	1-6
Status and Activity Indicators	1-6
Additional telephones on the modem phone line	1-7
Task: Installing the Desk Mount Filter	1-8
Task: Installing the Wall Mount Filter	1-9
Appendix A: Troubleshooting	A-1
Appendix B: Regulatory Information	B-1
FCC Compliance Information	B-1
FCC Information to User	B-2
Customer Instructions	B-2
Industry Canada Compliance Information	B-4
Appendix C. Warranty and Disclaimers	C-1
Coverage	C-1
Exclusions	C-2

About this document

This document provides instructions for installing, using and troubleshooting the Elite Modem. Before installing or using the modem, be sure to read the Safety Considerations and Elite Modem Requirements in this section.



Safety Considerations

The Elite Modem complies with the regulatory requirements of CSA C22.2#950-M95 for Canada and UL 1950 Edition 3 for the United States. Although this product is designed with your complete safety in mind, there are precautions you should adhere to for your individual safety as well as the safety of your equipment. These precautions include, but are not limited to the following:

- Read and understand all instructions.
- Place your modem on a stable surface. Dropping the modem can cause damage that is not covered under the manufacturer's warranty.
- Do not disassemble the modem! Opening the unit may expose you to electrical shock!
- Use caution when installing or modifying telephone lines.
- Do not use modem near water to avoid shock hazard.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected.
- Avoid installing telephone wiring during an electrical storm.
- Do not place objects on top of modem.

Elite Modem Requirements

The Elite Modem has specific requirements. Please insure that all of the information and equipment is available prior to proceeding with the installation procedure. The requirements are as follows:

Requirement	Description
Elite Modem Service	Contact your local Internet service provider (ISP) and subscribe to high-speed Internet service. Your modem will not function until the common local exchange carrier activates the service.
Network Access	A 10Base-T Ethernet Card with a standard RJ-45 connector must be installed and configured in your computer. Any computer (MAC, PC, UNIX workstation) that can run Windows 3.1 or OS5 or higher can be used with the Elite Modem.
Network Address	Internet Protocol (IP) address from your Internet service provider or corporate IS network administrator. Simply ask for the IP address requirements for your connection. Your Internet service provider must use TCP/IP protocol.
Only one Elite Modem per phone line	The Elite Modem will not operate with multiple computers. Only the computer that is directly connected to the Elite Modem through the 10Base-T Ethernet cable is supported.
Elite Modem must be connected to line one (1) on multiple line telephone systems	Data transfer rates will vary somewhat, depending on the speed of your computer, the network (ISP, corporate, etc.) through which you are communicating, and the speed and connection of the computer with which you are transferring data.

If you need help, call distributor technical support.

Installing the Elite Modem

This chapter describes the Elite Modem and contains the installation procedures for the modem and support equipment.

Chapter contents

This chapter includes the following information.

Table 1-1.

Topic	See
The Elite Modem	page 1-2
Materials Included with the Elite Modem	page 1-3
Modem Indicators	page 1-6
Additional telephones on the modem phone line	page 1-7

Chapter task list

This chapter includes the following tasks.

Task	See
Installing the Modem	page 1-5
Installing the Desk Mount Filter	page 1-8
Installing the Wall Mount Filter	page 1-9

The Elite Modem

The Elite modem allows an end user with an Ethernet-configured PC and an ordinary phone line to access the Internet or corporate intranet at multi-megabit speeds. The Elite Modem also permits simultaneous voice (or analog data) transmission on the same telephone line. You can use the standard telephone cable provided in the installation kit to connect a telephone, fax, or answering machine directly to your Elite Modem.

This document contains all of the procedures you need to install and use the Elite Modem. This guide takes you through step-by-step procedures for installing the modem.

The Elite Modem and the EtherLoop System

The Elite Modem is a component of an EtherLoop system. EtherLoop is an Elastic Networks technology that supports high-speed data simultaneously with voice using existing phone lines. If the other network components of the EtherLoop system have not been correctly installed, ***the Elite modem will not work.***

Contact your service provider or distributor technical support if you have problems completing the installation.

Always-on Internet connection

The Elite Modem is a state-of-the-art, high-speed data modem that delivers an “always-on” connection to a service provider or corporate Information Service (IS) network. This direct access eliminates the time-consuming dial-up sequence that is required by other modems. You won’t have to dial and wait to access the Internet or download large files to your home computer.

Factory-tested components

The Elite Modem has been factory-tested. If you have a problem using the modem, review the procedures in this guide. Contact your service provider or distributor technical support if you have questions.

Materials Included with the Elite Modem

The Elite modem contains standard RJ-11 telephone and jack interfaces to connect the existing voice facility, and a 10Base-T Ethernet RJ-45 interface to connect the Ethernet cable from the end-user PC.

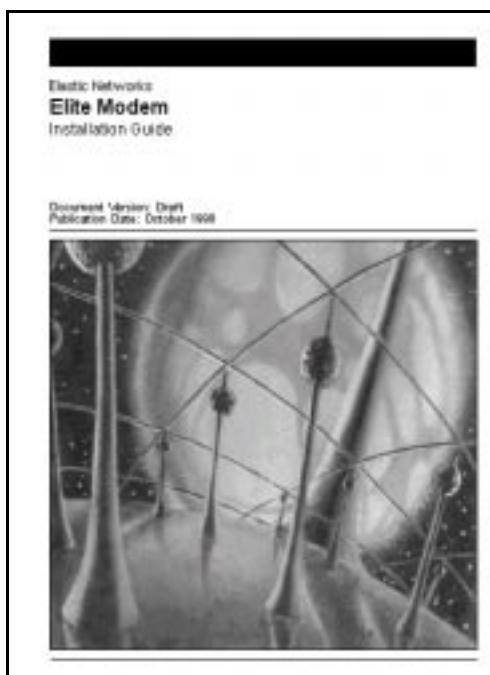
The following table shows the components included in the Elite Modem package. If you are missing any item, contact your product distributor for a replacement.

Table 1-2List of Materials

Description	Item
Elite Modem	
Class 2, 5V, AC Power Supply	
10Base-T Ethernet Cable Assembly, RJ-45, 8 PIN 8 Conductor	
Cable Assembly, RJ-11, 6 PIN, 6 Conductor	

1-4 Installing the Elite Modem

Table 1-2List of Materials

Description	Item
Elite Modem User's Guide	 The image shows the front cover of the "Elite Modem Installation Guide". The title "Elite Modem" is prominently displayed in the center, with "Installation Guide" below it. At the bottom of the cover, it says "Document Version: Draft" and "Publication Date: October 1998". The background of the cover features a black and white photograph of a satellite dish or antenna system against a dark, star-filled background.

Task: Installing the Modem

Note: Some computers require an adapter between the RJ-45 Ethernet cable and the Ethernet connector on the back of the computer (the adapter is often a round, 8-pin connector).

Step	Action
1	Make sure that all of your Elite Modem equipment is available before proceeding.
2	Connect the RJ-45 Ethernet cable to the 10Base-T Ethernet Card connector on the rear of your computer. Connect the other end of cable to the Ethernet port on the rear of the modem labeled: To PC .
3	Your telephone is connected with an RJ-11 modular phone line cord to a telephone wall jack. Disconnect the telephone line cord from the telephone wall jack and insert it into the jack in the rear of the modem identified with this icon: 
4	Connect the RJ-11 modular phone cord to the connector on the rear of the modem labeled, To Wall Jack . This connector is identified with a telephone line symbol.
5	Insert the other end of the phone cord into the telephone wall jack.
6	Connect the rounded plug end of the power supply cord into the 5V AC connector on the rear of the modem.
7	Plug the power supply into wall outlet. This completes the modem physical installation. Proceed to Setup. At this point, the Power and the Loop Status indicator lights should be green.
	Note: See "Modem Indicators" on page 1-6 for more information on the Elite modem LED indicators.



You have completed this task.

Modem Indicators

Status and Activity Indicators

The front panel of the Elastic Networks Elite Modem has six status and activity indicators. Currently four of the indicators are used. The indicators provide you with modem status and diagnostic information as listed in the following table.

Table 1-2. Elite Modem Front Panel Indicators

Position (left to right)	Indicator
1	Reserved
2	Power
3	PC
4	Network
5	Transfer
6	Reserved

Additional telephones on the modem phone line

The Elite Modem allows you to hook-up your computer and telephone to the same line, providing simultaneous voice service with high-speed data service. Telephones or answering devices connected directly to the Elite Modem do not require external telephone filters. The Elite Modem has a built-in voiceband filter on the telephone connection, so that the signal noise of the data traffic does not interfere with voice conversations.

However, if you have additional phones (on different jacks) connected to the same line as the modem (extension phones, etc.), you may need an external filter.

Test all additional lines for correct operation (no data noise) while the Elite Modem is running and in service. If you hear noise interference while using an extension phone, you may need to install a telephone filter between that phone and its wall jack. Test all extension telephones for noise interference and install filters as needed using the task instructions on the following pages.

Table 1-3. Telephone Filters

Filter	Description
 Desk Mount Filter	Use to connect fax machines, answering machines, and desk telephones that are not directly connected to the Elite Modem. See "Installing the Desk Mount Filter" on page 1-8.
 Wall Mount Filter	Use with wall-mounted telephones. See "Installing the Wall Mount Filter" on page 1-9.

You can order voiceband filters from the Elite Modem product distributor or service provider.

Task: Installing the Desk Mount Filter

It is important that the telephone filters be installed correctly. Follow these instructions precisely. If the telephone filter is installed incorrectly (reversed), the filter will not allow voice signals to pass. (See Figure 1-1, Desk Mount Filter Connections.)

Step	Action
1	Check for a dial tone.
2	Disconnect the telephone line cord from the wall jack and insert it into the jack on the filter identified with this telephone icon:
3	A 7-foot RJ-11 telephone line cord is supplied with the filter. Connect one end of the line cord into the jack on the filter identified with this icon:
4	Plug the other end of the 7-foot line cord into the wall jack.
5	Verify that there is a dial tone. If a dial tone is not present, check all connections.

- 1 Check for a dial tone.
- 2 Disconnect the telephone line cord from the wall jack and insert it into the jack on the filter identified with this telephone icon:




- 3 A 7-foot RJ-11 telephone line cord is supplied with the filter. Connect one end of the line cord into the jack on the filter identified with this icon:



- 4 Plug the other end of the 7-foot line cord into the wall jack.
- 5 Verify that there is a dial tone. If a dial tone is not present, check all connections.

Figure 1-1. Desk Mount Filter Connections

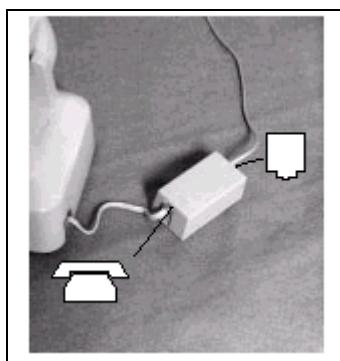

You have completed this task.


Task: Installing the Wall Mount Filter

It is important that the telephone filters be installed correctly. Follow these instructions precisely. If the telephone filter is installed incorrectly (reversed), the filter will not allow voice signals to pass. (See Figure 1-2, Wall Mount Filter Installation.)

Step Action

- 1 Check for a dial tone.
- 6 Remove the telephone from its wall mount by pushing it upward and pulling it away from the mounting pins. The telephone may have a short "pig tail" line cord connecting it to the jack. If the phone has a "pig tail" line cord, disconnect it from the wall jack.
- 7 Plug the filter's short "pig tail" line cord into the wall jack.
- 8 Install the wall mount filter by placing it over the wall jack and sliding it downward until it is seated on the mounting pins.
- 9 Plug the telephone "pig tail" line cord into the jack located on the front of the filter.
- 10 Install the telephone on wall mount filter.
- 11 Verify dial tone. If a dial tone is not present, check all connections.

Figure 1-2. Wall Mount Filter Installation

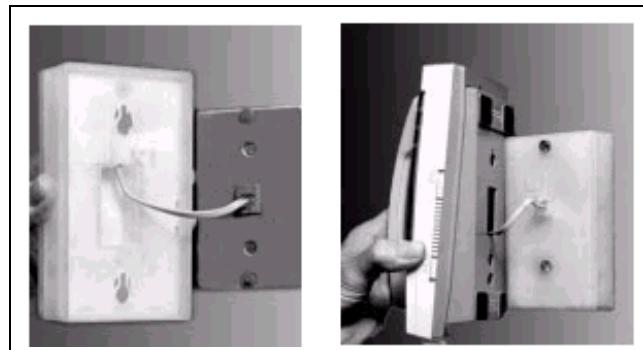

You have completed this task.

1-10 Installing the Elite Modem

Appendix A: Troubleshooting

Table A-1. Modem Troubleshooting

Problem	Troubleshooting
No Modem Power/Power Light Off	Make sure there is power to the outlet. Check the connection to the modem. (Make sure the modem is plugged in). If the power indicator is not lit, try another power cord. If the indicator is still not lit, call distributor technical support.
No data transfer	<p>Check these items in the following order:</p> <p>1. PC Light is OFF Make sure the cable between the Etherport or modem and the back of the computer is properly connected. If the PC Light remains off, try another cable. If the indicator is still not lit, call distributor technical support.</p> <p>2. Transfer Light is OFF This light will briefly blink GREEN when the computer attempts to send data, and briefly blink when data is sent to the computer. If it doesn't light when the computer sends data, AND the PC Light is ON, call distributor technical support.</p> <p>3. Network Light is Off Check the connection to the network. The light should be GREEN. If the Network light is YELLOW, make sure the Elmo shelf has power. If not call distributor technical support. .</p>

Table A-1. Modem Troubleshooting

Problem	Troubleshooting
No data transfer <i>(continued)</i>	<p>4. Network Light is Red</p> <p>The Elite Modem is not receiving any signal from the Internet service provider. Make sure all connections are well-connected and the computer is set up correctly.</p> <p>Make sure the phone has a clear dial tone. Call your service provider (phone company). If you are on a corporate network, contact the network IS administrator, and make sure the service provider is having no technical problems. If the noise persists, call distributor technical support.</p> <p>5. Network Light is Yellow</p> <p>The modem is trying to synchronize with the service provider. Make sure the modem is at least 12 inches from the monitor. Wait three minutes for the light to turn steady GREEN, which indicates they are synchronized and data should transfer.</p> <p>If Network Light doesn't turn GREEN in three minutes, call your service provider (phone company). If you are on a corporate network, contact the network IS administrator, and make sure the service provider is having no technical problems. Call distributor technical support.</p> <p>6. Transfer Light Remains Off</p> <p>Make sure all cables are properly installed and connected. If the Transfer Light remains off, call distributor technical support.</p>

Table A-1. Modem Troubleshooting

Problem	Troubleshooting
Noise interference on the extension telephone when using the modem	<p>Make sure the extension phone is properly filtered. If a filter is installed, this noise could be a faulty filter, line cord, phone service, phone, or the Elite Modem. While using the modem, try to eliminate these possibilities in the following order:</p> <ol style="list-style-type: none"> 1. Turn OFF the Elite Modem. Make a call on your extension phone and check the noise. If the noise is gone, the modem may have a fault. 2. Exchange the line cord between the modem and the wall jack with a known good line cord. Check the noise. If it persists, place the known good line cord between the modem and the phone. 3. If you have a known good spare phone, use it to replace the suspect phone. If the noise goes away, the telephone is bad. If the noise persists, it may be the Elite Modem. Contact distributor technical support. 4. Call your phone service and ask them to check the line for noise. If they assure you that the noise problem is not with their equipment, check your phone unit.
Noise interference on the telephone connected to the modem	<p>The Elite Modem has a built-in filter to prevent this. The noise could be a faulty line cord, phone, the Elite Modem, or it could be coming from your phone service. Try to eliminate these possibilities in the following order:</p> <ol style="list-style-type: none"> 1. Disconnect the phone from the modem and connect it directly to the wall jack, bypassing the modem. Disconnect the modem from the wall jack. If the noise is gone, you should probably solve the problem by replacing the Elite Modem. If the noise persists, it may be your phone service. 2. Check your telephone line cords by exchanging them one at a time with a known good line cord. If you eliminate the line cords as a possibility, check the phone unit. 3. If you have a known good spare phone, use it to replace the suspect phone and reconnect the modem. A new phone may eliminate the noise. If the noise persists, call distributor technical support.

Table A-1. Modem Troubleshooting

Problem	Troubleshooting
Low data throughput rates/It seems to take a long time to download files to your computer	<p>File transfer rates depend not only on the Elite Modem, but also on the speed of your computer, the network that you are communicating through (ISP, corporate net, etc.), and the speed and connection of the computer you are attempting to transfer data to and from.</p> <p>If you know your files are being transmitted to your computer with high-speed equipment and your downloads still seem slow, it's possible your modem is connected to more than one computer.</p> <p>The Elite Modem supports only one computer at a time. Your computer may inadvertently be connected logically (or physically) into a hub or other network configuration that looks like multiple computers to the modem. Call your corporate IS network administrator and have any other computers removed from the modem.</p>
Your PC cannot communicate with your Internet service provider	<p>First, make sure that all network software applications are properly installed and configured. Double check to make sure the IP address is correct. Call your telephone service provider and make sure Elite Modem service is enabled.</p> <p>Next, call your ISP help desk. If you are on a corporate network, call the network IS administrator. Make sure your service is active and that the network is not experiencing technical difficulties.</p>

Appendix B: Regulatory Information

FCC Compliance Information

Federal Communications Commission

Compliance Information Statement (FCC Rules Section 2.1077)

2.1077 (a) (1) Product identification

Name: Elite Modem

Product code: 01-00004-01

2.1077 (a) (2) Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference, and
- 2 This device must accept any interference receive, including interference that may cause undesired operation.

2.1077 (a) (3) Responsible Party (FCC 2.909)

Elastic Networks

6120 Windward Parkway, Suite 100

Alpharetta, GA 30005

Phone: 678-297-3100

Fax: 678-297-3110

2.1007 (C) The compliance information statement shall be included in the user guide or as a separate sheet.

FCC Information to User

(FCC Rules Section 15.105(b)):

Note: The Elite Modem has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio and television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Customer Instructions

The Phone Filters comply with part 68 of the FCC Rules. On the back of this equipment is a designator that contains the FCC registration number and ringer equivalence for this equipment. If requested, this information must be provided to the telephone company. The equipment uses the following standard connections and codes: USOC-RJ-11.

The Ringer Equivalence Number (REN) shown on the filter is used to determine the quantity of devices which may be connected to the telephone line. Excessive RENs on the telephone line may result in another device not ringing in response to an incoming call. The sum of the RENs should not exceed (5). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

If the equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

The equipment can not be used on public coin phone service provided by the telephone company. Connection to party lines is subject to state tariffs. (contact the state public utility commission, public service commission or corporation commission for information).

No repairs can be performed by the user. If you experience trouble with this equipment and/or for repair and warranty information, please contact distributor technical support.

Industry Canada Compliance Information

EMISSIONS:

(Per ICES-003, Issue 2 “Interference-Causing Equipment Standard, Digital Apparatus”):

This Class B digital apparatus meets all requirements of the Canadian interference-causing equipment regulations.

Cet Appareil numerique de la Class B respecte toutes les exigences du reglement sur le materiel brouilleur du Canada.

EQUIPMENT ATTACHMENT LIMITATION

NOTICE: The Industry Canada Label identifies certified equipment. This certification means that the equipment meets telecommunications network protective, operational and safety requirements as prescribed in the appropriate Modem Equipment Technical Requirements document(s). The department does not guarantee the equipment will operate to the user's satisfaction.

Before installing this equipment, users should insure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation in service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment or equipment malfunctions may give the telecommunications company cause to request the user to disconnect the equipment.

Users should insure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas. Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

NOTICE: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirements that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five (5).

Appendix C. Warranty and Disclaimers

Coverage

Elastic Networks warrants this modem set against defects and malfunctions for a period of ninety days from the date of original purchase. If there is a defect or malfunction, Elastic Networks at its option, and as the exclusive remedy, upon receipt of the defective set will either repair or replace this modem set at no charge, if returned within the warranty period.

If replacement parts are used in making repairs, these parts may be refurbished or may contain refurbished materials. If it is necessary to replace the modem, it may be replaced with a refurbished modem of the same design and color. If it should become necessary to repair or replace a defective or malfunctioning modem under this warranty, provisions of this warranty shall apply to the repaired or replaced modem set until the expiration of ninety (90) days from the date of pick-up or the date of shipment to you of the repaired or replacement set or until the end of the original twelve month warranty period, whichever is later.

Exclusions

Elastic Networks does not warrant this modem set to be compatible with the equipment of any particular telephone company. This warranty does not extend to damage to the product resulting from improper installation or operation, alteration, or neglect, or abuse, or misuse, fire or natural causes such as storms or floods after the modem is in your possession.

Elastic Networks shall not be liable for any incidental or consequential damages, including but not limited to loss, damage, or expense directly or indirectly arising from the customer's use of or inability to use this modem, either separately or in combination with other equipment. This paragraph, however, shall not apply to consequential damages for injury to the person in the case of modems used or bought for use primarily for personal, family or household purposes.

This warranty sets forth the entire liability and obligations of Elastic Networks with respect to breach of warranty, and the warranties set forth or limited herein are the sole warranties and are in lieu of all other warranties, expressed or implied including warranties of fitness for particular purpose and merchantability.

Elastic Networks

Elite Modem

Installation Guide

© 1999 Elastic Networks
All rights reserved

The information contained in this document is subject to change without notice. Elastic Networks reserves the right to make changes to equipment design or program components, as progress in engineering, manufacturing methods, or other circumstances may warrant.

EtherLoop is a trademark of Elastic Networks

Publication Number: 08-01002-01
Document Version: Standard.
Document Revision: 2.01
Publication Date: November 1999

Printed in the United States of America

