

<b>DTC</b>	<b>P0604</b>	<b>Internal Control Module Random Access Memory (RAM) Error</b>
<b>DTC</b>	<b>P0606</b>	<b>ECM / PCM Processor</b>
<b>DTC</b>	<b>P0607</b>	<b>Control Module Performance</b>
<b>DTC</b>	<b>P0657</b>	<b>Actuator Supply Voltage Circuit / Open</b>

## MONITOR DESCRIPTION

The ECM continuously monitors its own internal memory status, internal circuits, and output signals transmitted to the throttle actuator. This self-check ensures that the ECM is functioning properly. If any malfunction is detected, the ECM sets the appropriate DTC and illuminates the MIL.

The ECM memory status is diagnosed by internal mirroring of the main CPU and the sub CPU to detect Random Access Memory (RAM) errors. The two CPUs also perform continuous mutual monitoring. The ECM illuminates the MIL and sets a DTC if: 1) outputs from the two CPUs are different or deviate from the standards, 2) the signals sent to the throttle actuator deviate from the standards, 3) a malfunction is found in the throttle actuator supply voltage, and 4) any other ECM malfunction is found.

DTC No.	DTC Detection Conditions	Trouble Areas
P0604 P0606 P0607 P0657	ECM internal error (1 trip detection logic)	ECM

## MONITOR STRATEGY

Related DTCs	P0604: ECM RAM error P0606: ECM range check P0607: ECM CPU malfunction P0657: ETCS power supply
Required Sensors/Components (Main)	ECM
Required Sensors/Components (Related)	-
Frequency of Operation	Continuous
Duration	P0604: Conditions met for 6 times P0606: 1 second P0607 and P0657: Within 1 second
MIL Operation	Immediate
Sequence of Operation	None

## TYPICAL ENABLING CONDITIONS

Monitor runs whenever following DTCs not present	None
--	------

## TYPICAL MALFUNCTION THRESHOLDS

### ECM RAM errors (P0604):

RAM mirror check	Fail
------------------	------

### ECM CPU range check (P0606):

Either of following conditions met:	-
Difference between throttle valve position of main CPU and throttle valve position of sub CPU	0.3 V or more

Difference between accelerator pedal position of main CPU and accelerator pedal position of sub CPU	0.3 V or more
---	---------------

**ECM CPU malfunction (P0607):**

CPU reset	Occurred
-----------	----------

**Electronic throttle control system power supply function of ECM malfunctions (P0657):**

ETCS (Electronic Throttle Control System) power supply when ignition switch turned to ON	7 V or more
--	-------------

**HINT:**


Read freeze frame data using an intelligent tester. Freeze frame data record the engine condition when malfunctions are detected. When troubleshooting, freeze frame data can help determine if the vehicle was moving or stationary, if the engine was warmed up or not, if the air-fuel ratio was lean or rich, and other data, from the time the malfunction occurred.

**ES**

<b>1</b>	<b>CHECK ANY OTHER DTCS OUTPUT (IN ADDITION TO DTC P0604, P0606, P0607 OR P0657)</b>
----------	--

**Result**

Display (DTC output)	Proceed To
P0604 or P0606 or P0607 or P0657	A
P0604 or P0606 or P0607 or P0657 and other DTCS	B

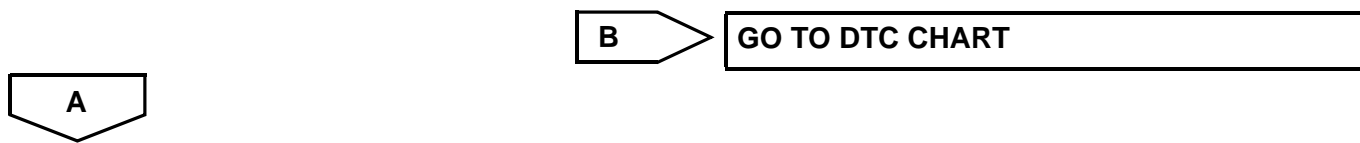

**REPLACE ECM**