


TS and CG Terminal Circuit

DESCRIPTION

In sensor check mode, malfunctions of the speed sensor that cannot be detected when the vehicle is stopped are detected while driving.


Transition to the sensor check mode can be performed by connecting terminals TS and CG of the DLC3 and turning the ignition switch from OFF to the ON position.

WIRING DIAGRAM

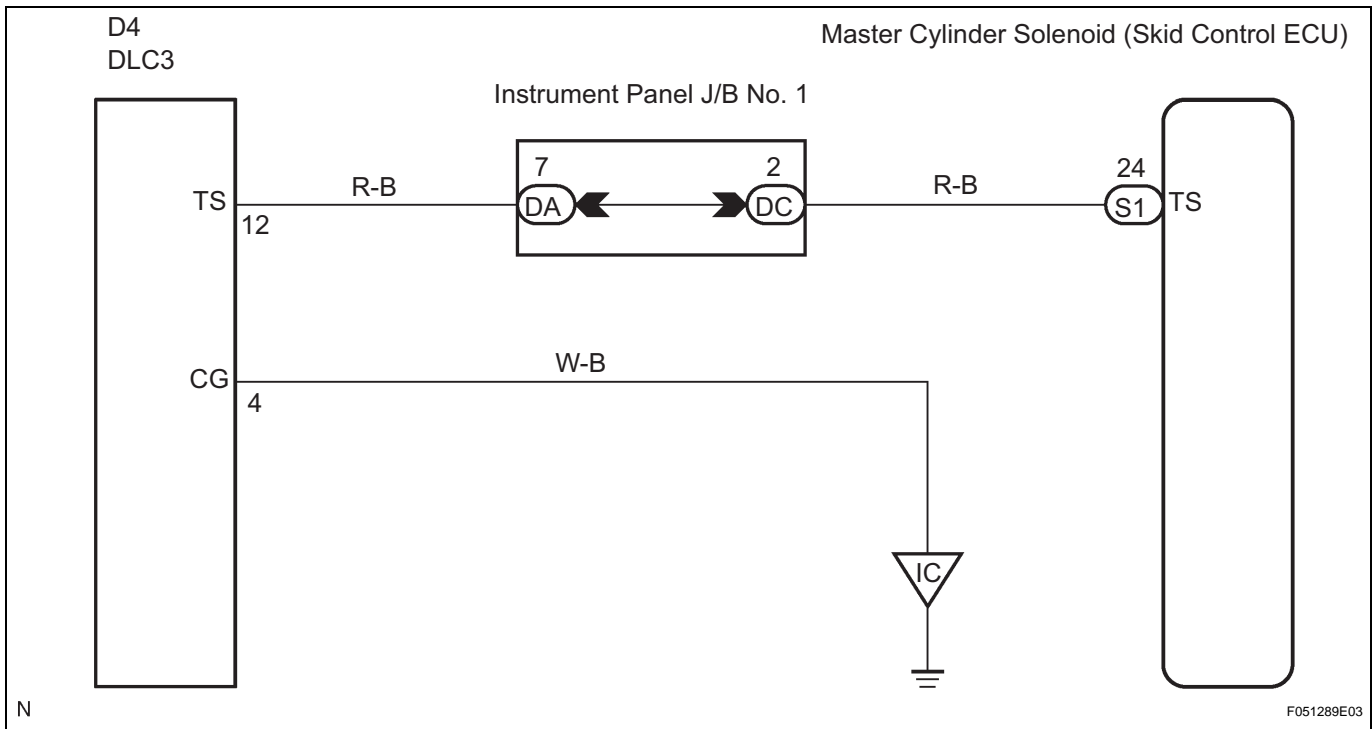

BC

1 INSPECT DLC3 (TS TERMINAL VOLTAGE)

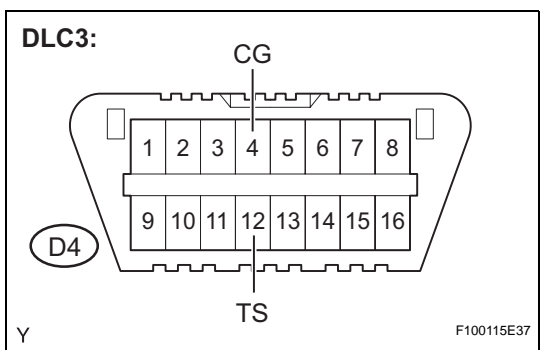

- (a) Turn the ignition switch to the ON position.
- (b) Measure the voltage.

Standard


Tester Connection	Specified Condition
D4-12 (TS) - D4-4 (CG)	10 to 14 V

- (c) Turn the ignition switch to OFF.

NG → **Go to step 3**

OK

2 CHECK HARNESS AND CONNECTOR (SKID CONTROL ECU - DLC3)

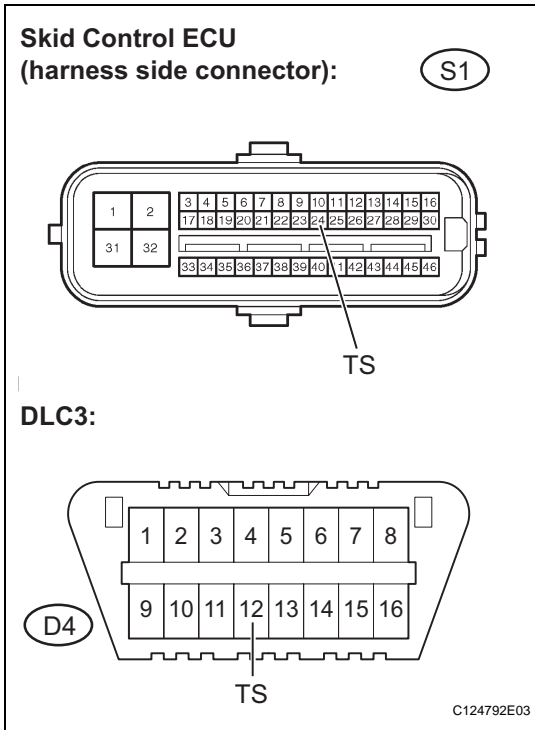

- (a) Disconnect the skid control ECU connector.
- (b) Measure the resistance.

Standard

Tester Connection	Specified condition
S1-24 (TS) - D4-12 (TS)	Below 1 Ω

- (c) Measure the resistance.

Standard

Tester Connection	Specified Condition
S1-24 (TS) - Body ground	10 kΩ or higher


- (d) Reconnect the skid control ECU connector.

NG REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

REPLACE MASTER CYLINDER SOLENOID BC

3 CHECK HARNESS AND CONNECTOR (BODY GROUND - DLC3)

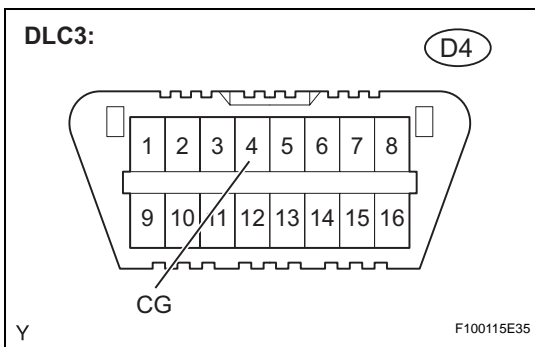

- (a) Measure the resistance.


Standard

Tester Connection	Specified condition
D4 (CG) - Body ground	Below 1 Ω

NG REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

4 CHECK HARNESS AND CONNECTOR (SKID CONTROL ECU - DLC3)

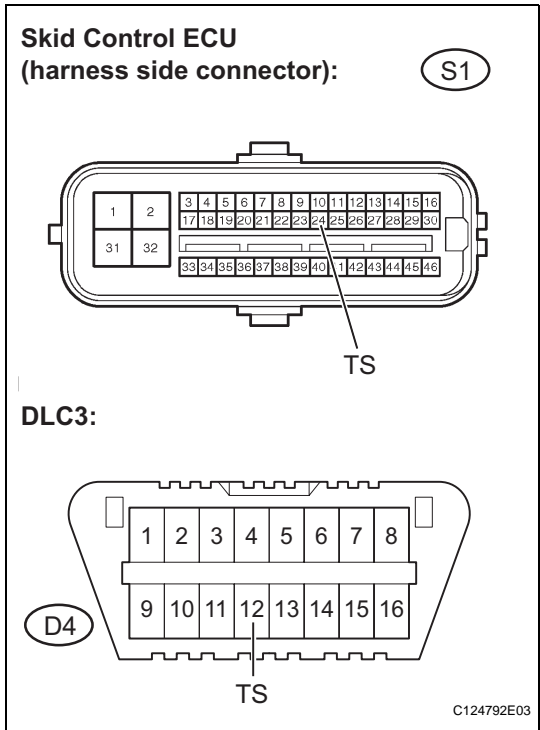

- (a) Disconnect the skid control ECU connector.
- (b) Measure the resistance.

Standard

Tester Connection	Specified condition
S1-24 (TS) - D4-12 (TS)	Below 1 Ω

- (c) Measure the resistance.

Standard

Tester Connection	Specified Condition
S1-24 (TS) - Body ground	10 kΩ or higher

- (d) Reconnect the skid control ECU connector.

NG → **REPAIR OR REPLACE HARNESS OR CONNECTOR**

OK

BC REPLACE MASTER CYLINDER SOLENOID