

# **Machine Automation Controller**NX1

# Powerful functionality in a compact design




# **Features**

- · Fast and accurate control by synchronizing all machine devices with the PLC and Motion Engines
- Three built-in industrial Ethernet ports
- OPC UA server functionality
- Up to 12 axes of control via EtherCAT
- Up to 32 local NX I/O Units
- DC power supply without battery backup
- Fully conforms to IEC 61131-3 standard programming
- · PLCopen Function Blocks for Motion Control allow users to create complex programs quickly and easily
- Direct connection to a database, with no special unit, software, or middleware required (NX102-□□20)

# **System Configuration**

# **Basic System Configuration**

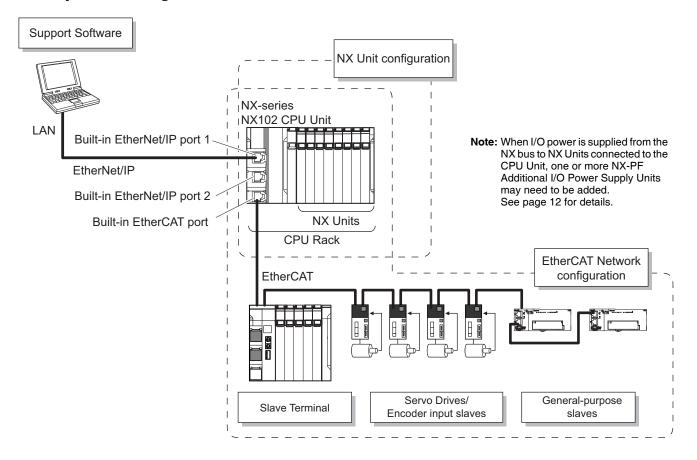

# **Ordering Information**

### Applicable standards

Refer to the OMRON website (www.ia.omron.com) or ask your OMRON representative for the most recent applicable standards for each model.

### **NX-series NX102 CPU Units**

			Specifica	itions			
				Maximum	number of used	l real axes	
Produc	ct name	Program capacity	Memory capacity for variables		Motion control axes	Single-axis position control axes	Model
NX102				12	8	4	NX102-1200
CPU Unit	CPU Unit			8	4	4	NX102-1100
				6	2	4	NX102-1000
	基础		1.5 MB (Retained during power inter-	4	0	4	NX102-9000
NX102		5 MB	ruption)/32 MB (Not retained during power interruption)	12	8	4	NX102-1220 *1
Database Connection	N.			8	4	4	NX102-1120 *1
CPU Unit				6	2	4	NX102-1020 *1
				4	0	4	NX102-9020 *1

<sup>\*1.</sup> NX102-1220-DH, NX102-1120-DH, NX102-1020-DH, NX102-9020-DH are products equipped with time series data collection system. Consult your Omron sales representative for details.

Note: 1. One NX-END02 End Cover is provided with the NX102- $\square\square\square$ , and the HMC-SD292 Memory Card is provided with the NX102- $\square\square$ 20.

2. The battery is not mounted when the product is shipped. Refer to the *Battery* for details.

# **NX Units**

# **Digital Input Units**

				Specifications		
Product Name	Number of points	Internal I/O common	Rated input voltage	I/O refreshing method	ON/OFF response time	Model
			12 to 24 VDC	Switching Synchronous I/O refreshing and	20 μs max./400 μs max.	NX-ID3317
DC Input Unit		NPN		Free-Run refreshing		NX-ID3343
DO III PUR OIII	4	INFIN	24 VDC	Input refreshing with input changed time only *1	100 ns max./100 ns max.	NX-ID3344
3	4 points		12 to 24 VDC	Switching Synchronous I/O refreshing and	20 μs max./400 μs max.	NX-ID3417
		PNP		Free-Run refreshing		NX-ID3443
		1111		Input refreshing with input changed time only *1	100 ns max./100 ns max.	NX-ID3444
Screwless Clamping Terminal		NPN	24 VDC			NX-ID4342
Block, 12 mm	8 points	PNP		Switching Synchronous I/O refreshing and	00 //00	NX-ID4442
Width)	40	NPN	1	Free-Run refreshing	20 μs max./400 μs max.	NX-ID5342
	16 points	PNP	1			NX-ID5442
(M3 Screw Terminal Block, 30 mm Width)	16 points	For both NPN/PNP	24 VDC	Switching Synchronous I/O refreshing and Free-Run refreshing	20 μs max./400 μs max.	NX-ID5142-
DC Input Unit	16 points	For both	24 VDC	Switching Synchronous I/O refreshing and	20 us max./400 us max.	NX-ID5142-
(MIL Connector, 30 mm Width)	32 points	NPN/PNP		Free-Run refreshing	To be made too be made.	NX-ID6142-
DC Input Unit  (Fujitsu Connector, 30 mm Width)	32 points	For both NPN/PNP	24 VDC	Switching Synchronous I/O refreshing and Free-Run refreshing	20 μs max./400 μs max.	NX-ID6142-

				Specifications		
Product Name	Number of points	Internal I/O Rated input voltage		I/O refreshing method	ON/OFF response time	Model
AC Input Unit						
(Screwless	4 points	200 to 240 \ (170 to 264 \	/AC, 50/60 Hz /AC, ±3 Hz)	Free-Run refreshing	10 ms max./40 ms max.	NX-IA3117
Clamping Terminal Block, 12 mm Width)						

<sup>\*1.</sup> To use input refreshing with input changed time, the EtherCAT Coupler Unit with unit version 1.1 or later and the Sysmac Studio version 1.07 or higher are required.

# **Digital Output Units**

				Specificatio	ns		
Product Name	Number of points	Internal I/O common	Maximum value of load current	Rated voltage	I/O refreshing method	ON/OFF response time	Model
	2	NPN PNP	0.5 A/point, 1 A/Unit	24 VDC	Output refreshing with specified time stamp only *1	300 ns max./ 300 ns max.	NX-OD2154 NX-OD2258
		NIDNI		12 to 24 VDC		0.1 ms max./ 0.8 ms max.	NX-OD3121
Transistor Output Unit		NPN	0.5 A/point, 2 A/Unit			300 ns max./ 300 ns max.	NX-OD3153
	4		0.5 Apoint, 2 Aronit	24 VDC		0.5 ms max./ 1.0 ms max.	NX-OD3256
		PNP Switching Synchronous I/O re		300 ns max./ 300 ns max.	NX-OD3257		
Screwless			2 A/point, 8 A/Unit		Switching Synchronous I/O refreshing and Free- Run refreshing	0.5 ms max./ 1.0 ms max.	NX-OD3268
Clamping Terminal Block, 12 mm	8	NPN		12 to 24 VDC		0.1 ms max./ 0.8 ms max.	NX-OD4121
Vidth)		PNP	0.5 A/point, 4 A/Unit	24 VDC		0.5 ms max./ 1.0 ms max.	NX-OD4256
	16	NPN		12 to 24 VDC		0.1 ms max./ 0.8 ms max.	NX-OD5121
Fransistor Output		PNP		24 VDC		0.5 ms max./ 1.0 ms max.	NX-OD5256
Unit		NPN		12 to 24 VDC	Cuitabing Curabusanus I/O safraab	0.1 ms max./ 0.8 ms max.	NX-OD5121-1
M3 Screw Terminal Block, 30 mm Width)	16	PNP	0.5 A/point, 5 A/Unit	24 VDC	Switching Synchronous I/O refreshing and Free- Run refreshing	0.5 ms max./ 1.0 ms max.	NX-OD5256-1
Fransistor Output Jnit	16	NPN	0.5 A/point, 2 A/Unit	12 to 24 VDC		0.1 ms max./ 0.8 ms max.	NX-OD5121-5
	10	PNP	0.5 A/point, 2 A/onit	24 VDC		0.5 ms max./ 1.0 ms max.	NX-OD5256-5
	32	NPN	0.5 A/point, 2 A/	12 to 24 VDC	Switching Synchronous I/O refreshing and Free- Run refreshing	0.1 ms max./ 0.8 ms max.	NX-OD6121-5
(MIL Connector, 30 mm Width)		PNP	common, 4 A/Unit	24 VDC		0.5 ms max./ 1.0 ms max.	NX-OD6256-5
Fujitsu Connector,	32	NPN	0.5 A/point, 2 A/ common, 4 A/Unit	12 to 24 VDC	Switching Synchronous I/O refreshing and Free- Run refreshing	0.1 ms max./ 0.8 ms max.	NX-OD6121-6

				Specification	ns		
Product Name	Number of points	Internal I/O common	Maximum value of load current	Rated voltage	I/O refreshing method	ON/OFF response time	Model
Relay Output Unit	2	Relay type: N.O.	250 VAC/2 A (cos	), 250 VAC/	Free Bun refreehing	15 ms max./	NX-OC2633
	2	Relay type: N.O.+N.C.	2 A (cosφ=0.4), 24 VD	C/2 A, 4 A/Unit	Free-Run refreshing	15 ms max.	NX-OC2733
(Screwless Clamping Terminal Block, 12 mm Width/24 mm Width)	8	Relay type: N.O.	250 VAC/2 A (cosφ=1 2 A (cosφ=0.4), 24 VD		Free-Run refreshing	15 ms max./ 15 ms max.	NX-OC4633

<sup>\*1.</sup> To use input refreshing with input changed time, the EtherCAT Coupler Unit with unit version 1.1 or later and the Sysmac Studio version 1.07 or higher are required.

# **Digital Mixed I/O Units**

			Specific	ations		
Product Name	Number of points	Internal I/O common	Maximum value of load current	I/O refreshing method	ON/OFF response time	Model
DC Input/Transistor Output Unit	Outputs: 16 points	Outputs: NPN Inputs: For both NPN/PNP	Outputs: 12 to 24 VDC Inputs: 24 VDC	Switching Synchronous I/O refresh-	Outputs: 0.1 ms max./ 0.8 ms max. Inputs: 20 µs max./ 400 µs max.	NX-MD6121-5
(MIL Connector, 30 mm Width)	Inputs: 16 points			ing and Free-Run refreshing	Outputs: 0.5 ms max./ 1.0 ms max. Inputs: 20 μs max./ 400 μs max.	NX-MD6256-5
DC Input/Transistor Output Unit  (Fujitsu Connector, 30 mm Width)	Outputs: 16 points Inputs: 16 points	Outputs: NPN Inputs: For both NPN/PNP	Outputs: 12 to 24 VDC Inputs: 24 VDC	Switching Synchronous I/O refreshing and Free-Run refreshing	Outputs: 0.1 ms max./ 0.8 ms max. Inputs: 20 μs max./ 400 μs max.	NX-MD6121-6

# **High-speed Analog Input Units**

				Spec	cifications				
Product name	Number		Barrel War	Input	0		er input ction	I/O refreshing	Model
ро	of points	Input range	Resolution	method	thod Conversion time		Internal I/O common	method	
High-speed Analog Input Unit	4	-10 to 10 V -5 to 5 V 0 to 10 V 0 to 5 V	• Input range of -10 to 10 V or -5 to 5 V: 1/64,000 (full scale)	Differ- ential	5 μs per channel	4	NPN	Synchronous	NX-HAD401
	4	1 to 5 V 0 to 20 mA 4 to 20 mA	Other input range: 1/32,000 (full scale)	input	5 μs per channel	4	PNP	I/O refreshing	NX-HAD402

# **Analog Input Units**

					Sp	ecifications				
Product Name	Number of points	Input range	Resolution	Conversion value, decimal number (0 to 100%)	Over all accuracy (25°C)	Input method	Conversion time	Input impedance	I/O refreshing method	Model
			1/8000	-4000 to	±0.2%	Singleended input	250 μs/		Free-Run re-	NX-AD2603
			1/6000	4000	(full scale)	Differential Input	point		freshing	NX-AD2604
Voltage Input Unit	2	_	1/30000	-15000 to 15000	±0.1% (full scale)	Differential Input	10 μs/ point		Selectable Syn- chronous I/O re- freshing or Free- Run refreshing	NX-AD2608
/oltage Input Unit			1/0000	-4000 to	±0.2%	Singleended input	250 μs/		Free-Run re-	NX-AD3603
			1/8000	4000	(full scale)	Differential Input	point		freshing	NX-AD3604
	4	-10 to +10V	1/30000	-15000 to 15000	±0.1% (full scale)	Differential Input	10 μs/ point	1MΩ min.	Selectable Syn- chronous I/O re- freshing or Free- Run refreshing	NX-AD3608
			1/0000	-4000 to	±0.2%	Singleended input	250 μs/		Free-Run re-	NX-AD4603
			1/8000	4000	(full scale)	Differential Input	point		freshing	NX-AD4604
	8	8	1/30000	-15000 to 15000	±0.1% (full scale)	Differential Input	10 μs/ point		Selectable Syn- chronous I/O re- freshing or Free- Run refreshing	NX-AD4608
			1/0000	0.4- 0000	±0.2%	Singleended input	250 μs/		Free-Run re- freshing	NX-AD2203
			1/8000	0 to 8000	(full scale)	Differential Input	point			NX-AD2204
Current Input Unit	2		1/30000	0 to 30000	±0.1% (full scale)	Differential Input	10 μs/ point	250Ω	Selectable Syn- chronous I/O re- freshing or Free- Run refreshing	NX-AD2208
zurrent input onit			1/8000	0 to 8000	±0.2%	Singleended input	250 μs/	25002	Free-Run re-	NX-AD3203
			1/0000	0 10 0000	(full scale)	Differential Input	point		freshing	NX-AD3204
	4	4 to 20mA	1/30000	0 to 30000	±0.1% (full scale)	Differential Input	10 μs/ point		Selectable Syn- chronous I/O re- freshing or Free- Run refreshing	NX-AD3208
		1	1/8000	0 to 8000	±0.2%	Singleended input	250 μs/		Free-Run re-	NX-AD4203
			1/8000	0 10 8000	(full scale)	Differential Input	point		freshing	NX-AD4204
	8		1/30000	0 to 30000	±0.1% (full scale)	Differential Input	10 μs/ point	85Ω	Selectable Syn- chronous I/O re- freshing or Free- Run refreshing	NX-AD4208

# **Analog Output Units**

					Specifications			
Product Name	Number of points	Input range	Resolution	Output setting value, decimal number (0 to 100%)	Over all accuracy (25°C)	Conversion time	I/O refreshing method	Model
Voltage Output Unit			1/8000	-4000 to 4000	±0.3% (full scale)	250 μs/ point	Free-Run refreshing	NX-DA2603
	2 points	-10 to	1/30000	-15000 to 15000	±0.1% (full scale)	10 μs/ point	Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-DA2605
4 points	+10V	1/8000	-4000 to 4000	±0.3% (full scale)	250 μs/ point	Free-Run refreshing	NX-DA3603	
	4 points		1/30000	-15000 to 15000	±0.1% (full scale)	10 μs/ point	Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-DA3605
Current Output Unit			1/8000	0 to 8000	±0.3% (full scale)	250 μs/ point	Free-Run refreshing	NX-DA2203
	2 points	4 to	1/30000	0 to 30000	±0.1% (full scale)	10 μs/ point	Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-DA2205
4 point		20mA	1/8000	0 to 8000	±0.3% (full scale)	250 μs/ point	Free-Run refreshing	NX-DA3203
	4 points		1/30000	0 to 30000	±0.1% (full scale)	10 μs/ point	Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-DA3205

# **Temperature Control Units**

			Sp	ecifications					
Product name	Number of channels	Input type	Output	Number of output points	Number of CT input points	Control type	Conversion time	I/O refreshing method	Model
Temperature Control Unit 2-			Voltage output	2	2	Standard control			NX-TC2405
channel Type			(for driving SSR)	2	None	Standard control			NX-TC2406
	2		Voltage output (for driving SSR)	4	None	Heating/ cooling control			NX-TC2407
		Universal input (thermocouple,	Linear current output	2	None	Standard control	50 ms	Free-Run	NX-TC2408
Temperature Control Unit 4-		resistance thermometer)	Voltage output	4	4	Standard control	50 ms	refreshing	NX-TC3405
channel Type			(for driving SSR)	4	None	Standard control			NX-TC3406
	4		Voltage output (for driving SSR)	8	None	Heating/ cooling control			NX-TC3407
			Linear current output	4	None	Standard control			NX-TC3408

# **Temperature Input Units**

				Specifications				
Product Name	Number of points	Input type	Resolution (25°C)	Over all accuracy (25°C)	Conversion time	I/O refreshing method	Terminals	Model
Thermocouple	2		0.1°C max. *1		250 ms/Unit		16 Terminals	NX-TS2101
Input type	4		0.1 C max.		250 1115/01111		16 Terminals×2	NX-TS3101
	2	Thermoneounle	0.01°C may		10 ms/Unit		16 Terminals	NX-TS2102
4 2 4	4	Thermocouple	0.01°C max.				16 Terminals×2	NX-TS3102
	2		0.001°C max.		60 ms/Unit		16 Terminals	NX-TS2104
	4			For details, refer to	60 ms/Unit	Free-Run	16 Terminals×2	NX-TS3104
Resistance Thermometer Input	2		0.400	your local OMRON website	250 ms/Unit	refreshing	16 Terminals	NX-TS2201
уре	4		0.1°C max.				16 Terminals×2	NX-TS3201
	2	Resistance Ther- mometer	0.0400				16 Terminals	NX-TS2202
	4	(Pt100/Pt1000, three-wire) *2	0.01°C max.		10 ms/Unit		16 Terminals×2	NX-TS3202
	2	,	0.00400		00 (1 1		16 Terminals	NX-TS2204
	4		0.001°C max.		60 ms/Unit		16 Terminals×2	NX-TS3204

# **Heater Burnout Detection Units**

				Specifica	tions				
Product Name	CT input section			Control output section					
	Number of inputs	Maximum heater current	Number of outputs	Internal I/O common	Maximum load current	Rated voltage	I/O refreshing method	Model	
Heater Burnout Detection Unit		50.440	_	NPN	0.1 A/point, 0.4	12 to 24 VDC	For Dominion	NX-HB3101	
	4	50 AAC	4	PNP	A/Unit	24 VDC	Free-Run refreshing	NX-HB3201	

<sup>\*1.</sup> The resolution is 0.2°C max. when the input type is R, S, or W. \*2. The NX-TS2202 and NX-TS3202 only support Pt100 three-wire sensor.

# **Load Cell Input Unit**

Product Name	Specifications						
	Number of points	Conversion cycle	I/O refreshing method *1	Load cell excitation voltage	Input range	Model	
Load Cell Input Unit	1	125 µs	Free-Run refreshing     Synchronous I/O refreshing     Task period prioritized refreshing	5 VDC ± 10%	-5.0 to 5.0 mV/V	NX-RS1201	

<sup>\*1.</sup> Refer to the NX-series Load Cell Input Unit User's Manual (W565) for detailed information on I/O refresh cycle.

# **Position Interface: Incremental Encoder Input Units**

		Specifications						
Product Name	Number of channels External inputs		Maximum response frequency	I/O refreshing method	Number of I/O entry mappings	Model		
Incremental	1 (NPN)	3 (NPN)	500 kHz	lz		NX-EC0112		
Encoder Input Unit	1 (PNP)	3 (PNP)	500 KHZ		1/1	NX-EC0122		
		3 (NPN) 3 (PNP)	4 MHz	Free-Run refreshing,		NX-EC0132		
3	1		4 WITZ	Synchronous I/O refreshing		NX-EC0142		
	2 (NPN)	N.	500111		0/0	NX-EC0212		
	2 (PNP)	None	500 kHz		2/2	NX-EC0222		

# **Position Interface: SSI Input Units**

		Specifications						
Product Name	Number of channels	Input/Output form	Maximum data length	Encoder power supply	Type of external connections	Model		
SSI Input Unit	1	EIA standard RS-422-A	32 bits	24 VDC, 0.3 A/CH	Screwless push-in terminal block (12 terminals)	NX-ECS112		
	2	EIA standard RS-422-A	32 bits	24 VDC, 0.3 A/CH	Screwless push-in terminal block (12 terminals)	NX-ECS212		

# **Position Interface: Pulse Output Units**

				Specificatio	ns			
Product Name	Number of channels *1	External inputs	External outputs	Maximum pulse output speed	I/O refreshing method	Number of I/O entry mappings	Control output interface	Model
	1 (NPN)	2 (NPN)	1 (NPN)	500 lunus		4/4	Open collector	NX-PG0112
Pulse Output Unit	1 (PNP) 2 (PNP) 1 (PNP) 500 kpps		1/1	output	NX-PG0122			
and Surpar Sinit	2	5 inputs/CH (NPN)	3 outputs/CH (NPN)			2/2	Line driver out-	NX-PG0232-5
3		5 inputs/CH (PNP)	3 outputs/CH (PNP)	IP)	Synchronous I/O re- freshing, Task period prioritized refreshing *2			NX-PG0242-5
	4	5 inputs/CH (NPN)	3 outputs/CH (NPN)	4 Mpps		4/4		NX-PG0332-5
	4	5 inputs/CH (PNP)	3 outputs/CH (PNP)			4/4		NX-PG0342-5

### **Communications Interface Units**

Product Name	Serial interface	External connection terminal	Number of serial ports	Communications protocol	Model
Communications Interface Unit	RS-232C				NX-CIF101
	RS-422A/485	- Screwless Clamping Terminal Block	1 port	<ul><li>No-protocol</li><li>Signal lines</li></ul>	NX-CIF105
	RS-232C	D-Sub connector	2 ports		NX-CIF210

# **RFID Units**

Product name	Amplifier/Antenna	No. of unit numbers used	Model
RFID Unit (1Ch)	- V680 series	1	NX-V680C1
RFID Unit (2Ch)		2	NX-V680C2

# **IO-Link Master Unit**

Product Name	Specifications					
	Number of IO-Link ports	I/O refreshing method	I/O connection terminals	Model		
IO-Link Master Unit						
	4	Free-Run refreshing	Screwless clamping terminal block	NX-ILM400		

<sup>\*1.</sup> This is the number of pulse output channels.
\*2. Unit version 1.2 or later and an NX-ECC203 EtherCAT Coupler Unit are required.

# **System Units**

Product Name	Specifications	Model
Additional NX Unit Power Supply Unit	Power supply voltage: 24 VDC (20.4 to 28.8 VDC) NX Bus power supply capacity: 10 W max.	NX-PD1000
Additional I/O Power Supply Unit	Power supply voltage: 5 to 24 VDC (4.5 to 28.8 VDC) I/O power feed maximum current: 4 A	NX-PF0630
	Power supply voltage: 5 to 24 VDC (4.5 to 28.8 VDC) I/O power feed maximum current: 10 A	NX-PF0730
I/O Power Supply Connection Unit	Number of I/O power terminals: IOG: 16 terminals Current capacity of I/O power terminal: 4 A/terminal max.	NX-PC0010
	Number of I/O power terminals: IOV: 16 terminals Current capacity of I/O power terminal: 4 A/terminal max.	NX-PC0020
	Number of I/O power terminals: IOV: 8 terminals, IOG: 8 terminals  Current capacity of I/O power terminal: 4 A/terminal max	NX-PC0030
Shield Connection Unit	Number of shield terminals: 14 terminals (The lower two terminals are functional ground terminals.)	NX-TBX01

# **EtherCAT Coupler Units**

You can use the NX Units via the EtherCAT Coupler Unit that is connected to the built-in EtherCAT port on the CPU Unit.

Product Name	Communications cycle in DC Mode	Current consumption	Maximum I/O power supply current	Model
EtherCAT Coupler Unit *1	250 to 4000 μs *²	4.45.14	4 A	NX-ECC201
	250 to 4000 μs *2	1.45 W max.	10 A	NX-ECC202
	125 to 10000 μs *2	1.25 W max.		NX-ECC203

<sup>\*1.</sup> One End Cover NX-END01 is provided with the EtherCAT Coupler Unit.

# **Safety CPU Units**

		Specifications							
Appearance	Maximum number of safety I/O points	Program capacity	Number of safety I/O connections	I/O refreshing method	Unit version	Model			
m ( Jine)	1,024	2,048 KB	128	5 5 ( )	Ver. 1.3 or later	NX-SL5500			
	2,032	4,096 KB	254	Free-Run refreshing		NX-SL5700			
	256	512 KB	32		Ver. 1.0 or later	NX-SL3300			
	1,024	2,048 KB	128	Free-Run refreshing	vei. 1.0 01 later	NX-SL3500			

<sup>\*2.</sup> This depends on the specifications of the EtherCAT master. For example, the values are as follows when the EtherCAT Coupler Unit is connected to the built-in EtherCAT port on an NJ5-series CPU Unit: 500 μs, 1,000 μs, 2,000 μs, and 4,000 μs. Refer to the *NJ/NX-series CPU Unit Built-in EtherCAT Port User' Manual* (Cat. No. W505) for the specifications of the built-in EtherCAT ports on NJ/NX-series CPU Units. This also depends on the unit configuration.

# **Safety Input Units**

					Specifications				
Appearance	Number of safety input points	Number of test output points	Internal I/O common	Rated input voltage	OMRON special safety input devices	Number of safety slave connections	I/O refreshing method	Unit version	Model
	4 points	2 points	Sinking inputs (PNP)	24 VDC	Can be connected.	1	Free-Run refreshing	Ver.1.1	NX-SIH400
	8 points	2 points	Sinking inputs (PNP)	24 VDC	Cannot be connected.	1	Free-Run refreshing	Ver.1.0	NX-SID800

# **Safety Output Units**

			Specifications						
Appearance	Number of safety output points	Internal I/O common	Maximum load current	Rated voltage Number of safety slave connections		I/O refreshing method	Unit version	Model	
	2 points	Sourcing out- puts (PNP)	2.0 A/point, 4.0 A/Unit at 40°C, and 2.5 A/Unit at 55°C The maximum load current depends on the installation orientation and ambient temperature.	24 VDC	1	Free-Run refreshing	Ver.1.0	NX-SOH200	
	4 points	Sourcing outputs (PNP)	0.5 A/point and 2.0 A/Unit	24 VDC	1	Free-Run refreshing	Ver.1.0	NX-SOD400	

# **Unit Power Supply System**

Add one or more NX-PF Additional I/O Power Supply Units when I/O power is supplied from the NX bus to NX Units connected to the CPU Unit. Check the table below.

NX Units	Model	NX-PF Additional I/O Power Supply Unit required
	NX-ID3317	Yes
	NX-ID3343	Yes
	NX-ID3344	Yes
	NX-ID3417	Yes
	NX-ID3443	Yes
	NX-ID3444	Yes
	NX-ID4342	Yes
Digital Input Units	NX-ID4442	Yes
	NX-ID5342	Yes
	NX-ID5442	Yes
	NX-ID5142-1	No
	NX-ID5142-5	No
	NX-ID6142-5	No
	NX-ID6142-6	No
	NX-IA3117	No
	NX-OD2154	Yes
	NX-OD2258	Yes
	NX-OD3121	Yes
	NX-OD3153	Yes
	NX-OD3256	Yes
	NX-OD3257	Yes
	NX-OD3268	No
Digital output Units	NX-OD4121	Yes
	NX-OD4256	Yes
	NX-OD5121	Yes
	NX-OD5256	Yes
	NX-OD5121-1	No
	NX-OD5256-1	No
	NX-OD5121-5	No
	NX-OD5121-5	No
	NX-OD5250-5 NX-OD6121-5	No
	NX-OD6121-5 NX-OD6256-5	No
	NX-OD6256-5 NX-OD6121-6	No
	NX-OC2633	No
	NX-OC2733	No
	NX-OC4633	No
Digital Mixed I/O	NX-MD6121-5	No
Inits	NX-MD6256-5	No
	NX-MD6121-6	No
ligh-speed Analog	NX-HAD401	Yes
nput Units	NX-HAD402	Yes
	NX-AD2603	Yes
	NX-AD2604	No
	NX-AD2608	No
	NX-AD3603	Yes
	NX-AD3604	No
	NX-AD3608	No
	NX-AD4603	Yes
	NX-AD4604	No
analog Input Units	NX-AD4608	No
maioy mput omis	NX-AD2203	Yes
	NX-AD2204	No
	NX-AD2208	No
	NX-AD3203	Yes
	NX-AD3204	No
	NX-AD3208	No
	NX-AD4203	Yes
	NX-AD4204	No
	NX-AD4208	No

NX Units	Model	NX-PF Additional I/O Power Supply Unit required
	NX-DA2603	Yes
	NX-DA2605	Yes
	NX-DA3603	Yes
Analog Output Units	NX-DA3605	Yes
Arialog Output Offits	NX-DA2203	Yes
	NX-DA2205	Yes
	NX-DA3203	Yes
	NX-DA3205	Yes
	NX-TC2405	Yes
	NX-TC2406	Yes
	NX-TC2407	Yes
Temperature	NX-TC2408	Yes
Control Units	NX-TC3405	Yes
	NX-TC3406	Yes
	NX-TC3407	Yes
	NX-TC3408	Yes
	NX-TS2101	No
	NX-TS3101	No
	NX-TS2102	No
	NX-TS3102	No
	NX-TS2104	No
Temperature Input	NX-TS3104	No
Units	NX-TS2201	No
	NX-TS3201	No
	NX-TS2202	No
	NX-TS3202	No
	NX-TS2204	No
	NX-TS3204	No
Heater Burnout	NX-HB3101	Yes
Detection Units	NX-HB3201	Yes
Load Cell Input Unit	NX-RS1201	No
	NX-EC0112	Yes
	NX-EC0122	Yes
Position interface:	NX-EC0132	Yes
Incremental	NX-EC0142	Yes
Encoder Input Units	NX-EC0212	Yes
	NX-EC0222	Yes
Position interface:	NX-ECS112	Yes
SSI Input Units	NX-ECS212	Yes
	NX-PG0112	Yes
	NX-PG0122	Yes
Position interface:	NX-PG0232-5	No
Pulse Output Units	NX-PG0242-5	No
	NX-PG0332-5	No
	NX-PG0342-5	No
	NX-CIF101	No
Communications	NX-CIF101	No
Interface Units	NX-CIF105 NX-CIF210	No
	NX-V680C1	Yes
RFID Units	NX-V680C1	
O Link Moster II : 2		Yes
IO-Link Master Unit	NX-ILM400	Yes
Safety Input Units	NX-SIH400	Yes
, p	NX-SID800	Yes
Safety Output Units	NX-SOH200	Yes
	NX-SOD400	Yes

Note: Refer to the *NX-series NX102 CPU Unit Hardware User's Manual* (Cat. No. W593) for the NX Unit power supply system.

### **Automation Software Sysmac Studio**

Please purchase a DVD and required number of licenses the first time you purchase the Sysmac Studio. DVDs and licenses are available individually. Each model of licenses does not include any DVD.

Product Name	Specification	Number of licenses	Media	Model
	Industrial PC, EtherCAT Slave, and the HMI. Sysmac Studio runs on the following OS. *1 Windows 7 (32-bit/64-bit version)/ Windows 8 (32-bit/64-bit version)/ Windows 8.1 (32-bit/64-bit version)/ Windows 10 (32-bit/64-bit version)/	(Media only)	Sysmac Studio (32-bit) DVD	SYSMAC-SE200D
Sysmac Studio Standard Edition Ver.1.□□		(Media only)	Sysmac Studio (64-bit) DVD	SYSMAC-SE200D-64
	Windows 11 (64-bit version) The Sysmac Studio Standard Edition DVD includes Support Software to set up EtherNet/IP Units, DeviceNet slaves, Serial Communications Units, and Support Software for creating screens on HMIs (CXDesigner). For details, refer to your local OMRON website.	1 license *2		SYSMAC-SE201L

<sup>\*1.</sup> Model "SYSMAC-SE200D-64" runs on Windows 10 (64 bit) or higher.

### Collection of software functional components Sysmac Library

Please download the Sysmac Library from the following URL and add it to the Sysmac Studio. http://www.ia.omron.com/sysmac\_library/

### **Typical Models**

Product name Features		Model
MQTT Communications Library *1	The MQTT communication library is a collection of software functional objects for exchanging Pub / Sub type messages through the MQTT server (MQTT broker).	SYSMAC-XR020
High-speed Analog Inspection Library	The High-speed Analog Inspection Library records analog input values acquired by the High-speed Analog Input Units in chronological order.	SYSMAC-XR016

<sup>\*1.</sup> This Library is not available for NX102-□□20-DH (products equipped with time series data collection system).

### Recommended EtherCAT and EtherNet/IP Communications Cables

Use Straight STP (shielded twisted-pair) cable of category 5 or higher with double shielding (braiding and aluminum foil tape) for EtherCAT. For EtherNet/IP, required specification for the communications cables varies depending on the baud rate.

For 100BASE-TX/10BASE-T, use an STP (shielded twisted-pair) cable of Ethernet category 5 or higher.

In the table, materials indicated available for EtherNet/IP 100BASE-TX are available for both of 100BASE-TX and 10BASE-T.

<sup>\*2.</sup> Multi licenses are available for the Sysmac Studio (3, 10, 30, or 50 licenses).

# **Cables with Connectors (For EtherCAT only)**

ltem	Appearance	Recommended manufacturer	Cable length (m)	Model
			0.3	XS6W-6LSZH8SS30CM-Y
Cable with Connectors on Both Ends (RJ45/RJ45)			0.5	XS6W-6LSZH8SS50CM-Y
Standard RJ45 plugs *1		OMBON	1	XS6W-6LSZH8SS100CM-Y
Wire gauge and number of pairs: AWG26, 4-pair cable Cable sheath material: LSZH *2		OWINON	2	XS6W-6LSZH8SS200CM-Y
Cable color: Yellow *3			3	XS6W-6LSZH8SS300CM-Y
			5	XS6W-6LSZH8SS500CM-Y
			0.3	XS5W-T421-AMD-K
Cable with Connectors on Both Ends (RJ45/RJ45) Rugged RJ45 plugs *1 Wire gauge and number of pairs: AWG22, 2-pair cable Cable color: Light blue	-		0.5	XS5W-T421-BMD-K
	*0	OMRON	1	XS5W-T421-CMD-K
			2	XS5W-T421-DMD-K
			5	XS5W-T421-GMD-K
			10	XS5W-T421-JMD-K
			0.5	XS5W-T421-BM2-SS
Cable with Connectors on Both Ends (M12 Straight/M12 Straight)		OMRON	1	XS5W-T421-CM2-SS
Shield strengthening connector cable *4			2	XS5W-T421-DM2-SS
M12/Smartclick connectors			3	XS5W-T421-EM2-SS
Wire gauge and number of pairs: AWG22, 2-pair cable Cable color: Black			5	XS5W-T421-GM2-SS
			10	XS5W-T421-JM2-SS
			0.5	XS5W-T421-BMC-SS
Cable with Connectors on Both Ends (M12 Straight/RJ45) Shield strengthening connector cable *4 M12/Smartclick connector and			1	XS5W-T421-CMC-SS
	100	OMRON	2	XS5W-T421-DMC-SS
rugged RJ45 plug		OWINON	3	XS5W-T421-EMC-SS
Wire gauge and number of pairs: AWG22, 2-pair cable Cable color: Black			5	XS5W-T421-GMC-SS
			10	XS5W-T421-JMC-SS

<sup>\*1.</sup> Cables with standard RJ45 plugs are available in the following lengths: 0.2 m, 0.3 m, 0.5 m, 1 m, 1.5 m, 2 m, 3 m, 5 m, 7.5 m, 10 m, 15 m, 20 m. Cables with rugged RJ45 plugs are available in the following lengths: 0.3 m, 0.5 m, 1 m, 2 m, 3 m, 5 m, 10 m, 15 m. For details, refer to the Industrial Ethernet Connectors Catalog (Cat. No. G019).

<sup>\*2.</sup> The lineup features Low Smoke Zero Halogen cables for in-cabinet use and PUR cables for out-of-cabinet use. Although the LSZH cable is single shielded, its communications and noise characteristics meet the standards.

<sup>\*3.</sup> Cables colors are available in yellow, green, and blue.

<sup>\*4.</sup> For details, contact your OMRON representative.

# Cables / Connectors (For EtherCAT or EtherNet/IP (100BASE-TX))

# Wire Gauge and Number of Pairs: AWG24, 4-pair Cable

Item Appearance		Recommended manufacturer	Model
Cables		Hitachi Metals, Ltd.	NETSTAR-C5E SAB 0.5 × 4P CP *1
		Kuramo Electric Co.	KETH-SB *1
RJ45 Connectors		Panduit Corporation	MPS588-C *1

<sup>\*1.</sup> We recommend you to use above cable and connector together.

# Wire Gauge and Number of Pairs: AWG22, 2-pair Cable

Item	Appearance	Recommended manufacturer	Model
Cables		Kuramo Electric Co.	KETH-PSB-OMR *1
Cables		JMACS Japan Co., Ltd.	PNET/B *1
RJ45 Assembly Connector		OMRON	XS6G-T421-1 *1

<sup>\*1.</sup> We recommend you to use the above Cable and OMRON's RJ45 Assembly Connector together. **Note:** Connect both ends of cable shielded wires to the connector hoods.

# **Optional Products/Maintenance Products/DIN Track Accessories**

Product Name	Specification	Model
	SD memory card, 2 GB Memory Card is provided with the NX102-□□20.	HMC-SD292
Memory Cards	SDHC memory card, 4 GB	HMC-SD492
	SDHC memory card, 16 GB	HMC-SD1A2 *1
Battery	Refer to the Battery page for details.	CJ1W-BAT01
End Cover	Must be connected to the right end of the CPU Rack. One End Cover is provided with the CPU Unit	NX-END02
DIN Tracks	Length: 0.5 m, Height: 7.3 mm	PFP-50N
DIN Tracks	Length: 1 m, Height: 7.3 mm	PFP-100N
End Plate	There are 2 stoppers provided with CPU Units and I/O Interface Units as standard accessories to secure the Units on the DIN Track.	PFP-M
Unit/Terminal Block Coding Pins	For 10 Units (Terminal Block: 30 pins, Unit: 30 pins)	NX-AUX02
DIN Track Insulation Spacers	A Spacer to insulate the control panel from the DIN Track. To insulate the EtherCAT Slave Terminal from the control panel, use DIN Track Insulation Spacers.	NX-AUX01

<sup>\*1. 16</sup> GB memory card can be used for a CPU Unit with unit version 1.32 or later.

# Machine Automation Controller NX1

# **Electrical and Mechanical Specifications**

Ite	em	Specification
Model		NX102-□□□
Enclosure		Mounted in a panel
Dimensions (mm) *1		72 × 100 × 90 mm (W×H×D)
Weight *2		390 g max.
	Power supply voltage	24 VDC (20.4 to 28.8 VDC)
	Unit power consumption *3	5.80 W max.
Unit power supply	Inrush current *4	For cold start at room temperature: 10 A max./0.1 ms max. and 2.5 A max./150 ms max.
	Current capacity of power supply terminal *5	4 A max.
	Isolation method	No isolation: between the Unit power supply terminal and internal circuit
	NX Unit power supply capacity	10 W max.
Power supply to the NX Unit power supply	NX Unit power supply efficiency	80%
	Isolation method	No isolation: between the Unit power supply terminal and NX Unit power supply
I/O Power Supply to NX Units	S	Not provided *6
	Communication connector	RJ45 for EtherNet/IP Communications × 2 RJ45 for EtherCAT Communications × 1
External connection	Screwless clamping terminal block	For Unit power supply input and grounding (Removable)
terminal	Output terminal (service supply)	Not provided
	RUN output terminal	Not provided
	NX bus connector	32 NX Units can be connected

<sup>\*1.</sup> Includes the End Cover, and does not include projecting parts.
\*2. Includes the End Cover. The weight of the End Cover is 82 g.

<sup>\*3.</sup> Includes an SD Memory Card. The NX Unit power consumption to NX Units is not included.

<sup>\*4.</sup> The inrush current that occurs when the supplied power is changed to ON from a continuous OFF state. The inrush current may vary depending on the operating condition and other conditions. Therefore, select fuses, breakers, and external power supply devices that have enough margin in characteristic and capacity, considering the condition under which the devices are used. In particular, in case when you insert a switch to turn ON/OFF the DC power supplied from an external power supply, if the duration of an ON-

OFF-ON cycle is one second or less, the inrush control circuit may not function, which cause an inrush current of approximately 30 A/0.3 ms. \*5. The amount of current that can be passed constantly through the terminal. Do not exceed this current value when you use a through-wiring for the Unit power supply.

<sup>\*6.</sup> When the type of the I/O power supply to NX Units you use is the supply from NX bus, an Additional I/O Power Supply Unit is required. Refer to NX-series NX102 CPU Unit Hardware User's Manual (W593) for details.

# **General Specifications**

	Item	Specification		
Enclosure Grounding method		Mounted in a panel		
		Ground to less than 100 $\Omega$ .		
	Ambient operating temperature	0 to 55°C		
	Ambient operating humidity	10% to 95% (with no condensation)		
	Atmosphere	Must be free from corrosive gases.		
	Ambient storage temperature	-25 to 70°C (excluding battery)		
	Altitude	2,000 m max.		
Operating environment	Pollution degree	2 or less: Meets IEC 61010-2-201.		
operating environment	Noise immunity	2 kV on power supply line (Conforms to IEC 61000-4-4.)		
	Overvoltage category	Category II: Meets IEC 61010-2-201.		
	EMC immunity level	Zone B		
	Vibration resistance	Conforms to IEC 60068-2-6. 5 to 8.4 Hz with 3.5-mm amplitude, 8.4 to 150 Hz, acceleration of 9.8 m/s² 100 min each in X, Y, and Z directions (10 sweeps of 10 min each = 100 min total)		
	Shock resistance	Conforms to IEC 60068-2-27. 147 m/s², 3 times in X, Y, and Z directions		
Pottoni	Life	5 years (Power ON time rate 0% (power OFF))		
Battery	Model	CJ1W-BAT01 (sold separately)		
	EU Directives	EN 61131-2		
A P I. I I I I M	cULus	Listed UL 61010-2-201 and ANSI/ISA 12.12.01		
Applicable standards *1	Shipbuilding Standards	NK, LR		
	Other than the above.	RCM, KC, and EAC		

<sup>\*1.</sup> Refer to the OMRON website (http://www.ia.omron.com/) or consult your OMRON representative for the most recent applicable standards for each model.

# Machine Automation Controller $\,NX1\,$

# **Performance Specifications**

					NX	102-	
	Ite	m		12□□	1100	10□□	90□□
Drococina	Instruction	LD instruction		3.3 ns			
Processing time	execution times	Math instruction data)	s (for long real	70 ns or more			
		Size		5 MB			
	Program capacity *1	Quantity	Number of POU definitions	3,000			
		Quantity	Number of POU instances	9,000			
		Retain	Size	1.5 MB			
	Memory capacity	attribute	Number of variables	10,000			
	for variables *2	No Retain	Size	32 MB			
Programming		attribute	Number of variables	90,000			
	Data types	Number of data	types	1,000			
		CIO Area		0 to 6,144 words (CIO 0 to CIO 6,143	i) *3		
Memory for CJ- series Units (Can be specified with AT specifications		Work Area		0 to 512 words (W0 to W511) *3			
	be specified with	Holding Area		0 to 1,536 words (H0 to H1,535) *4			
	for variables.)	DM Area		0 to 32,768 words (D0 to D32,767) *4			
		EM Area		32,768 words × 25 banks (E0_0 to E18_32,767) *4 *5			
		Maximum numb axes	er of controlled	15 axes			4 axes
			Motion control axes	11 axes			
			Single-axis position control axes	4 axes			
	Number of	Maximum number of used real axes		12 axes	8 axes	6 axes	4 axes
	controlled axes *6	axes *6	Used motion control servo axes	8 axes	4 axes	2 axes	
				4 axes			
Motion control		Maximum numb	er of axes for linear is control	4 axes per axes gro	up		
		Number of axes interpolation ax		2 axes per axes group			
	Maximum number of	f axes groups		8 axes groups			
	Motion control perio	d		The same control perfor EtherCAT.	eriod as that is used fo	or the process data co	ommunications cy
		Number of cam	Maximum points per cam table	65,535 points			
	Cams	data points	Maximum points for all cam tables	262,140 points			
		Maximum numb	er of cam tables	160 tables			
	Position units			Pulse, mm, μm, nm,	degree, and inch		
	Override factors			0.00%, or 0.01% to 500.00%			

				NX <sup>-</sup>	102-		
	Item		12□□	11□□	10□□	90□□	
	Number of ports			2			
	Physical layer			10BASE-T/100BASE-TX			
	Frame length			1,514 bytes max.			
	Media access method		CSMA/CD				
	Modulation			Baseband			
	Topology			Star			
	Baud rate			100 Mbps (100BAS	SE-TX)		
	Transmission media	3		STP (shielded, twis	sted-pair) cable of Ethe	ernet category 5, 5e o	or higher
	Maximum transmiss switch and node	sion distance betw	veen Ethernet	100 m			
	Maximum number o	f cascade connec	tions	There are no restric	ctions if an Ethernet sv	vitch is used.	
		Maximum numb	er of connections	32 per port 64 total			
			Can be set for each 1 to 10,000 ms in 1				
	Permissible communications band		12,000 pps *8 *9 (inc	cluding heartbeat, CIP	Safety routing)		
	Maximum number of tag sets		32 per port 40 total *10				
		Lag types		Network variables CIO/WR/HR/DM			
CIP service: Tag data links (cyclic communications) Built-in	Number of tags per connection (i.e., per tag set)		8 (7 tags if Controller status is included in the tag set.)				
				256 per port 512 total			
EtherNet/IP port				19,200 bytes per port 38,400 bytes total			
		Maximum data size per connection		600 bytes			
		Maximum number of registrable tag sets		32 per port 40 total *10 (1 connection = 1 tag set)			
		Maximum tag se	et size	`	es are used if Controll	er status is included	in the tag set.)
		Multi-cast packet		Supported.		<u></u>	
			r of connections)	32 per port 64 total (clients plus server)			
	CIP message service: Explicit messages	UCMM (non-	Maximum number of clients that can communicate at one time	32 per port 64 total	32 per port		
		type)	Maximum number of servers that can communicate at one time	32 per port 64 total			
	CIP Safety routing	Maximum number of routable CIP Safety connections		16 total			
	oir Salety routing	Maximum routal length per conn		32 bytes			
	Number of TCP soc	kets		60			
	Secure Socket	Maximum numb Socket	er of Secure	60			
	Service	TLS Version		1.2			

# Machine Automation Controller NX1

				1			
	lte	em			NX1	02-	
	ILG	,,,,		12□□	11□□	10□□	90□□
		Support profile/	Model	Micro Embedded De PLCopen Informatio			
		Default Endpoint/Port		opc.tcp://192.168.25	50.1:4840/		
		Maximum number of sessions (Client)		5			
			Maximum number of Monitored Items per server				
		Sampling rate o (ms)	f Monitored Items		, 1000, 2000, 5,000, 1 s assumed that is set		
		Maximum numb per server	er of Subscriptions	100			
		Maximum number of variables that can be published		10,000			
		Maximum number of value attributes that can be published *16		10,000			
		Maximum number of structure definitions that can be published		100			
Built-in EtherNet/IP port	OPC UA Server	Restrictions on variables unable to be published		Structures that inc     Structures with fo     Unions     Arrays whose ind     Arrays with 2,048	or higher structure ar clude two-dimensiona ur or higher levels of a ex number suffix does	I and higher arrays nesting	
		SecurityPolicy/Mode		Select one of the fol None Sign - Basic128Rsa Sign - Basic256 Sign - Basic256Sha. SignAndEncrypt - Bi SignAndEncrypt - Bi SignAndEncrypt - Bi	15 256 asic128Rsa15 asic256		
			Authentication	X.509			
		Application Authentication	Maximum number of storable certifications	Trusted certification: Issuer certification: Rejected certification	32		
		User Authentication	Authentication	You can set the follo User name/passwor Anonymous			

	lia.		NX102-			
	Ite	m	12□□	1100	10□□	90□□
Communications standard			IEC 61158 Type12			
	EtherCAT master sp	ecifications	Class B (Feature Pa	ck Motion Control co	mpliant)	
	Physical layer		100BASE-TX			
	Modulation		Baseband			
	Baud rate		100 Mbps (100BASE-TX)			
	Duplex mode		Auto			
	Topology		Line, daisy chain, br	anching and ring *13		
Built-in	Transmission media		Twisted-pair cable o minum tape and bra		r (double-shielded s	traight cable with alu-
EtherCAT port	Maximum transmiss	ion distance between nodes	100 m			
	Maximum number of	f slaves	64			
	Range of node addre	esses that can be set	1 to 192			
	Maximum process d	ata size	Input: 5,736 bytes Output: 5,736 bytes	*14		
	Maximum process d	ata size per slave	Input: 1,434 bytes Output: 1,434 bytes			
	Communications cy	cle	1,000 to 32,000 μs (	in 250-μs increments	s)	
	Sync jitter		1 μs max.			
	Units on CPU Rack	Maximum number of NX Units that can be mounted to the CPU Unit	32			
Unit	Units on CPU Rack	Maximum I/O data size that can be allocated in the CPU Unit	Inputs: 8,192 bytes *15 Outputs: 8,192 bytes *15			
configuration	Maximum number of	f NX Units for entire controller	400			
	Dower ounnly	Model	A non-isolated power	er supply for DC input	is built into the CPL	J Unit.
	Power supply	Power OFF detection time	2 to 8 ms			
Internal clock	Accuracy		At ambient temperat	ture of $55^{\circ}$ C: -3.5 to 0 ture of 25°C: -1.5 to 1 ture of 0°C: -3 to 1 m	.5 min error per moi	
	Retention time of bu	ilt-in capacitor	At ambient temperat	ture of 40°C: 10 days		

- \*1. Execution objects and variable tables (including variable names)
- \*2. Memory used for CJ-series Units is included.
- \*3. The value can be set in 1-word increments. The value is included in the total size of variables without a Retain attribute.
- \*4. The value can be set in 1-word increments. The value is included in the total size of variables with a Retain attribute.
- \*5. It is not possible to use the maximum number of words simultaneously for all banks, because the memory capacity for variables with a Retain attribute is limited to 1.5 MB.
- \*6. For terminology, refer to the NJ/NX-series CPU Unit Motion Control User's Manual (Cat. No. W507).
- \*7. Data will be refreshed at the set interval, regardless of the number of nodes.
- \*8. "pps" means packets per second, i.e., the number of communications packets that can be sent or received in one second.
- \*9. The allowable bandwidth varies depending on the RPI of the connection in use, the primary task period, and the number of ports simultaneously used for EtherNet/IP communications.
- \*10. When tag sets that exceed the total of 40 are set, a Number of Tag Sets for Tag Data Links Exceeded (840E0000 hex) occurs.
- \*11.As the EtherNet/IP port implements the IGMP client, unnecessary multi-cast packets can be filtered by using an Ethernet switch that supports IGMP Snooping.
- \*12. The number of value attributes is defined by the following formula.
  - Number of value attributes = (Number of basic data type variables) + (Number of array-specified elements) + (Number of values in the structure)
- \*13.Ring topology is supported with the project version 1.40 or later of NX102-\\_\000000.
  - Slaves on a ring topology should support a ring topology. If Omron slaves, please see the user's manual of slaves.
- \*14.For project unit version earlier than 1.40, the data must be within four frames.
- \*15. You can check the I/O allocation status with the Sysmac Studio. Refer to the NJ/NX-series CPU Unit Software User's Manual (Cat. No. W501) for how to check the I/O allocation status. Also, refer to the relevant manuals for specific Units for the maximum I/O data size per NX Unit.

# Machine Automation Controller $\,NX1\,$

# **Function Specifications**

		Item		NX102
Tasks	Function			I/O refreshing and the user program are executed in units that are called tasks.  Tasks are used to specify execution conditions and execution priority.
		Periodically executed tasks	Maximum number of primary periodic tasks	1
		CACCUICU IUSKS	Maximum number of periodic tasks	2
		Conditionally	Maximum number of event tasks	32
		executed tasks	Execution condition	When Activate Event Task instruction is executed or when condition expression for variable is met
		Programs		POUs that are assigned to tasks
	POU (Program	Function blocks		POUs that are used to create objects with specific conditions
	Organization Unit)	T direction blocks	<u>'</u>	POUs that are used to create objects that determine unique outputs for the inputs
	•	Functions		such as for data processing
	Programming languages	Types		Ladder diagrams *1 and structured text (ST)
	Namespaces	External		A concept that is used to group identifiers for POU definitions
	Variables	External access of variables	Network variables	The function which allows access from the HMI, host computers, or other controller
		Basic data types	Boolean	BOOL
			Bit strings	BYTE, WORD, DWORD, LWORD
			Integers	INT, SINT, DINT, LINT, UINT, USINT, UDINT, ULINT
			Real numbers	REAL, LREAL
			Durations	TIME
			Dates	DATE
			Times of day	TIME_OF_DAY
			Date and time	DATE_AND_TIME
			Text strings	STRING
		Derivative data t	ypes	Structures, unions, enumerations
		Structures	Function	A derivative data type that groups together data with different variable types
Programming	Data types		Maximum number of members	2,048
			Nesting maximum levels	8
			Member data types	Basic data types, structures, unions, enumerations, array variables
			Specifying member offsets	You can use member offsets to place structure members at any memory locations
			Function	A derivative data type that enables access to the same data with different data type
		Unions	Maximum number of members	4
			Member data types	BOOL, BYTE, WORD, DWORD, LWORD
		Enumerations	Function	A derivative data type that uses text strings called enumerators to express variable values
			Function	An array is a group of elements with the same data type. You specify the number (subscript) of the element from the first element to specify the element
		Array	Maximum number of dimensions	3
	Data type attributes	specifications	Maximum number of elements	65,535
			Array specifications for FB instances	Supported
		Range specifica	tions	You can specify a range for a data type in advance. The data type can take only values that are in the specified range
	Libraries			User libraries
	Control modes			Position control, velocity control, torque control
Motion control	Axis types			Servo axes, virtual servo axes, encoder axes, virtual encoder axes, PTP axes
	Positions that o	an be managed		Command positions and actual positions

Single-axis position control  Single-axis position control  Single-axis velocity control  Synchronous positioning per control for the axis that is specified cant table operation in performed in the product gene ratio and sync position is performed between a master axis velocity control of the performed performed in the product gene ratio and sync position is performed between a master axis velocity control of the performed performed performed in the product of the performed perform					
Single-axis position onto			Item		
Motion control  Single-axes  Single-axes  Single-axes  Single-axes  Motion control  Motion control  Motion control  Auxiliary functions are installed and a control sender or an absolute formation and account of the control of the c					Positioning is performed for a target position that is specified with an absolute value  Positioning is performed for a specified travel distance from the command current
Single-axis velocity control Single-axis velocity control Single-axis torque-control Single-axis torque-control Single-axis torque-control Single-axis torque-control Single-axis torque-control Single-axis symmotive control Motion control  Motion control  Motion control  Motion control  Motion control  Motion control  Motion control  Motion control  Motion control  Motion control  Motion control  Motion control  Motion control  Axes groups  Motion control  Moti			position		Positioning is performed for a specified travel distance from the position where an
Single-axis torque control  Single-axis synchronized experiment in Position Control Mode Cycles synchronized and a validation of the torque of the motor is controlled to Velocity Control Mode Cycles synchronized and a validation of the torque of the motor is controlled to Velocity Control Mode Cycles synchronized and a control period in Velocity Control Mode Cycles synchronized Cycles synchronized Cycles synchronized Cycles synchronized Cycles synchronized Cycles and Synchronized C					A positioning command is output each control period in Position Control Mode
Velicity control			velocity		Velocity control is performed in Position Control Mode
Motion control  Notice control  A cam motion is continued.  Starting gear operation Starting gear operation Positioning gear operation Control  Single-axis synchronized control  Single-axis synchronized control  Single-axis synchronized control  Single-axis synchronized control  Single-axis manual  Positioning gear operation Combining axes  Single-axis manual  Powering the Servo The specified gear motion and sync position is performed between a master axis sand slave axis as the command position of two axes are added or subtracted and the result is on as the command position.  The Servo in the Servo Drive is turned ON to enable axis motion The Servo in the Servo Drive is turned ON to enable axis motion The Servo in the Servo Drive is turned ON to enable axis motion The Servo in the Servo Drive is turned ON to enable axis motion The Servo in the Servo Drive is turned ON to enable axis motion The Servo in the Servo Drive is turned ON to enable axis motion The Servo in the Servo Drive is turned ON to enable axis motion The Servo in the Servo Drive is turned ON to enable axis motion The Servo in the Servo Drive is turned ON to enable axis motion The Servo in the Servo Drive is turned ON to enable axis motion The Servo in the Servo Drive is turned ON to enable axis motion The Servo in the Servo Drive is turned ON to enable axis motion The Servo in the Servo Drive is turned ON to enable axis motion The Servo in the Servo Drive is turned ON to enable axis motion The Servo in t				Cyclic synchronous	,
Motion control  Motion control  Motion control  Auxiliary functions for specified and specified control is shifted specified from the specified generation and specific positions for positions for specific positions for specific positions for specific positions for pos				Torque control	The torque of the motor is controlled
Single-axis synchronized control  Single-axis synchronized control  Fostiloning gear operation  Ending gear operation  Ending gear operation  Synchronous positioning  Master axis phase shift  Combining axes  Single-axis manual operation  Jogging  An axis is opgoed at a specified darget velocity  An axis is opgoed at a specified darget velocity  Resetting axis errors  A was in your of the motor is operated and the result is on a single axis  Auxiliary functions for single-axis control  Auxiliary functions for single-axis control  Auxiliary functions for single-axis control  An axis is ingle-axis and silve axis in synchronized control is shifted  The command positions of two axes are added or subtracted and the result is on as the command position of the motor is operated. And the limit signals, home proximity signal, and home is an use of define home  Homing A motor is operated and the limit signals, home proximity signal, and home is an use of the define home  Homing with parameter are specified pear ratio and sync position is generous dividence in the command position of the motor is operated, and the limit signals, home proximity signal, and home signal are used to define home  Homing with parameter are specified pear ratio and sync position of the motor is operated and the result is on an axis is operated. And the limit signals, home proximity signal, and home signal are used to define home  Homing with parameter are specified, the motor is operated, and the limit signals, home proximity signal, and home signal are used to define home  Positioning is performed for an absolute target position of 0 to return to home signal are used to define home  The parameter are specified and the limit signals, home proximity signal, and home signal are used to define home  Positioning is performed for an axis can be changed  The target velocity of an axis can be changed  The command current position of an axis can be changed  The command current position or actual position of an axis to see with a symptomic process of two					A cam motion is performed using the specified cam table
Positioning gear potention  Single-axis synchronized control  Single-axis synchronized control  Single-axis synchronized control  Single-axis share axis and slave axis  Motion control  Single-axis manual operation  Single-axis manual operation  Single-axis control  Single-axis control  Single-axis control  An axis is jogged at a specified gear motion of the slave axis in synchronized control is shifted  The command positions of two axes are added or subtracted and the result is on as the command position of the slave axis motion  Jogging  An axis is jogged at a specified target velocity  Axes errors are cleared  Homing  An axis is jogged at a specified target velocity  Axes errors are cleared  Homing  An axis is jogged at a specified target velocity  Axes errors are cleared  Homing  An axis is docelerated and the limit signals, home proximity signal, and home signal are used to define home  High-speed homing  Stopping  An axis is docelerated to a stop  Immediately stopping  An axis is docelerated to a stop  Immediately stopping  An axis is docelerated to a stop  Immediately stopping  An axis is docelerated to a stop  Immediately stopping  An axis is stopped immediately  An axis is stopped immediately  An axis is stopped immediately  File command current position of an axis can be changed  Changing the current position of an axis can be changed  Changing the current position of an axis can be changed  The command position or actual current position of an axis can be changed  The command current position or actual position of an axis can be changed  Changing the current position or actual position of an axis can be changed in the command current position or actual position of an axis control in actual position or actual position of an axis control in actual current position of an axis control in actual current position of an axis to see with some position of two specified area covered by the attended value  Resetting the current position of the slave axis in synchronous control.  The formating the current positio				Ending cam operation	The cam motion for the axis that is specified with the input parameter is ended
Single-axis synchronized control  Resetting axis errors  Auxiliary functions for single-axis control  Auxiliary functions for single-axis control  Auxiliary functions for single-axis control  Changing the current position  Control  Auxiliary functions for single-axis control  Changing the current position or actual current position of an axis can be changed factors  Changing external latches  Control  Auxiliary functions for single-axis control  Changing the current position or actual current position of an axis can be changed faringe (zone)  Enabling external latches  Monitoring axis  Single-axis control  Auxiliary functions for single-axis control  Changing the current position of an axis can be changed  Changing the current position or actual current position of an axis can be changed in the command current position or actual position of an axis to see with switches and position or actual position of an axis to see with switches and position or actual position of an axis to see with switches and position or actual position of an axis to see with switches and position or actual position of an axis to see with switches and position or actual pos					A gear motion with the specified gear ratio is performed between a master axis and slave axis
Motion control  Auxiliary functions for single-axis control  Auxiliary functions for single-axis control  Enabling external latches  Commonitoring  Auxiliary functions for single-axis control  Enabling external latches  Commonitoring  Auxiliary functions for single-axis control  Enabling external latches  Commonitoring  Auxiliary functions for single-axis control  Enabling external latches  Commonitoring  Auxiliary functions for single-axis control  Enabling external latches  Commonitoring  Auxiliary functions for single-axis control  Enabling external latches  Auxiliary functions for single-axis control  Enabling external latches  Auxiliary functions for single-axis control  Enabling external latches  Commonitoring  Auxiliary functions for single-axis control  Enabling external latches  Commonitoring  Commonitoring  Auxiliary functions for single-axis control  Enabling external latches  Commonitoring  Commonitor the command position or actual current position of an axis to see with swithin a specified range (zone)  The current latch is disabled and representation and provided the command position of an axis to see with swithin a specified range (zone)  The current latch is disabled and representation and provided the fire command position or actual current position of an axis to see with swithin a specified range (zone)  The torque contrel function of the Servo Drive can be enabled or disabled and representation and commonitor the command current position of an axis to see with swithin a specified range (zone)  The torque contrel function of the Servo Drive can be enabled or disabled and representation and commonitor the command current position of an axis to see with swithin a specified range (zone)  The torque contrel function of the Servo Drive can be enabled or disabled and representation and commonitor the commonitor of the servo sexic unrentl					A gear motion with the specified gear ratio and sync position is performed between a master axis and slave axis
Motion control    Single axes   Single-axis manual operation   Single axes			•	Ending gear operation	The specified gear motion or positioning gear motion is ended
Single axes   Single axes   Powering the Servo   The Servo in the Servo Drive is turned ON to enable axis motion					Positioning is performed in sync with a specified master axis
Motion control  Motion control  Motion control  Motion control  Auxiliary functions for single-axis control  Auxiliary functions for single-axis control  Penaling external latches Control  Auxiliary functions for single-axis control  Enabling external latches Control  The current latch is disabled Control  The tronge (cone)  The current latch is disabled Control  The current latch is disabled Con					The phase of a master axis in synchronized control is shifted
Motion control  Notion control				Combining axes	The command positions of two axes are added or subtracted and the result is output as the command position
Motion control  Auxiliary functions for single-sax's control  Motion control  Auxiliary functions for single-sax's control  Chapling external latches  The command current position or actual current position of an axis can be changed  The current latch is disabled  The current latch				Powering the Servo	The Servo in the Servo Drive is turned ON to enable axis motion
Motion control  Auxiliary functions for single-axis control  Control  Auxiliary functions for single-axis control  The parameter proximity signal, and home signal are used to define home  High-speed homing  Setting override factors  Changing the current position or axis is decelerated to a stop Immediately  An axis is decelerated to a stop Immediately  Setting override factors  Changing the current position or axis can be changed  The target velocity of an axis can be changed  The command current position or actual current position of an axis can be changed  The position of an axis is recorded when a trigger occurs  The position of an axis is recorded when a trigger occurs  The current latch is disabled  The current		Single axes		Jogging	An axis is jogged at a specified target velocity
Motion control  Motion control  Motion control  Auxiliary functions for single-axis control  Enabling external latches  Disabling external latches  Zone monitoring  The current latch is disabled  You can monitor the command position or actual position of an axis to see white within a specified range (zone)  Enabling digital cam switches  Monitoring axis following error  Resetting the following error  The current adigital output ON and OFF according to the position of an axis of the specified range (zone)  Torque limit  The error between the command current position and actual current position in to 0  Torque limit  The torque control function of the Servo Drive can be enabled or disabled and torque limits can be set to control the output torque  This function compensates the position for the slave axis currently in synchror control.  Cam monitor  Outputs the specified offset position for the slave axis in synchronous control.  Cam monitor  Start velocity  You can set the initial velocity when axis motion starts  Absolute linear interpolation is performed to a specified relative position  Circular 2D  Circular interpolation is performed to the specified position				Resetting axis errors	
Motion control    Auxiliary functions for single-axis control function of single axis control function of the single function single function for single-axis control function of the single function single function for single-axis control function of the single-axis currently in synchron control.   Auxiliary function function for single-axis control function of the single-axis currently in synchron control.   Auxiliary function function for single-axis currently in synchron control.   Auxiliary function function for single-axis currently in synchron control.   Auxiliary function function for single-axis currently in synchron control.   Auxiliary function function for single-axis control function of the slave axis in synchronous control.   Auxiliary function function for single-axis control func				-	are used to define home
High-speed homing Stopping An axis is decelerated to a stop Immediately stopping An axis is stopped immediately Setting override factors Changing the current position or actual current position of an axis can be changed The target velocity of an axis can be changed Changing the current position.  Enabling external latches Disabling external latches Disabling external latches The position of an axis is recorded when a trigger occurs The current latch is disabled Zone monitoring Fabiling digital cam switches  Monitoring axis following error Resetting the office of the stave axis following error The error between the command current position and actual current positions or a positions of two specified axes exceeds a threshold value The error between the command current position and actual current position in to 0  Torque limit The torque control function of the Servo Drive can be enabled or disabled and torque limits can be set to control the output torque Slave Axis Position Compensation Current position Cam monitor Quiputs the specified offset position for the slave axis currently in synchror control.  Axes groups  Multi-axes coordinated Circular 2D Circular interpolation is performed to a specified elative position Circular 2D Circular interpolation is performed to a specified relative position Circular interpolation is performed to a specified relative position					
Auxiliary functions for single-axis control  Auxiliary function for axis is recorded when a trigger occurs  The position of an axis is recorded when a trigger occurs  The current latch is disabled  You can monitor the command position or actual position of an axis to see whis within a specified range (zone)  Finabling digital cam switches  Wou can monitor whether the difference between the command positions or a positions of two specified axes exceeds a threshold value  The error between the command current position and actual current position in to 0  Torque limit  The torque control function of the Servo Drive can be enabled or disabled and torque limits can be set to control the output forque  Slave Axis Position  Cam monitor  Cam monitor  Outputs the specified offset position for the slave axis currently in synchron control.  Start velocity  You can set the initial velocity when axis motion starts  Absolute linear interpolation is performed to a specified relative position  Circular interpolation is performed to a specified relative position  Circular interpolation is performed for two axes	Motion control			High-speed homing	Positioning is performed for an absolute target position of 0 to return to home
Auxiliary functions for single-axis control    Auxiliary functions for single-axis control   Can monitor				Stopping	An axis is decelerated to a stop
Auxiliary functions for single-axis control    Auxiliary functions for single-axis control				Immediately stopping	An axis is stopped immediately
Auxiliary functions for single-axis control    Pabling external latches   The current latch is disabled			Auxiliary	•	The target velocity of an axis can be changed
Auxiliary functions for single-axis control    Auxiliary functions for single-axis control					The command current position or actual current position of an axis can be changed to any position.
The current latch is disabled    The current latch is disabled				latches	The position of an axis is recorded when a trigger occurs
Zone monitoring  Enabling digital cam switches  Monitoring axis following error  Resetting the following error  Torque limit  Slave Axis Position Compensation  Cam monitor  Start velocity  Axes groups  Multi-axes coordinated  Multi-axes coordinated  Pou can monitor whether the difference between the command positions or a positions of two specified axes exceeds a threshold value  The error between the command current position and actual current position in to 0  The torque control function of the Servo Drive can be enabled or disabled and torque limits can be set to control the output torque  This function compensates the position of the slave axis currently in synchron control.  Cam monitor  Outputs the specified offset position for the slave axis in synchronous control.  Linear interpolation is performed to a specified absolute position  Circular 2D  Circular interpolation is performed to a specified relative position  Circular interpolation is performed for two axes			single-axis	•	The current latch is disabled
Monitoring axis following error  Resetting the following error  Torque limit  Slave Axis Position Compensation  Cam monitor  Start velocity  Multi-axes coordinated  Multi-axes coordinated  Monitoring axis following error  Torque limit  Monitoring axis following error  Torque limit  The error between the command current position and actual current position is performed for two axes.  You can monitor whether the difference between the command positions or a positions of two specified axes exceeds a threshold value  The error between the command current position and actual current position it to 0  The torque control function of the Servo Drive can be enabled or disabled and torque limits can be set to control the output torque  Slave Axis Position Compensation  Coutputs the specified offset position for the slave axis in synchronous control.  Start velocity  You can set the initial velocity when axis motion starts  Absolute linear interpolation is performed to a specified absolute position  Relative linear interpolation is performed to a specified relative position  Circular 2D  Circular interpolation is performed for two axes					You can monitor the command position or actual position of an axis to see when it is within a specified range (zone)
following error  Resetting the following error  Torque limit  Slave Axis Position Compensation  Cam monitor  Start velocity  Axes groups  Multi-axes coordinated  Multi-axes coordinated  The error between the command current position and actual current position it to 0  The torque control function of the Servo Drive can be enabled or disabled and torque limits can be set to control the output torque  This function compensates the position of the slave axis currently in synchror control.  Cam monitor  Outputs the specified offset position for the slave axis in synchronous control.  Linear interpolation is performed to a specified absolute position  Relative linear interpolation is performed to a specified relative position  Circular interpolation is performed for two axes				switches	You can turn a digital output ON and OFF according to the position of an axis
following error  Torque limit  Torque limit  Slave Axis Position Compensation  Cam monitor  Start velocity  Absolute linear interpolation  Relative linear interpolation  Axes groups  Multi-axes coordinated  Axes groups  The torque control function of the Servo Drive can be enabled or disabled and torque limits can be set to control the output torque  This function compensates the position of the slave axis currently in synchron control.  Outputs the specified offset position for the slave axis in synchronous control.  You can set the initial velocity when axis motion starts  Linear interpolation is performed to a specified absolute position  Circular interpolation is performed to a specified relative position  Circular interpolation is performed for two axes				following error	' '
torque limits can be set to control the output torque    Slave Axis Position Compensation   This function compensates the position of the slave axis currently in synchron control.					
Compensation control.  Cam monitor Outputs the specified offset position for the slave axis in synchronous control.  Start velocity You can set the initial velocity when axis motion starts  Absolute linear interpolation Linear interpolation is performed to a specified absolute position  Relative linear interpolation is performed to a specified relative position  Circular 2D Circular interpolation is performed for two axes				Torque limit	The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque
Start velocity You can set the initial velocity when axis motion starts  Absolute linear interpolation is performed to a specified absolute position  Relative linear interpolation is performed to a specified relative position  Linear interpolation is performed to a specified relative position  Circular 2D  Circular interpolation is performed for two axes					This function compensates the position of the slave axis currently in synchronized control.
Absolute linear interpolation   Linear interp				Cam monitor	Outputs the specified offset position for the slave axis in synchronous control.
Axes groups    Interpolation   Linear interpo					You can set the initial velocity when axis motion starts
Axes groups  Multi-axes coordinated  Circular 2D  Circular interpolation is performed to a specified relative position  Circular interpolation is performed for two axes				interpolation	Linear interpolation is performed to a specified absolute position
Circular interpolation is performed for two aves		Avec are:		interpolation	Linear interpolation is performed to a specified relative position
		Axes groups		interpolation	Circular interpolation is performed for two axes
Axes group cyclic synchronous absolute positioning  A positioning command is output each control period in Position Control Mode				synchronous	A positioning command is output each control period in Position Control Mode

		Item		NX102
		ilem	Resetting axes group	Axes group errors and axis errors are cleared
			errors	
			Enabling axes groups Disabling axes	Motion of an axes group is enabled  Motion of an axes group is disabled
		Auxiliary	groups Stopping axes groups	All axes in interpolated motion are decelerated to a stop
	Axes groups	functions for multi-axes	Immediately stopping axes groups	All axes in interpolated motion are stopped immediately
		coordinated control	Setting axes group override factors	The blended target velocity is changed during interpolated motion
			Reading axes group	The command current positions and actual current positions of an axes group can
			positions Changing the axes in	be read The Composition Axes parameter in the axes group parameters can be overwritten
			an axes group Setting cam table	temporarily  The end point index of the cam table that is specified in the input parameter is
		Cams	properties Saving cam tables	changed  The cam table that is specified with the input parameter is saved in non-volatile
	Common items	Guins	Generating cam	memory in the CPU Unit  The cam table is generated from the cam property and cam node that is specified
			tables	in input parameters
		Parameters	Writing MC settings Changing axis	Some of the axis parameters or axes group parameters are overwritten temporarily
			parameters	The axis parameters can be accessed or changed from the user program
		Count modes		You can select either Linear Mode (finite length) or Rotary Mode (infinite length).
		Acceleration/ deceleration control	Automatic acceleration/ deceleration control	You can set the display unit for each axis according to the machine  Jerk is set for the acceleration/deceleration curve for an axis motion or axes group motion
Motion control			Changing the acceleration and deceleration rates	You can change the acceleration or deceleration rate even during acceleration or deceleration
		In-position check		You can set an in-position range and in-position check time to confirm when positioning is completed
		Stop method		You can set the stop method to the immediate stop input signal or limit input signal
		Re-execution of motion control instructions		You can change the input variables for a motion control instruction during execution and execute the instruction again to change the target values during operation
	Auxiliary	Multi-execution of motion control instructions (Buffer Mode)		You can specify when to start execution and how to connect the velocities between operations when another motion control instruction is executed during operation
	functions	Continuous axes group motions (Transition Mode)		You can specify the Transition Mode for multi-execution of instructions for axes group operation
			Software limits	The movement range of an axis is monitored
			Following error	The error between the command current value and the actual current value is monitored for each axis
		Monitoring functions	Velocity, acceleration rate, deceleration rate, torque, interpolation velocity, interpolation rate, interpolation deceleration rate	You can set and monitor warning values for each axis and each axes group
		Absolute encod	er support	You can use an OMRON 1S-series Servomotor or G5-series Servomotor with an Absolute Encoder to eliminate the need to perform homing at startup
		Input signal logi	c inversion	You can inverse the logic of immediate stop input signal, positive limit input signal, negative limit input signal, or home proximity input signal
	External interfac	ce signals		The Servo Drive input signals listed below are used. Home signal, home proximity signal, positive limit signal, negative limit signal, immediate stop signal, interrupt input signal
Unit (I/O) management	EtherCAT slaves	Maximum number of slaves		64
		Communication	s protocol	TCP/IP, UDP/IP
Communications	Built-in EtherNet/IP	TCD/ID	CIDR	The function which performs IP address allocations without using a class (class A to C) of IP address
Sommunications	port	TCP/IP functions	IP Forwarding	The function which forwards IP packets between interfaces
		. Silverono	Packet Filter	The function which checks the IP packet to determine whether to receive and send it based on the source IP address and TCP port number

		Item		NX102
	_		Tag data links	Programless cyclic data exchange is performed with the devices on the EtherNet/IP network
		CIP communications service	Message communications	CIP commands are sent to or received from the devices on the EtherNet/IP network
			CIP Safety routing	Routing function for CIP Safety on the EtherNet/IP network. The endpoint of CIP Safety is NX-SL5□00 in the system
			Socket services	Data is sent to and received from any node on Ethernet using the UDP or TCP protocol. Socket communications instructions are used
	Built-in EtherNet/IP		Secure Socket service (Client)	Establishes a TLS session with the TCP protocol, and sends and receives arbitrary data to and from the server and any node on the Ethernet using instructions for secure socket communication
	port	TCP/IP	FTP client	Files are transferred via FTP from the CPU Unit to computers or controllers at other Ethernet nodes. FTP client communications instructions are used
		applications	FTP server	Files can be read from or written to the SD Memory Card in the CPU Unit from computers at other Ethernet nodes
			Automatic clock adjustment	Clock information is read from the NTP server at the specified time or at a specified interval after the power supply to the CPU Unit is turned ON. The internal clock time in the CPU Unit is updated with the read time
•			SNMP agent	Built-in EtherNet/IP port internal status information is provided to network management software that uses an SNMP manager
Communications		OPC UA	Server function	The function to respond to requests from clients on the OPC UA network
	EtherCAT port	Supported	Process data communications	A communications method to exchange control information in cyclic communications between the EtherCAT master and slaves. This communications method is defined by CoE
		services	SDO communications	A communications method to exchange control information in noncyclic event communications between EtherCAT master and slaves. This communications method is defined by CoE
		Network scanning		Information is read from connected slave devices and the slave configuration is automatically generated
		DC (Distributed Clock)		Time is synchronized by sharing the EtherCAT system time among all EtherCAT devices (including the master)
		Enable/disable settings for slaves		The slaves can be enabled or disabled as communications targets
		Disconnecting/connecting slaves		Temporarily disconnects a slave from the EtherCAT network for maintenance, such as for replacement of the slave, and then connects the slave again
		Supported application protocol	CoE	SDO messages of the CAN application can be sent to slaves via EtherCAT
	Communications instructions			CIP communications instructions, socket communications instructions, SDO message instructions, no-protocol communications instructions, FTP client instructions, Modbus RTU protocol instructions, Modbus TCP protocol instructions
		Function		Events are recorded in the logs
0			System event log	768 *2 [containing] • For CPU Unit: 512 • For NX Unit without MPU: 256
System management	Event logs	Maximum number of events	Access event log	576 [containing] • For CPU Unit: 512 • For NX Unit without MPU: 64
			User-defined event log	512
	Online editing	Single		Programs, function blocks, functions, and global variables can be changed online. More than one operators can change POUs individually via network
	Forced refreshi	ed refreshing		The user can force specific variables to TRUE or FALSE
		Maximum number of forced variables	Device variables for EtherCAT slaves	64
Debugging	MC Test Run			Motor operation and wiring can be checked from the Sysmac Studio
	Synchronizing			The project file in the Sysmac Studio and the data in the CPU Unit can be made the same when online
	Differential mon	itoring		You can monitor when a variable changes to TRUE or changes to FALSE
	Maximum number of monitored variables		er of monitored	8

		Item		NX102
		Tunas	Single triggered trace	When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically
		Types	Continuous trace	Data tracing is executed continuously and the trace data is collected by the Sysmac Studio
		Maximum number of simultaneous data traces		2
		Maximum number of records		10,000
	Data tracing	Sampling	Maximum number of sampled variables	48
		Timing of sampling		Sampling is performed for the specified task period, at the specified time, or when a sampling instruction is executed
		Triggered traces	5	Trigger conditions are set to record data before and after an event
			Trigger conditions	When BOOL variable changes to TRUE or FALSE     Comparison of non-BOOL variable with a constant. Comparison method:     Equals (=), Greater than (>), Greater than or equals (≥), Less than (<), Less than or equals (≤), Not equal (≠)
Debugging			Delay	You can set the percentage of sampling before and after the trigger condition is met
55 5	Safety data logging	Function		Records variables used in the safety program of the Safety CPU Unit in a chronological order
			Target Safety CPU Unit	NX-SL5□00 *3
			Target variable types	Exposed variables and device variables used in the safety program
			Maximum number of logged variables	100
		Targets	Data types	SAFEBOOL, SAFEBYTE, SAFEWORD, SAFEINT, SAFEDINT, BOOL, BYTE, WORD, INT, DINT
			Maximum logging time	480 s (Depends on logging interval)
			Logging interval	Select from minimum value which stores from primary periodic task cycle or adds constant number multiple (x1, x2, x3, x4) of primary periodic task cycle *4
		Maximum number of simultaneous executions		2
	Simulation	T		The operation of the CPU Unit is emulated in the Sysmac Studio
Reliability		Controller errors	Levels	Major faults, partial faults, minor faults, observation, information
functions	Self-diagnosis	User-defined errors		User-defined errors are registered in advance and then records are created by executing instructions
			Levels	8
		CPU Unit names and serial IDs		When going online to a CPU Unit from the Sysmac Studio, the CPU Unit name in the project is compared to the name of the CPU Unit being connected to
			User program transfer with no restoration information	You can prevent reading data in the CPU Unit from the Sysmac Studio
	Protecting software	Protection	CPU Unit write protection	You can prevent writing data to the CPU Unit from the Sysmac Studio or SD Memory Card
Security	assets and preventing operating		Overall project file protection	You can use passwords to protect .smc files from unauthorized opening on the Sysmac Studio
	mistakes		Data protection	You can use passwords to protect POUs on the Sysmac Studio
		Verification of o	peration authority	Online operations can be restricted by operation rights to prevent damage to equipment or injuries that may be caused by operating mistakes
			Number of groups	5
		Verification of u ID	ser program execution	The user program cannot be executed without entering a user program execution ID from the Sysmac Studio for the specific hardware (CPU Unit)
	Storage type	T		SD Memory Card, SDHC Memory Card
		Automatic trans	fer from SD Memory	When the power supply to the controller is turned ON, the data that is stored in the autoload directory of the SD Memory Card is transferred to the controller
SD Memory		Program transfe	er from SD Memory Card	With the specification of the system-defined variable, you can transfer a program that is stored in the SD Memory Card to the controller
Card functions	Application	SD Memory Car instructions	d operation	You can access SD Memory Cards from instructions in the user program
		File operations 1	from the Sysmac Studio	You can perform file operations for controller files in the SD Memory Card and read/ write standard document files on the computer
		SD Memory Cardetection	d life expiration	Notification of the expiration of the life of the SD Memory Card is provided in a system-defined variable and event log

	NV400					
	Item			NX102		
Backing up		Operating methods	CPU Unit front-panel DIP switch	You can perform backup, verification, and restoration operations by manipulating the front-panel DIP switch on the CPU Unit		
	SD Memory Card backups		Specification with system-defined variables	You can perform backup, verification, and restoration operations by manipulating system-defined variables		
			SD Memory Card Window in Sysmac Studio	Backup and verification operations are performed from the SD Memory Card Window of the Sysmac Studio		
			Special instruction	The special instruction is used to backup data		
			Disabling backups to SD Memory Cards	Backing up data to a SD Memory Card is prohibited		
	Safety Unit Res	tore from SD Men	nory Card	Restores the data of the Safety CPU Unit using the front-panel DIP switch on the Safety CPU Unit and SD Memory Card		
	Sysmac Studio	Controller backup	ps	The Sysmac Studio is used to backup, restore, or verify controller data		

<sup>\*1.</sup> Inline ST is supported. (Inline ST is ST that is written as an element in a ladder diagram.)

\*2. Up to 512 system logs for events in the CPU Unit and 256 system logs in the NX Unit can be recorded.

\*3. When connected to a CPU rack.

\*4. Minimum value fulfills all these conditions.

• Larger than 5 ms

• Constant number multiple of primary periodic task cycle

# **Function Specifications of the Database Connection CPU Units**

Besides functions of the NX102- $\square\square\square$ , functions supported by the NX102- $\square\square$ 20 are as follows.


Item			Description NV100 1000 NV100 1000 NV100 0000
Cunnerted no	\ut		NX102-1220 NX102-1120 NX102-1020 NX102-9020
Supported po		· Miawaad	Built-in EtherNet/IP port 2012/2014/2016/2017/2019
	SQL Server by		
	Oracle Databa	·	11g/12c/18c/19c 9.7/10.1/10.5/11.1
Supported DB versions		, UNIX and Windows by IBM nunity Edition by Oracle*3	
*1 *2			5.6/5.7/8.0
Firebird by Firebird Foundation 2			2.5
	PostgreSQL by PostgreSQL Global Development Group		9.4/9.5/9.6/10/11/12/13
Number of DB Connections (Number of databases that can be connected at the same time)			2*4 *5
	Supported operations		The following operations can be performed by executing DB Connection Instructions in the CPU I Inserting records (INSERT), Updating records (UPDATE), Retrieving records (SELECT), Deletin cords (DELETE), Execute Stored Procedure*6, and Execute Batch Insert*6
	Max. number of simultaneous	of instructions for execution	32
	Max. number operation	of columns in an INSERT	SQL Server: 1,024 Oracle: 1,000 DB2: 1,000 MySQL: 1,000 Firebird: 1,000 PostgreSQL: 1,000
	Max. number operation	of columns in an UPDATE	SQL Server: 1,024 Oracle: 1,000 DB2: 1,000 MySQL: 1,000 Firebird: 1,000 PostgreSQL: 1,000
	Max. number of columns in a SELECT operation  Max. number of records in the output of a SELECT operation		SQL Server: 1,024 Oracle: 1,000 DB2: 1,000 MySQL: 1,000 Firebird: 1,000 PostgreSQL: 1,000
Instruction			65,535 elements, 4 MB
	Stored procedure call *6	Supported databases	SQL Server     Oracle Database     MySQL Community Edition     PostgreSQL
		Argument (Sum of IN, OUT and INOUT)	Up to 256 variables* <sup>7</sup>
		Return value	One variable
		Result set	Supported
		Spool function	Not supported
	Batch insert execution *6	Supported databases	SQL Server     Oracle Database     MySQL Community Edition     PostgreSQL
		Supported data size	Less than 1,000 columns and upper limit (8 MB) of structure variable size or less*8
		Spool function	Not supported
	Max. number of DB Map Variables for which a mapping can be connected*9		SQL Server: 30*10 Oracle: 20*10 DB2: 20*10 MySQL: 20*10 Firebird: 15 PostgreSQL: 20*10
Run mode of the DB Connection Service			Operation Mode or Test Mode  Operation Mode: When each instruction is executed, the service actually accesses the DB  Test Mode: When each instruction is executed, the service ends the instruction normally with accessing the DB actually
Spool function			Used to store SQL statements when an error occurred and resend the statements when the concidence of the statement when the statement which is the statement when the
Spool capacity*11			192 KB
Operation Log function			The following three types of logs can be recorded:  • Execution Log: Log for tracing the executions of the DB Connection Service  • Debug Log: Detailed log for SQL statement executions of the DB Connection Service  • SQL Execution Failure Log: Log for execution failures of SQL statements in the DB
DB Connection	on Service Shut	down function	Used to shut down the DB Connection Service after automatically saving the operation log files the SD Memory Card
Encrypted Communica tion	Supported date	tabases	SQL Server     Oracle Database     MySQL Community Edition     PostgreSQL
uon			


- \*1. SQL Server 2014, Oracle Database 12c and PostgreSQL 9.4 are supported by the DB Connection Service Version 1.02 or higher.
  - SQL Server 2016, MySQL 5.7, DB2 11.1 and PostgreSQL 9.5/9.6 are supported by the DB Connection Service Version 1.03 or higher.
  - SQL Server 2017 is supported by the DB Connection Service Version 1.04 or higher.
  - Oracle Database 18c, MySQL Community Edition 8.0 and PostgreSQL 10 are supported by the DB Connection Service Version 2.00 or higher. You cannot use Oracle 10g with the DB Connection Service version 2.00 or higher.
  - SQL Server 2019, Oracle Database 19c and PostgreSQL 11/12/13 are supported by the DB Connection Service Version 2.01 or higher.
- \*2. Connection to the DB on the cloud is not supported.
- \*3. The supported storage engines of the DB are InnoDB and MyISAM.
- \*4. When two or more DB Connections are established, the operation cannot be guaranteed if you set different database types for the connections.
- **\*5.** For the DB Connection Service Version lower than 1.04, Number of DB Connection is 1. **\*6.** The function is available for the DB Connection Service Version 2.00 or higher.
- \*7. Depends on members of a structure.
- \*8. Constrained by the memory capacity for variables. See the specifications for the memory capacity for variables.
- \*9. Even if the number of DB Map Variables has not reached the upper limit, the maximum total number of members of structures used as data type of DB Map Variables is 10,000.
- \*10.For DB Connection Service Version lower than 1.04, Max. number of DB Map Variables for which a mapping can be connected is 15. \*11.Refer to the *NJ/NX-series Database Connection CPU Units User's Manual* (Cat. No. W527) for the information.


**Note:** The extended support for databases has ended for the following DB versions. Please consider replacing the current database with a new version.

Item	Discription
Microsoft Corporation: SQL Server	2008/2008R2
Oracle Corporation: Oracle Database	10g
Oracle Corporation: MySQL Community Edition	5.1/5.5
International Business Machines Corporation (IBM): DB2 for Linux, UNIX and Windows	9.5
Firebird Foundation Incorporated: Firebird	2.1
The PostgreSQL Global Development Group: PostgreSQL	9.2/9.3

# **Part Names and Functions**

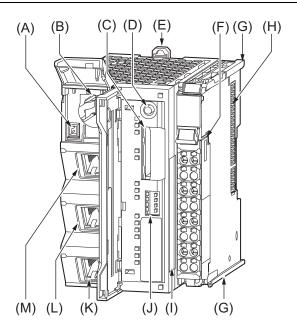

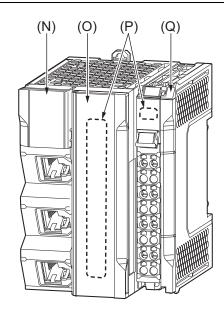


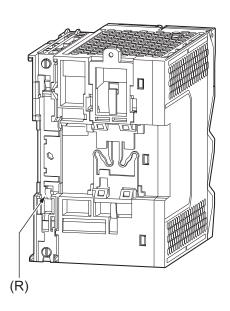

Letter	Name	Function	
Α	Battery connector	Connects a separately-sold backup battery to the CPU Unit.	
В	Battery slot	Allows a separately-sold backup battery to be mounted into the CPU Unit.	
С	SD Memory Card connector	Connects the SD Memory Card to the CPU Unit.	
D	SD Memory Card power supply switch	Turns OFF the power supply so that you can remove the SD Memory Card. NX-series NX102 CPU Unit Hardware User's Manual (W593)	
Е	DIN Track mounting hook	This hook is used to mount the NX Unit to a DIN Track.	
F	Terminal block	The terminal block is used for wiring for the Unit power supply and grounding cable.	
G	Unit hookup guides	These guides are used to mount an NX Unit or the End Cover.	
Н	NX bus connector	This connector is used to connect the NX Unit mounted on the right side.	
1	ID information indication	Shows the ID information of the CPU Unit.	
J	DIP switch	Used in Safe Mode*1 or when backing up data*2. Normally, turn OFF all of the pins.	
K	Built-in EtherCAT port (port 3)	Connects the built-in EtherCAT with an Ethernet cable.	
L	Built-in EtherNet/IP port (port 2)	Connects the built-in EtherNet/IP with an Ethernet cable.	
М	Built-in EtherNet/IP port (port 1)	Use port 1 to perform OPC UA communications.	
N	Battery cover	A cover for the battery slot. It opens upward.	
0	SD Memory Card	A cover for the SD Memory Card and the DIP switch. It opens toward the left.	
Р	Operation Status Indicators	Shows the operation status of the CPU Unit by multiple indicators.	

Letter	Name	Function
Q	End Cover	A cover to protect the NX Unit and CPU Unit. One End Cover is provided with the CPU Unit.
R	DIN Track contact plate	This plate is used to contact the functional ground terminal with a DIN Track.

\*1. To use Safe Mode, set the DIP switch as shown below and then turn ON the power supply to the Controller.

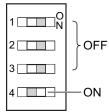


If the power supply to the Controller is turned ON with the CPU Unit in Safe Mode, the CPU Unit will start in PROGRAM mode. Use the Safe Mode if you do not want to execute the user program when the power supply is turned ON or if it is difficult to connect the Sysmac Studio. For information on Safe Mode, refer to the *NJ/NX-series Troubleshooting Manual* (Cat. No. W503).

\*2. Refer to the NJ/NX-series CPU Unit Software User's Manual (Cat. No. W501) for details on backing up data.

# **NX Unit Configuration**

# **CPU Rack**

The CPU Rack consists of an NX-series NX102 CPU Unit, NX Units, and an End Cover. Up to 32 NX Units can be connected.

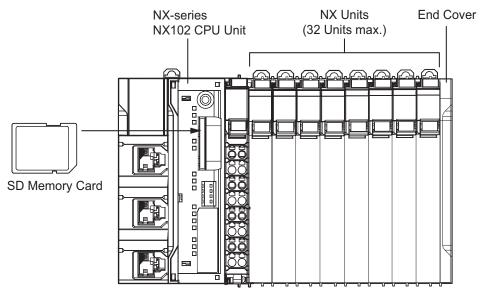

Series	Configuration		Remarks	
NX-series	NX-series NX1	02 CPU Unit	One required for every CPU Rack.	
	End Cover		Must be connected to the right end of the CPU Rack. One End Cover is provided with the CPU Unit.	
		Digital I/O Unit		
		Analog I/O Unit	Up to 32 Units can be mounted to each CPU Rack.	
	NX Units	System Unit	Refer to NX-series NX102 CPU Unit Hardware User's Manual (W593) for information	
		Position Interface Unit	<ul> <li>such as restrictions on the NX Units.</li> <li>For information on the most recent lineup of NX Units, refer to NX-series catalogs</li> <li>OMRON websites, or ask your OMRON representative.</li> </ul>	
		Communication Interface Unit		
		Load Cell Input Unit		
NJ/NX-series	SD Memory Card		Install as required.	

### Machine Automation Controller NX1

# **Battery**

The battery is not mounted when the product is shipped.

To turn OFF the power supply to the equipment for a certain period of time by using the clock data for programming, event logs, etc., you need a separately-sold battery to retain the clock data.

The following describes the purpose of the battery mounting, the battery model, and the battery-related error detection and clock data settings.

### **Purpose of the Battery Mounting**

The battery is used to retain the clock data while the power is not supplied to the CPU Unit. The clock data is retained by the built-in capacitor whether the battery is mounted or not, but the retention period depends on the continuous power-ON time of the CPU Unit, as shown below.

Continuous power-ON time of CPU Unit *1	Retention period during no power supply at an ambient temperature of 40°C	
100 hours	Approx. 10 days	
8 hour	Approx. 8 days	
1 hour	Approx. 7 days	

<sup>\*1.</sup> This is equivalent to the time to charge a built-in capacitor in which no electric charge is accumulated.

When you use the clock data for programming, use a battery if you cannot ensure the continuous power-ON time shown above or the power-OFF time is longer than the above power-ON time.

The following data (other than the clock data) is retained in the built-in non-volatile memory, so they are not lost even if the battery and built-in capacitor are fully discharged.

- User program
- Set values
- Variables retained during power interruption
- · Event logs

### **Battery Model**

The table below shows the model and specifications of the battery that can be used.

Model	Appearance	Specification	
CJ1W-BAT01		Service life: 5 years For the battery lifetime, refer to NX-series NX102 CPU Unit Hardware User's Manual (W593). The clock information is retained during power interruptions.	

# **Sysmac Studio**

### Connection

With an NX102 CPU Unit, you can connect the Sysmac Studio online in the following ways.


### Configuration

### Connection with EtherNet/IP

• 1: 1 Connection



- A direct connection is made from the Sysmac Studio. The IP address and connection device do not need to be specified. \*1
- You can make the connection whether or not an Ethernet switch is used.
- Support for Auto-MDI enables the use of cross cables or straight cables if a direct connection is made.
- 1: 1 connection is possible only for the built-in EtherNet/IP port 1.
- \*1. With the NX102 CPU Unit, this is possible only when you connect the Unit to the built-in EtherNet/IP port (port 1).

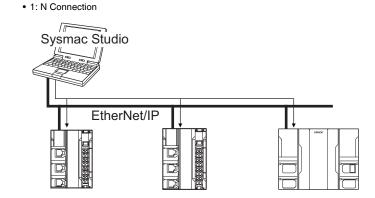

Directly specify the IP address of the remote device.

# **Version Information**

### **Unit Versions and Corresponding Sysmac Studio Versions**

Refer to NX-series NX102 CPU Unit Hardware User's Manual (W593).


# Unit Versions, DB Connection Service Versions and Sysmac Studio Versions (Database Connection CPU Units)

Refer to NJ/NX-series Database Connection CPU Units User's Manual (W527).

**Dimensions** (Unit: mm)

# **NX-Series NX102 CPU Unit**

# NX102-□□□□ 66

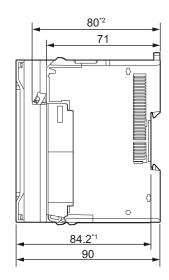


Unit: [mm]

- \*1. The dimension from the attachment surface of the DIN Track to the front surface of the CPU Unit.
  \*2. The dimension from the terminal block lock lever to the back surface of the CPU Unit.

For dimensions after attaching the communications cables, refer to NX-series NX102 CPU Unit Hardware User's Manual (W593).

# **End cover**

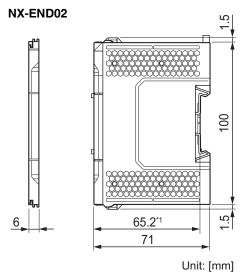

\*1. The dimension from the attachment surface of the DIN Track to the front surface of the end cover.

# **Related Manuals**

The following manuals are related. Use these manuals for reference.

Manual name	Cat. No.	Model numbers	Application	Description
NX-series NX102 CPU Unit Hardware User's Manual	W593	NX102-□□□□	Learning the basic specifications of the NX102 CPU Units, including introductory information, designing, installation, and maintenance.  Mainly hardware information is provided.	An introduction to the entire NX102 system is provided along with the following information on the CPU Unit.  • Features and system configuration  • Introduction  • Part names and functions  • General specifications  • Installation and wiring  • Maintenance and Inspection
NJ/NX-series CPU Unit Software User's Manual	W501	NX701-□□□ NX102-□□□□ NX1P2-□□□□ NJ501-□□□□ NJ301-□□□□ NJ101-□□□□	Learning how to program and set up an NJ/ NX-series CPU Unit. Mainly software information is provided.	The following information is provided on a Controller built with an NJ/NX-series CPU Unit.  • CPU Unit operation  • CPU Unit features  • Initial settings  • Programming based on IEC 61131-3 language specifications
NJ/NX-series Instructions Reference Manual	W502	NX701-□□□□ NX102-□□□□ NX1P2-□□□□ NJ501-□□□□ NJ301-□□□□ NJ101-□□□□	Learning detailed specifications on the basic instructions of an NJ/NX-series CPU Unit.	The instructions in the instruction set (IEC 61131-3 specifications) are described.
NJ/NX-series CPU Unit Motion Control User's Manual	W507	NX701-□□□□ NX102-□□□□ NX1P2-□□□□ NJ501-□□□□ NJ301-□□□□ NJ101-□□□□	Learning about motion control settings and programming concepts.	The settings and operation of the CPU Unit and programming concepts for motion control are described.
NJ/NX-series Motion Control Instruc- tions Reference Manual	W508	NX701-□□□□ NX102-□□□□ NX1P2-□□□□ NJ501-□□□□ NJ301-□□□□ NJ101-□□□□	Learning about the specifications of the motion control instructions.	The motion control instructions are described.
NJ/NX-series CPU Unit Built-in EtherCAT® Port User's Manual	W505	NX701-□□□□ NX102-□□□□ NX1P2-□□□□ NJ501-□□□□ NJ301-□□□□ NJ101-□□□□	Using the built-in EtherCAT port on an NJ/ NX-series CPU Unit.	Information on the built-in EtherCAT port is provided. This manual provides an introduction and provides information on the configuration, features, and setup.
NJ/NX-series CPU Unit Built-in EtherNet/IP™ Port User's Manual	W506	NX701-□□□□ NX102-□□□□ NX1P2-□□□□ NJ501-□□□□ NJ301-□□□□ NJ101-□□□□	Using the built-in EtherNet/IP port on an NJ/ NX-series CPU Unit.	Information on the built-in EtherNet/IP port is provided. Information is provided on the basic setup, tag data links, and other features.
NJ/NX-series CPU Unit OPC UA User's Manual	W588	NX102-□□□□ NX701-1□□□ NJ501-1□00	Using the OPC UA.	Describes the OPC UA.
NX-series CPU Unit FINS Function User's Manual	W596	NX701-□□20 NX102-□□□□	Using the FINS function of an NX-series CPU Unit.	Describes the FINS function of an NX-series CPU Unit.
NJ/NX-series Database Connection CPU Units User's Manual	W527	NX701-□□20 NX102-□□20 NJ501-□□20 NJ101-□□20	Using the database connection service with NJ/NX-series Controllers.	Describes the database connection service.

# Machine Automation Controller NX1

Manual name	Cat. No.	Model numbers	Application	Description
NJ/NX-series Troubleshooting Manual	W503	NX701	Learning about the errors that may be detected in an NJ/NX-series Controller.	Concepts on managing errors that may be detected in an NJ/NX-series Controller and information on individual errors are described.
Sysmac Studio Version 1 Operation Manual	W504	SYSMAC-SE2□□□	Learning about the operating procedures and functions of the Sysmac Studio.	Describes the operating procedures of the Sysmac Studio.
NX-series EtherCAT® Coupler Unit User's Manual	W519	NX-ECC	Learning how to use the NX-series Ether-CAT Coupler Unit and EtherCAT Slave Terminals.	The following items are described: the overall system and configuration methods of an Ether-CAT Slave Terminal (which consists of an NX-series EtherCAT Coupler Unit and NX Units), and information on hardware, setup, and functions to set up, control, and monitor NX Units through EtherCAT.
NX-series Data Reference Manual	W525	NX-00000	Referencing lists of the data that is required to configure systems with NX-series Units.	Lists of the power consumptions, weights, and other NX Unit data that is required to configure systems with NX-series Units are provided.
	W521	NX-ID□□□□ NX-IA□□□□ NX-OC□□□□ NX-OD□□□□ NX-MD□□□□	Learning how to use NX Units.	Describes the hardware, setup methods, and functions of the NX Units. Manuals are available for the following Units. Digital I/O Units, Analog I/O Units, System Units, Position Interface Units, Communications Interface Units, Load Cell Input Unit, and IO-Link Master Units.
	W522	NX-AD		
NX-series	W566	NX-TS□□□□ NX-HB□□□□		
NX Units User's Manual	W523	NX-PD1 □ □ □ □ NX-PF0 □ □ □ □ □ □ □ □ □ □ □ □ □ □ NX-TBX01		
	W524	NX-ECS		
	W540	NX-CIF□□□		
	W565	NX-RS□□□□		
	W567	NX-ILM 🗆 🗆		
NX-series Safety Control Unit User's Manual	Z930	NX-SL	Learning how to use NX-series Safety Control Units.	Describes the hardware, setup methods, and functions of the NX-series Safety Control Units.
NA-series Programma- ble Terminal Software User's Manual	V118	NA5-□W□□□□	Learning about NA-series PT pages and object functions.	Describes the pages and object functions of the NA-series Programmable Terminals.
NS-series Programma- ble Terminals Programming Manual	V073	NS15-00000 NS12-00000 NS10-00000 NS8-00000 NS5-00000	Learning how to use the NS-series Programmable Terminals.	Describes the setup methods, functions, etc. of the NS-series Programmable Terminals.

# **Applicable Models for Cable Redundancy Function**

For more information on applicable models of Cable Redundancy function, refer to the Applicable Models of Cable Redundancy Function (Cat. No. R200).

Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products.

Microsoft, Windows, Windows Vista, and SQL Server are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Oracle, Oracle Database and MySQL are trademarks or registered trademarks of Oracle Corporation and/or its affiliates in the United States and other countries.

IBM and DB2 are trademarks or registered trademarks of International Business Machines Corp., registered in the United States and other countries.

 $\label{thm:catter} \textbf{EtherCAT}^{\texttt{0}} \ \text{is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.}$ 

 $\label{eq:continuity} \mbox{EtherNet/IP}^{TM}, \mbox{CIP Safety}^{TM}, \mbox{and DeviceNet}^{TM} \mbox{ are trademarks of ODVA.} \\ \mbox{OPC UA is a trademark of OPC Foundation.}$ 

This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (http://www.openssl.org/)

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com).

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

The product photographs and figures that are used in this catalog may vary somewhat from the actual products.

# **Terms and Conditions Agreement**

# Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

### Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

# Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

# Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

### **Programmable Products.**

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

### Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

### Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

### **Errors and Omissions.**

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

Note: Do not use this document to operate the Unit.

**OMRON Corporation Industrial Automation Company** 

Kyoto, JAPAN

Contact: www.ia.omron.com

Regional Headquarters
OMRON EUROPE B.V.
Wegalaan 67-69, 2132 JD Hoofddorp
The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD. 438B Alexandra Road, #08-01/02 Alexandra Technopark, Singapore 119968 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON ELECTRONICS LLC 2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD.
Room 2211, Bank of China Tower,
200 Yin Cheng Zhong Road,
PuDong New Area, Shanghai, 200120, China
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

**Authorized Distributor:** 

© OMRON Corporation 2018-2022 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice.

CSM\_4\_3

Cat. No. P130-E1-17 0322 (0418)